


PRECAUTION

1. PRECAUTION FOR DISCONNECTING CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable from the negative (-) battery terminal, initialize the following systems after the cable is reconnected:

System Name	See Procedure
Advanced Parking Guidance System	

2. POWER WINDOW CONTROL SYSTEM PRECAUTIONS

CAUTION:

- The power window control system prohibits the auto up and down function when the jam protection function malfunctions. Therefore, troubleshoot the power window control system after confirming that no trouble codes are output.
- When a power window regulator or a power window regulator motor assembly is replaced, the power window control system must be initialized.
- After a door glass or a door glass run has been replaced, the jam protection function may operate unexpectedly when the auto up function is used. In such cases, the auto up function can be reinitialized by repeating the following operation at least 5 times:
 - a. Close the power window by fully pulling up the multiplex network master switch assembly or power window regulator switch assembly and holding it at the auto up position.
 - b. Open the power window by fully pushing down the multiplex network master switch assembly or power window regulator switch assembly.
- The jam protection function may operate unexpectedly even when the power window control system is normal due to detection of a value different from the operation learned value when the door glass moving speed changes sharply under any of the following conditions:
 - a. A power window is being opened or closed while the vehicle is driven on a rough road.
 - b. A power window is being opened or closed while the door is being opened or closed.
 - c. The voltage changes abruptly.

NOTICE:

Do not disconnect the battery while the power switch is on (IG). Otherwise, DTC B2311 will be output.