




3-4. Using the hands-free system Using the Bluetooth® phone

► Telephone screen

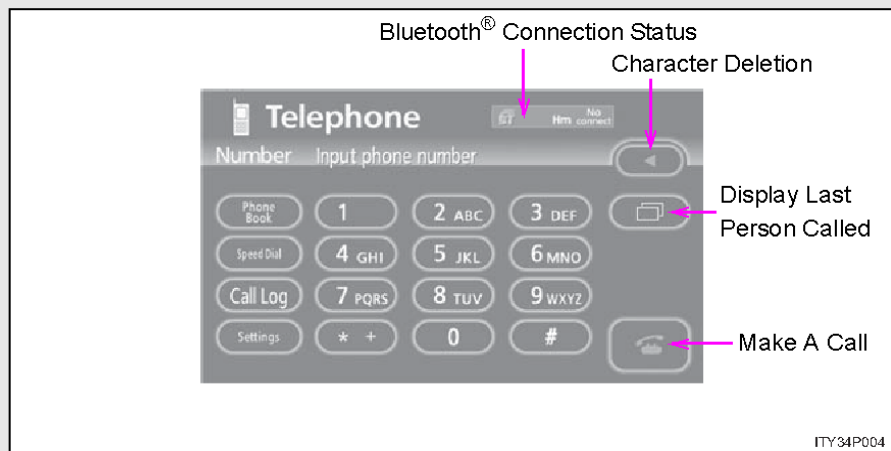


 
To display the screen shown above, press , then touch  on the "Information" screen.

Registering a Bluetooth® phone


You can register up to 6 phones in the system.

STEP 1 Press .


STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.


3-4. Using the hands-free system

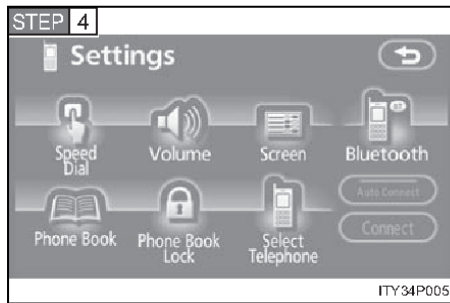

Touch .

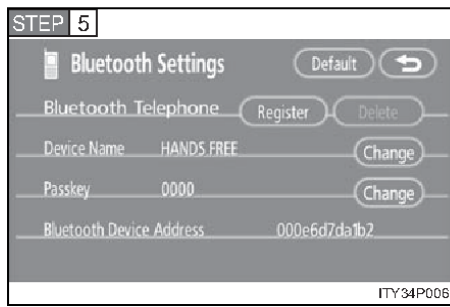

Touch .

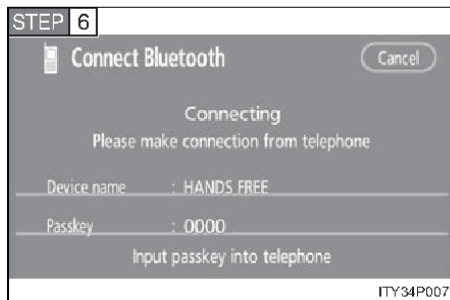

Input the passkey displayed on screen into your phone.


If the message "Bluetooth* connection successful" is displayed, registration is complete.

 
If the message "Bluetooth* connection failed. Please check the "Passkey" and the settings of the telephone" is displayed, start again from the beginning.

Bluetooth® phone connection


There are two connection methods available—automatic and manual.

STEP 1 Press .

STEP 2 Touch  on the “Information” screen.

STEP 3 Touch  on the “Telephone” screen.

STEP 4 Choose one of the following methods.

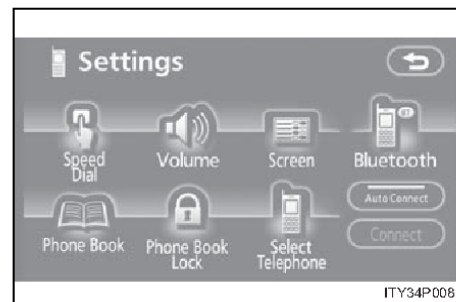

1 Automatic connection

If the “POWER” switch is in the ACCESSORY or ON mode, the system will automatically connect to the Bluetooth* phone. Touching automatic connection will turn it ON/OFF.

2 Manual connection

If automatic connection fails or is turned OFF, connection must be made manually.

If the message “Bluetooth* connection successful” is displayed, connection is complete.

*:Bluetooth is a registered trademark of Bluetooth SIG. Inc.

3

Interior features

11 Reconnecting to the Bluetooth® phone

If the system cannot connect due to poor signal strength with the “POWER” switch in the ACCESSORY or ON mode, the system will automatically attempt to reconnect.

If the phone is turned off, the system will not attempt to reconnect. In this case, connection must be made manually, or the phone must be re-selected.


3-4. Using the hands-free system


Making a call

Once the Bluetooth® phone is registered, you can make a call using the following procedure.


Dialing


STEP 1 Press  .

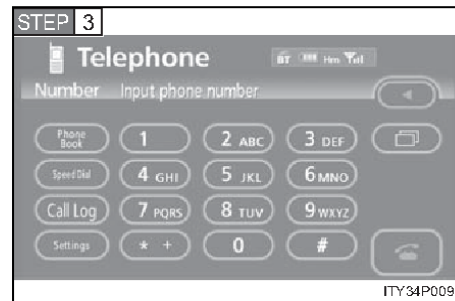

STEP 2 Touch  on the “Information” screen.



Inputting the phone number.

To delete the input phone number, touch  .


To dial the last input phone number, touch  .


STEP 4 Touch  or press the  on the steering wheel.


■ Dialing from the phone book

You can dial a number from the phone book data imported from your mobile phone. Up to 1000 entries may be stored in the phone book. (→P. 301)


STEP 1 Press .



STEP 2 Touch  on the “Information” screen.

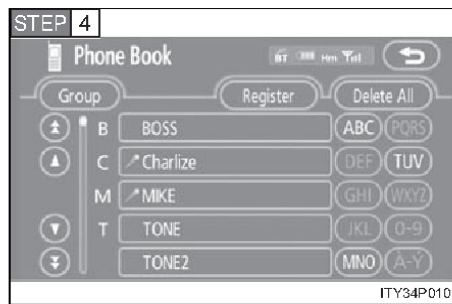STEP 3 Touch  on the “Telephone” screen.

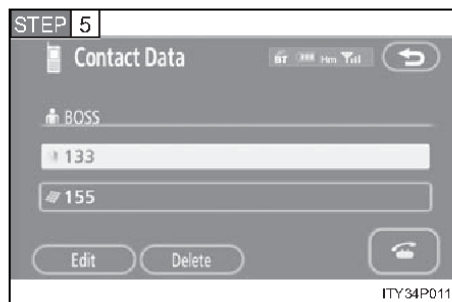

Choose the data to call from the list.



Choose the number and then touch  or press the  on the steering wheel.


3-4. Using the hands-free system


nDialing from history


You can make a call from past dialed numbers or received calls.

Up to 5 numbers are stored, with the last recent number being deleted to make room for a new number.


STEP 1 Press  .


STEP 2 Touch  on the “Information” screen.

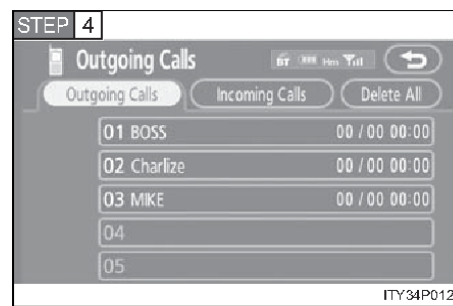

STEP 3 Touch  on the “Telephone” screen.



Choose the number to call from the list.

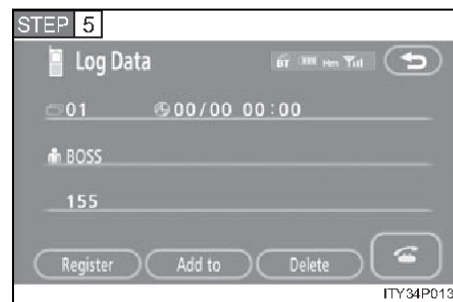To choose a number from the incoming calls history, touch  and choose a number to call.





Touch  or press the  on the steering wheel.


Calling using speed dial

You can make a call using numbers registered from the phone book and call history. (→P. 292)

STEP 1 Press  .

STEP 2 Touch  on the "Information" screen.

STEP 3 Touch  on the "Telephone" screen.

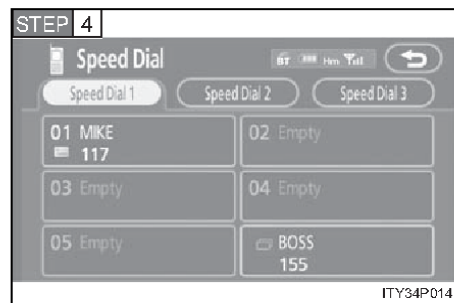

Choose the desired number to make a call.

To change the page, touch  or  .


3

Interior features

3-4. Using the hands-free system


Calling using voice recognition

Using voice recognition, you can call by name from the “Phone Book” screen, call by number from the “Telephone” screen, and send tones from the “Call” screen. (→P. 288)

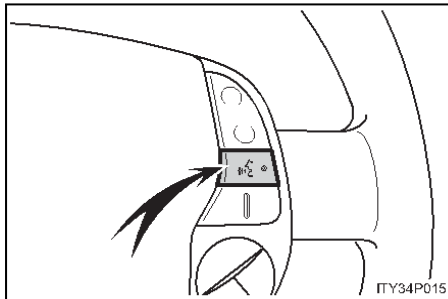

Talk switch

Calling by name from the “Phone Book” screen

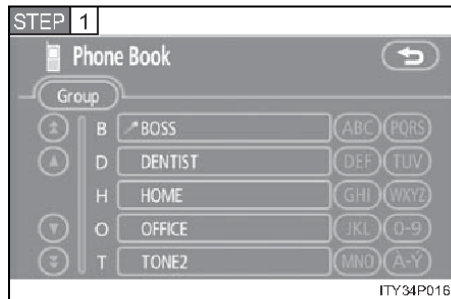

Press the talk switch.

STEP 2 Following the system guidance, wait until the beep and then say the desired name.


If there are multiple entries for the same name, “Next” will be displayed.

To select the next candidate, touch **Next** or say “Next candidate”.

STEP 3 Following the system guidance, press the talk switch.

STEP 4 Following the system guidance, wait until the beep and then say “Dial”.

1 Calling by number from the “Telephone” screen

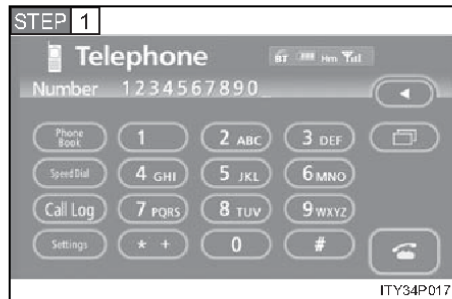


Press the talk switch.

STEP 2 Following the system guidance, wait until the beep and then say the desired number.

STEP 3 Following the system guidance, press the talk switch.

STEP 4 Following the system guidance, wait until the beep and then say “Dial”.

1 Sending tones from the “Call” screen

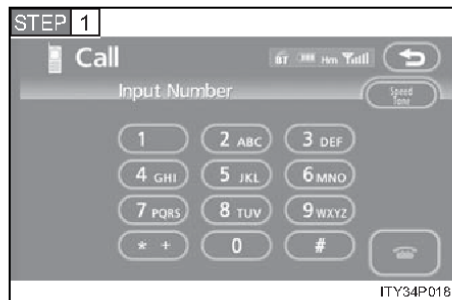

Press the talk switch.

STEP 2 Following the system guidance, wait until the beep and then say the desired number.


STEP 3 Following the system guidance, press the talk switch.

STEP 4 Following the system guidance, wait until the beep and then say “Yes”.


1 Calling using POI

You can make a call using a Point Of Interest. (→“Navigation System Owner’s Manual”)

n Made/Received call history list

- 1 If you make a call to or receive a call from a number registered in the phone book, the name is displayed in the call history.
- 1 If you make multiple calls to the same number, only the last call made is displayed in the made calls history.
- 1  is displayed to the left of phone number for unanswered calls.
- 1 Calls where the number is unavailable, such as public telephones, are not stored in the call history.


n When driving



- 1 The functions “Dialing”, “Dialing from the phone book”, and “Dialing from history” are unavailable.
- 1 If you press the  on the steering wheel, the “Speed Dial” screen is displayed. At this time phone numbers will not be displayed. Choose from the names displayed to make a call.

n International calls

You may not be able to make international calls, depending on the mobile phone in use.

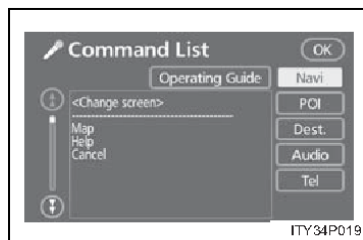
n To display the voice recognition command list



STEP 1 After pressing the talk switch, press . If the “Operating Guide” screen is displaying, press .

STEP 2 Press .


To display the voice recognition operating guide

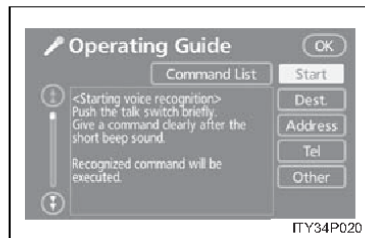

STEP 1 After pressing the talk switch, press **Help**. If the "Command List" screen is displaying, press **Operating Guide**.

STEP 2 Press **Tel**.

To cancel voice recognition


- 1 Press and hold the talk switch.
- 1 Press  on the steering wheel.
- 1 Say "Cancel".
- 1 Press **Cancel**. (excluding command verification)



When using voice recognition

Use correct commands and speak clearly, otherwise the system may not correctly recognize the command. Wind or other noises may also cause the system not to recognize the desired command.

Receiving a call

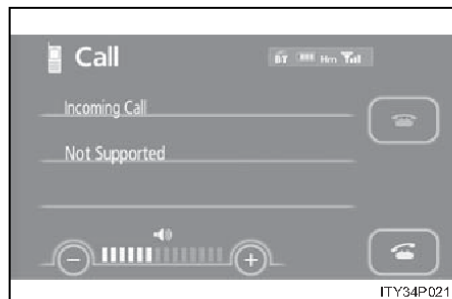
When a call is received, the following screen is displayed together with a sound.





Touch  or press the  on the steering wheel.

3-4. Using the hands-free system

n To refuse a call

Touch and hold .

n To adjust the received call volume


Press the  or . You can also adjust the volume using the steering switches.

n International calls



Received international calls may not be displayed correctly, depending on the mobile phone in use.

Speaking on the phone

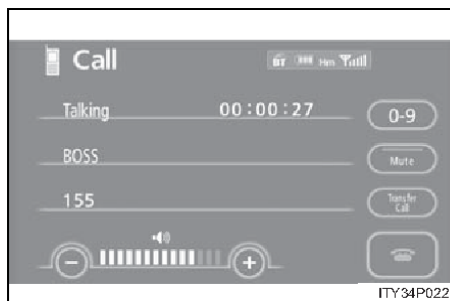The following screen is displayed when speaking on the phone.



n To adjust the received call volume

Press the  or . You can also adjust the volume using the steering switches.


n To prevent the other party from hearing your voice

Touch the .



n Inputting a key

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the phone book.

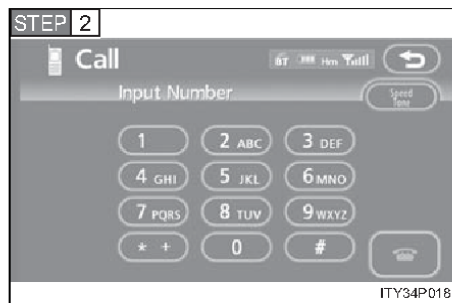STEP 1 Touch .




STEP 2 Input the number.

If repeated tone symbols* are stored in the phone book,  and  are displayed on the right side of the screen.

*:Repeated tone symbols are symbols or numbers displayed as p or w, that come after the phone number.
(e.g. 056133p0123w#1)

STEP 3 Confirm the number displayed on screen, and touch .

If you touch , operation is completed without making a call.

n To transfer a call

Touch .

n To hang up

Touch  or press the  on the steering wheel.

3-4. Using the hands-free system

n **Transferring calls**

- 1 It is not possible to transfer from hands-free to the mobile phone while driving.
- 1 If you transfer from the mobile phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- 1 Transfer method and operation may vary according to the mobile phone used.
- 1 For operation of the mobile phone in use, see the phone's manual.

n **To send a tone by speed tone**

Touch  then touch . Choose the desired number from the speed tone list displayed.

n **While driving**

Key input is unavailable.