

Initialization of Advanced Parking Guidance System

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
 ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2011	Prius	

Introduction

The Advanced Parking Guidance System (or Park Assist) assists the driver during parking and parallel parking by displaying an image of the area behind the vehicle and controlling the steering wheel with the vehicle in reverse.

Removing the short pin or disconnecting the battery interrupts power to the Steering Angle Sensor. When the short pin is reinstalled or the battery terminal is reconnected, the rear view monitor will operate, but the steering angle sensor center position must be set through system initialization before park assist will become operational.

Initialize the Advanced Parking Guidance System after installing the short pin during Pre-delivery Service (PDS).

NOTE

Any time the battery terminal has been disconnected, the Advanced Parking Guidance System MUST be initialized.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–


Initialization of Advanced Parking Guidance System

Initialization Procedure

1. Start the hybrid system.
2. Move the shift lever to the “R” position to confirm that the Advanced Parking Guidance System is inoperative.

“System initializing.” appears on the rear view monitor as shown in Figure 1.

Figure 1. Before Initialization

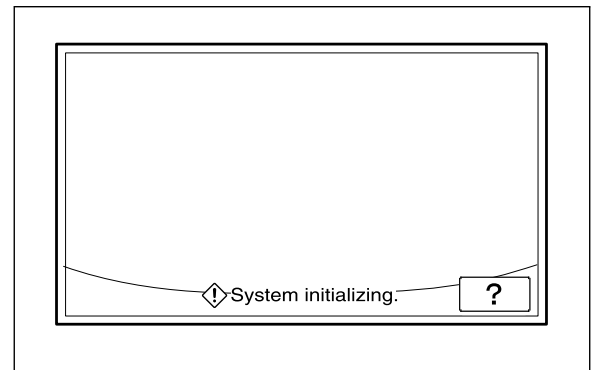

3. Move the shift lever to the “P” position and turn the steering wheel lock to lock.
4. Move the shift lever to the “R” position.
5. When “Check surroundings for safety.” appears on the rear view monitor as shown in Figure 2, the initialization of the Advanced Parking Guidance System has been completed.

Figure 2. After Initialization

