



1. Remove Fuse Cover Jump Starting 2. Remove Red Cover

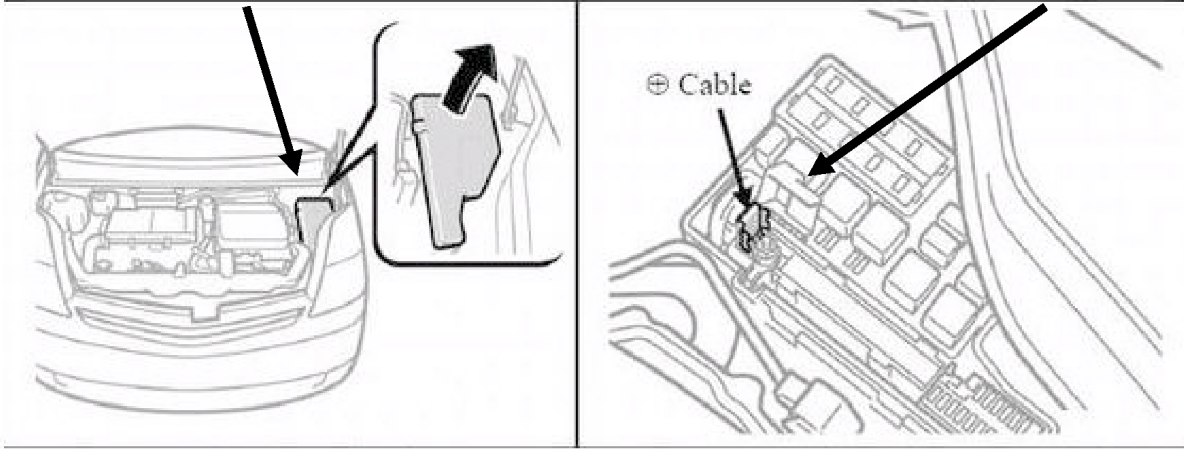

3. Black to Chassis Bolt

4. Red to Vertical Tab

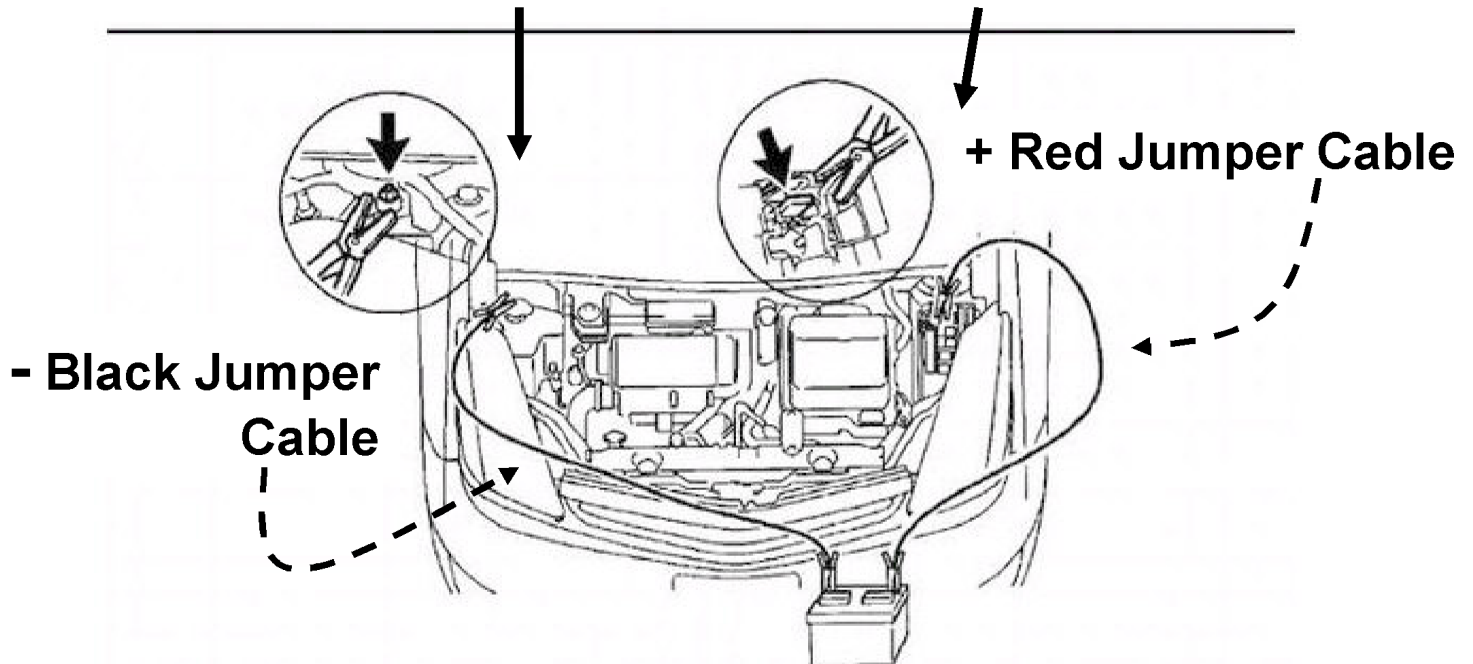

The 12V Auxiliary battery may be jump started if the vehicle does not start and the instrument cluster gauges are dim or off after depressing the brake pedal and pushing the power button.

The 12V Auxiliary battery is located in the cargo area. The rear hatch door will not unlock or open if the auxiliary battery is discharged. Instead an accessible remote 12 Volt auxiliary battery positive terminal is provided in the engine compartment fuse box, as illustrated, for jump starting. See note 5 below.

5. The Plus Tab is small but does not require much power to start just decent connections.
6. IF THE CAR WON'T START IMMEDIATELY WAIT 5 MINUTES WITH CABLES CONNECTED.

