 
 



Audio System <w/o Stereo Component Amplifier>

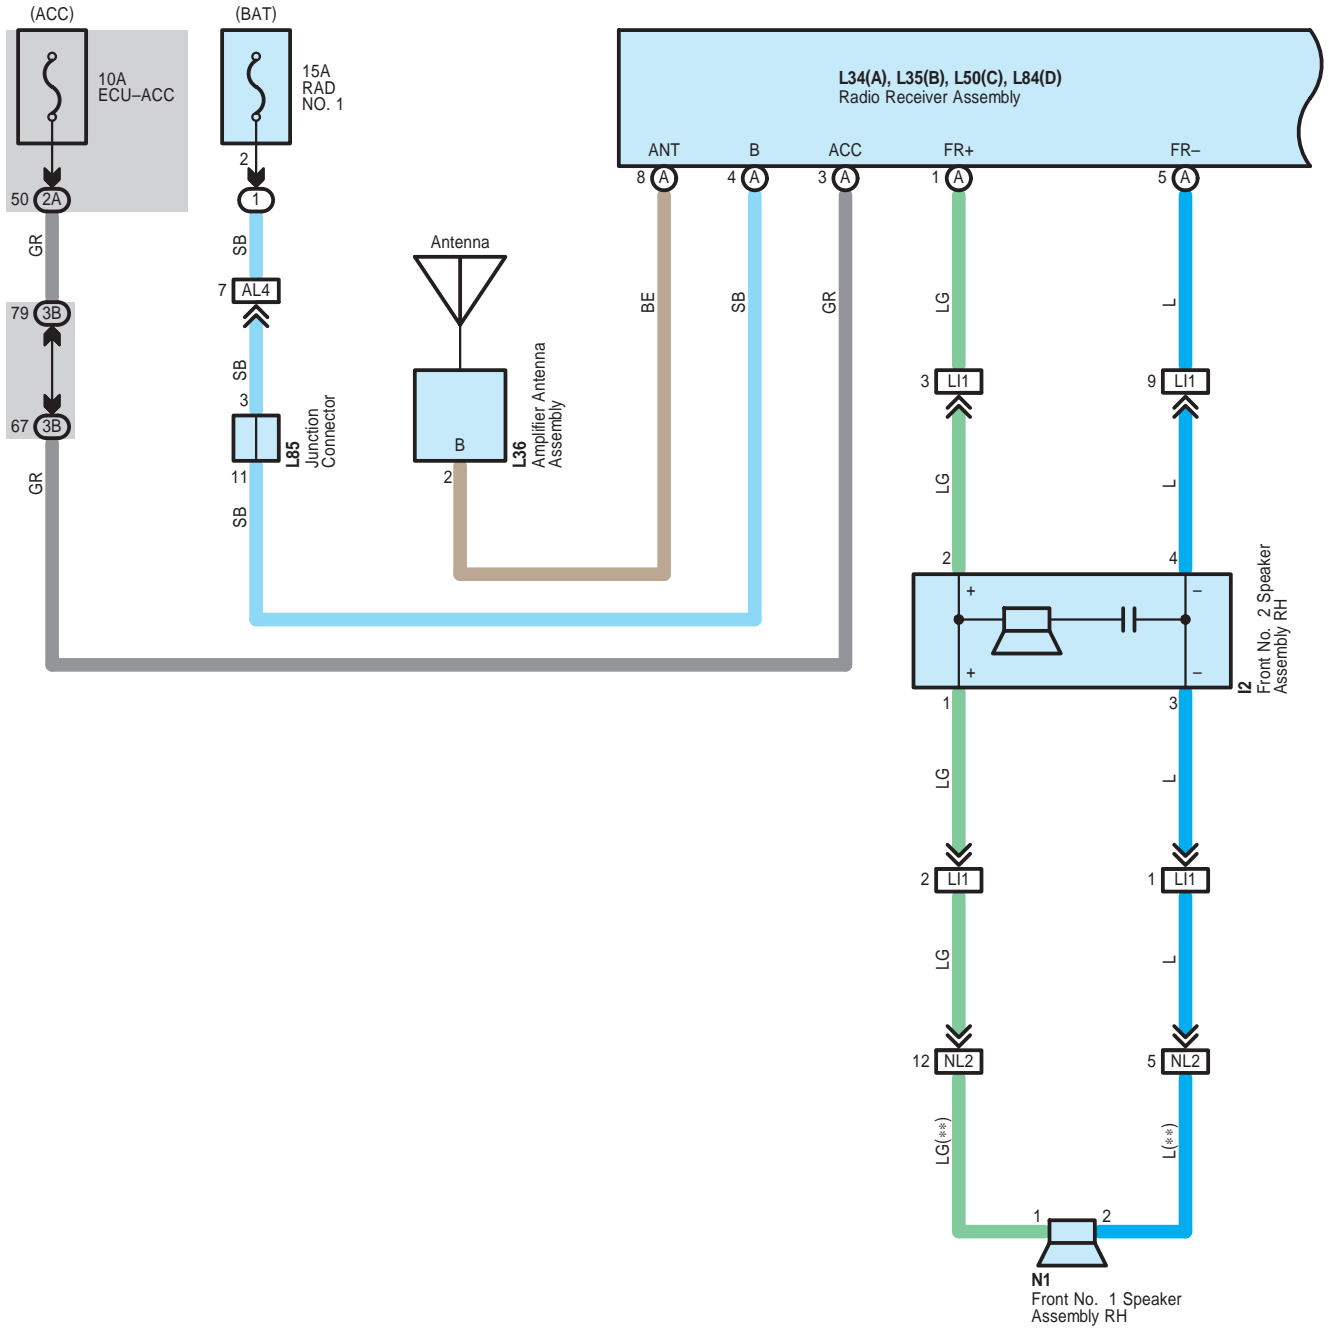


Audio System <w/o Stereo Component Amplifier>

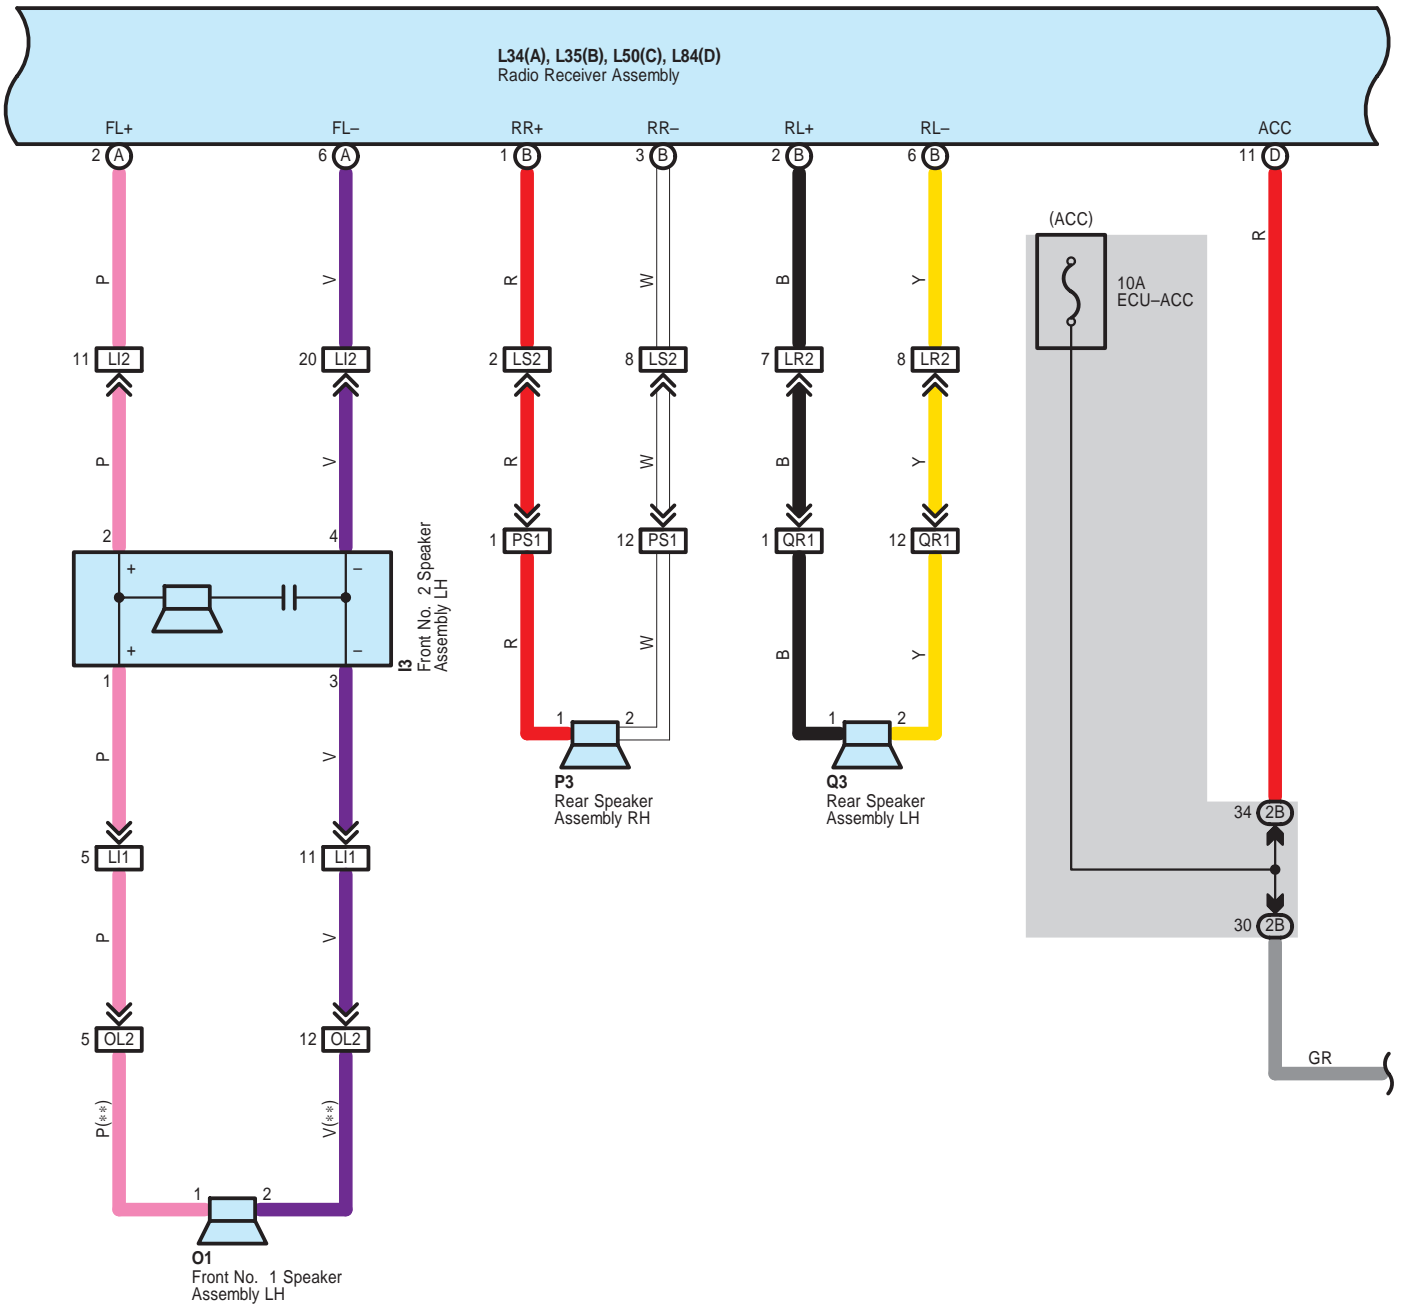


  When wiring colors are indicated with (**), either the colored wiring (general wiring) or the painted wiring is used.

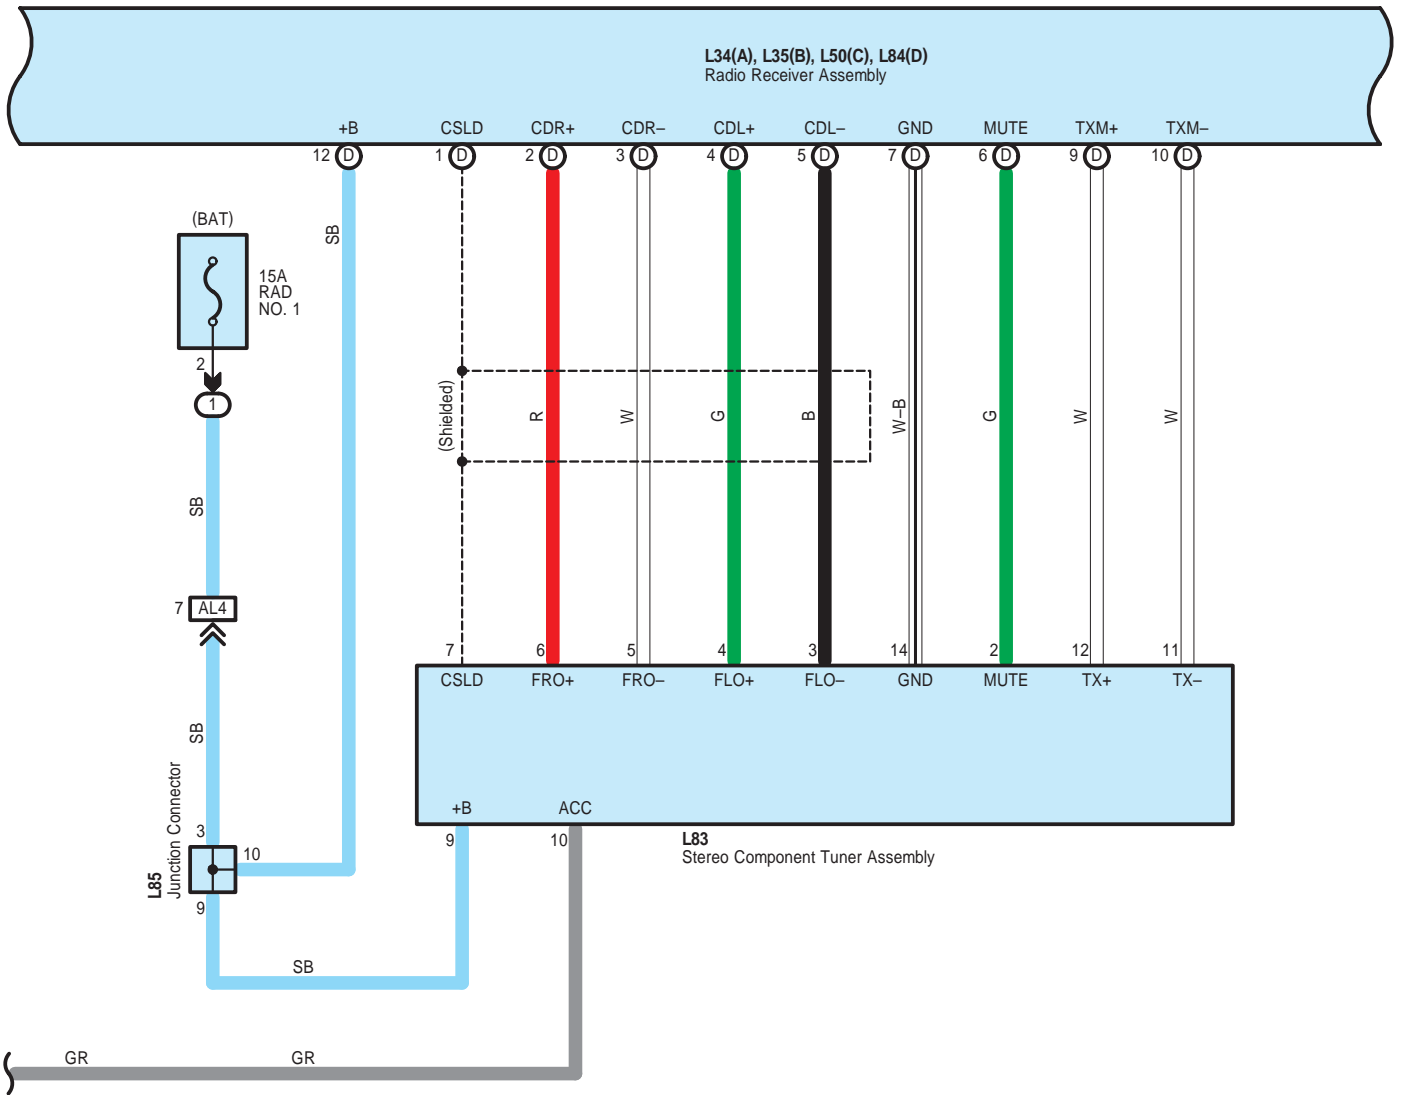


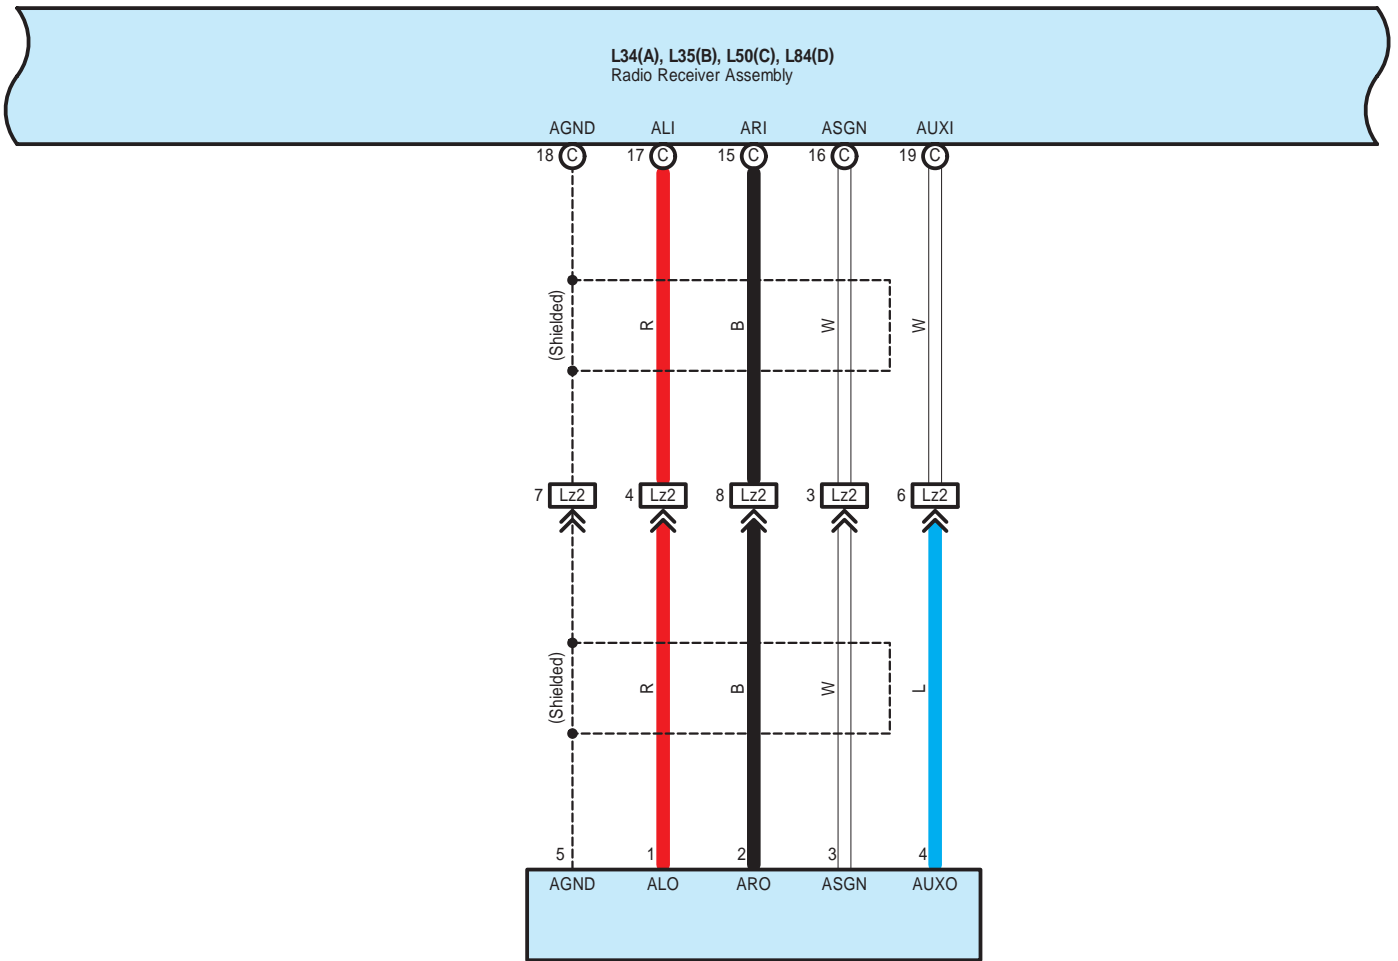

















z19
No. 1 Stereo Jack
Adapter Assembly

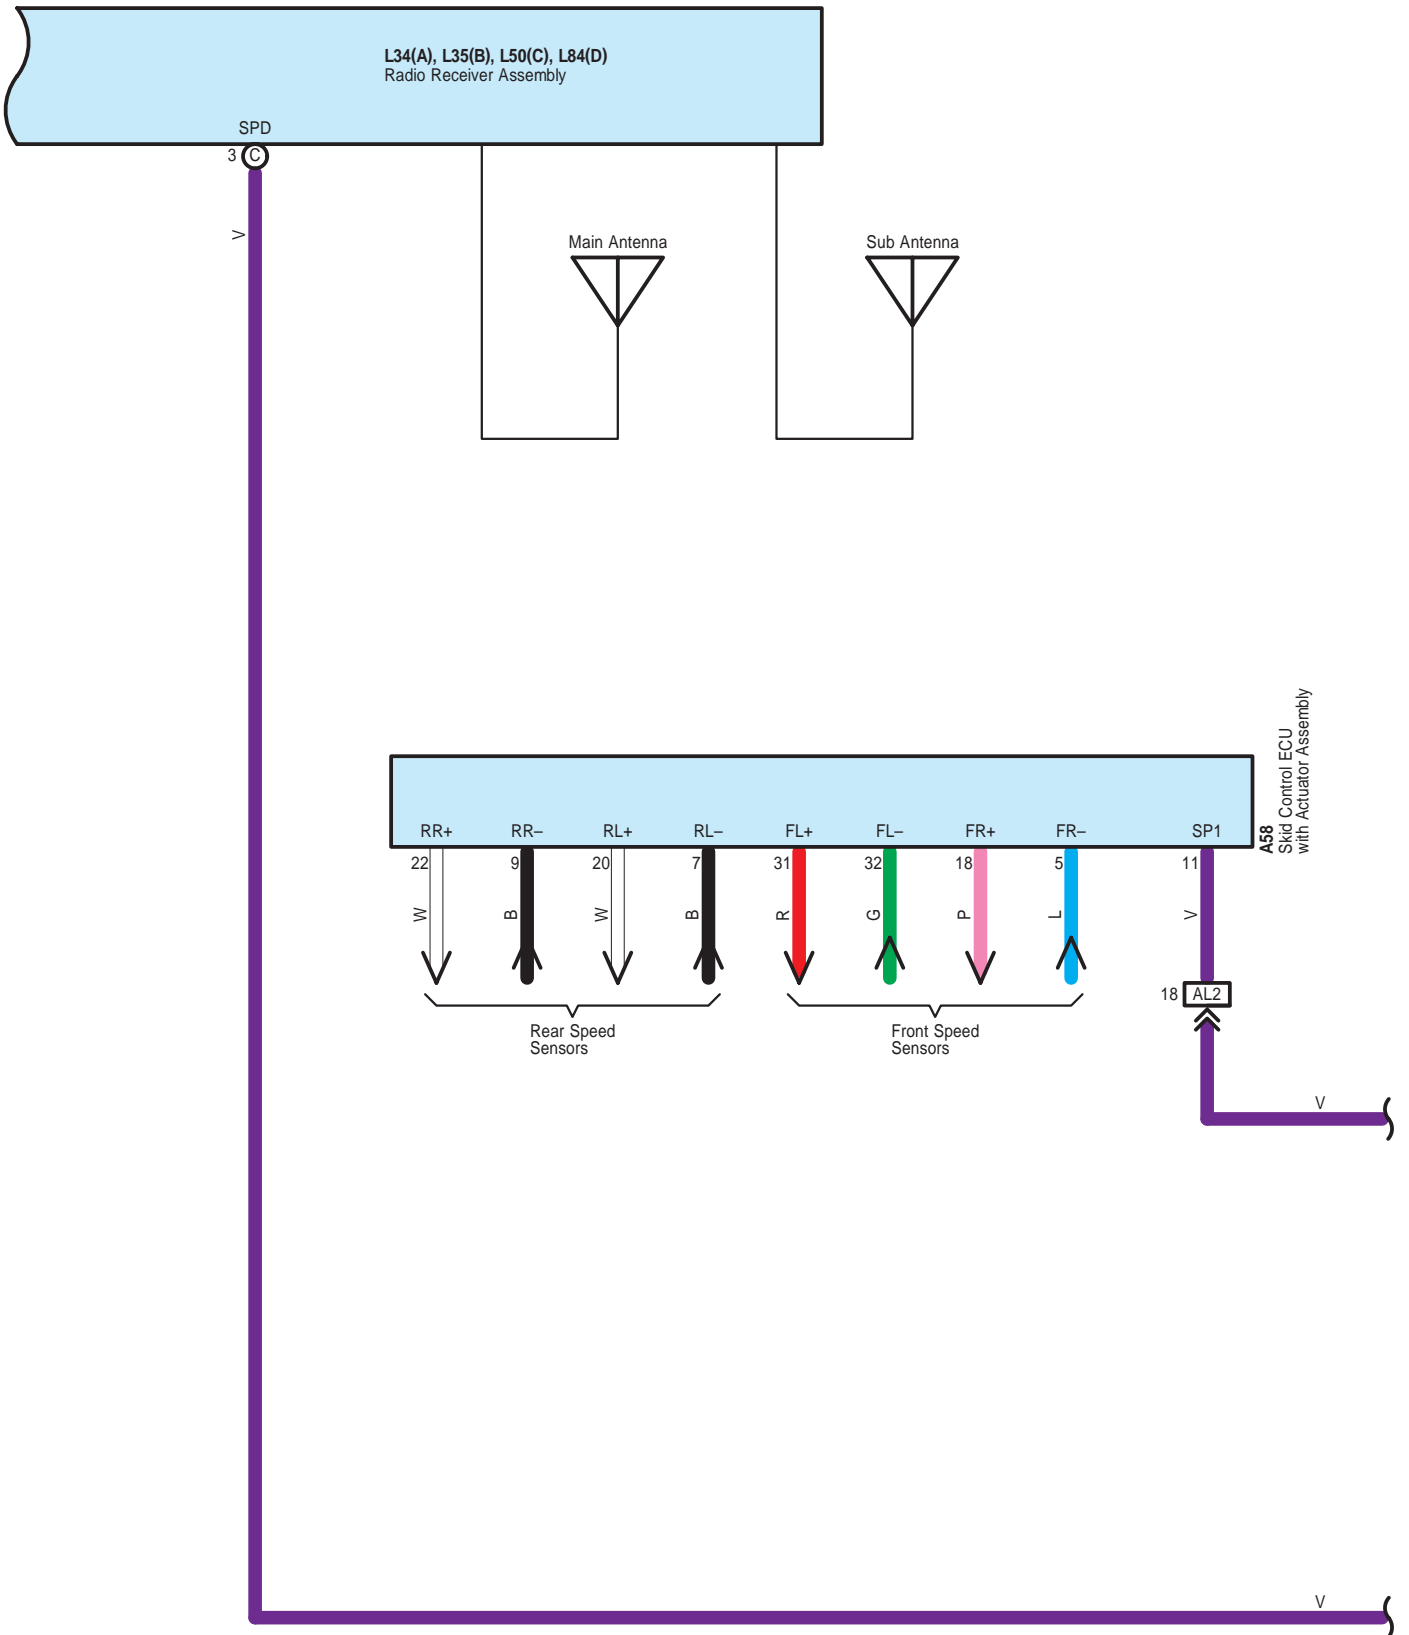 

 Audio System <w/o Stereo Component Amplifier>

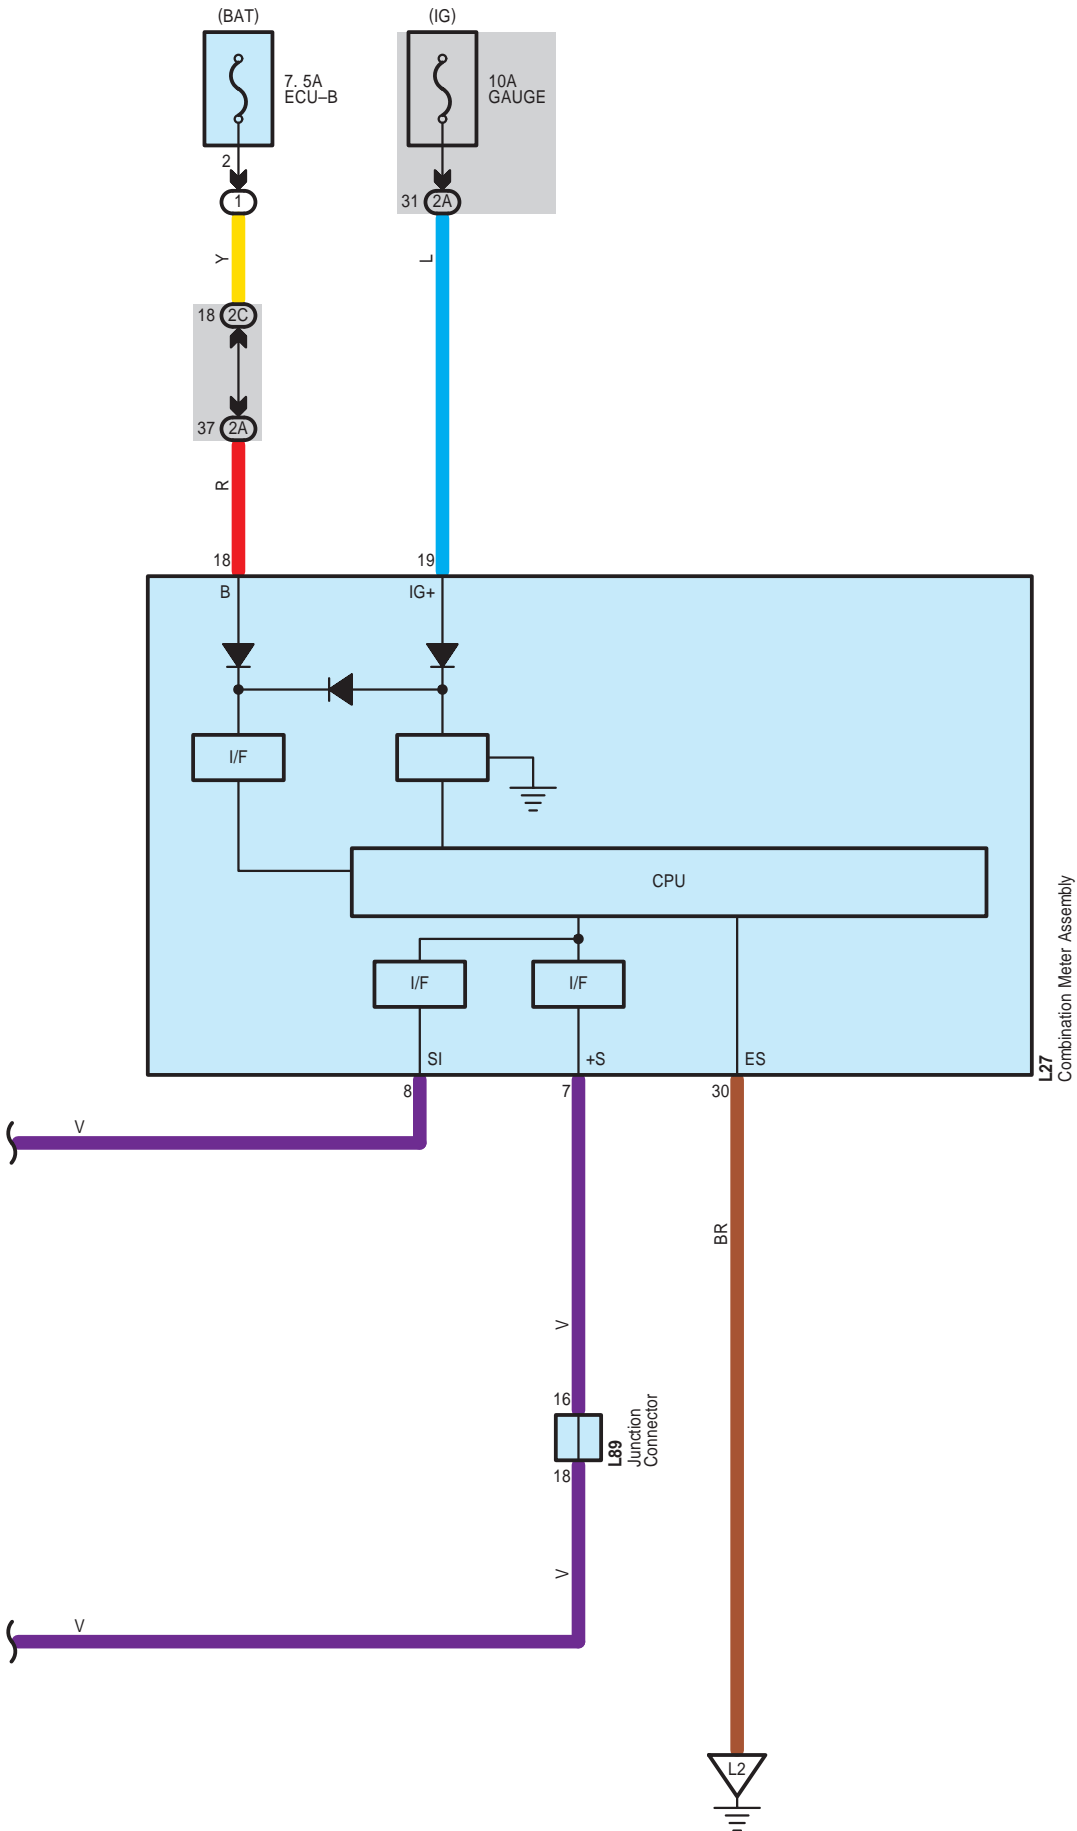


                Audio System <w/o Stereo Component Amplifier>

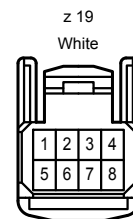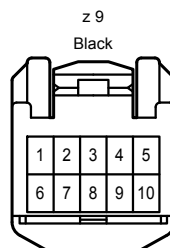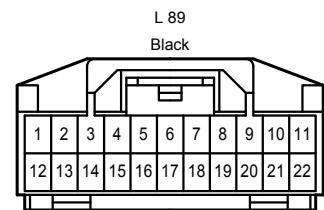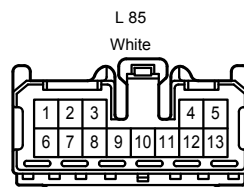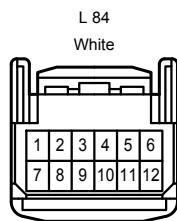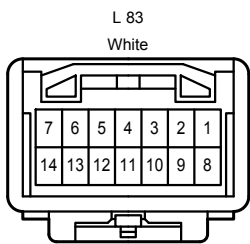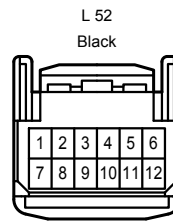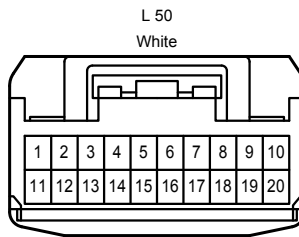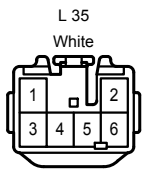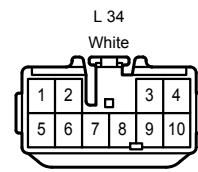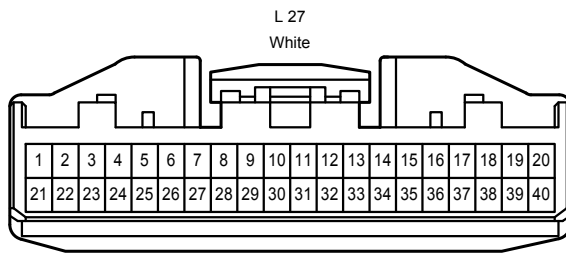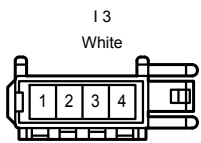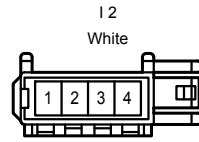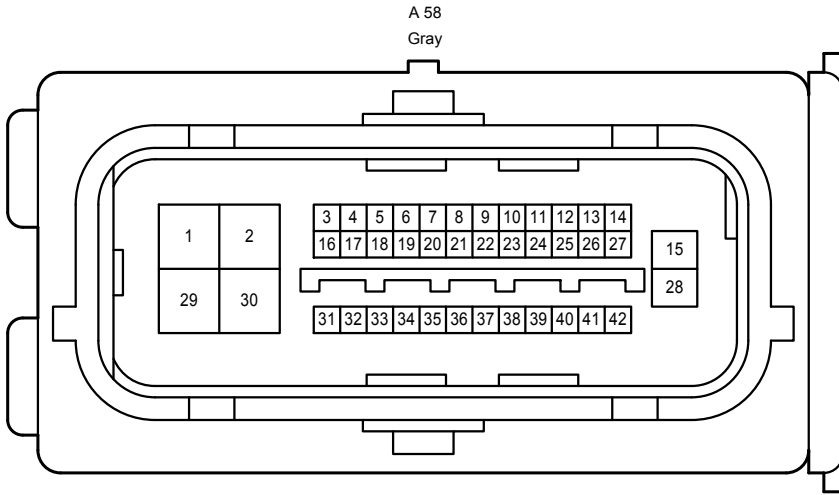


2A

 White

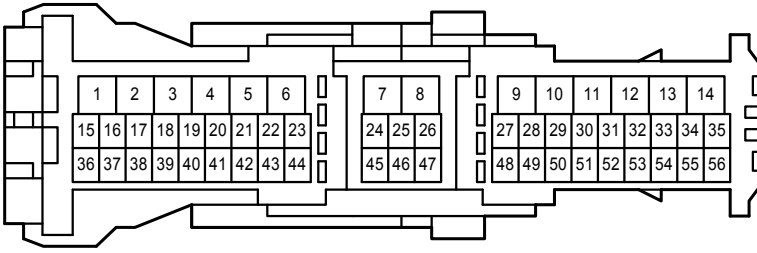


2B

 White

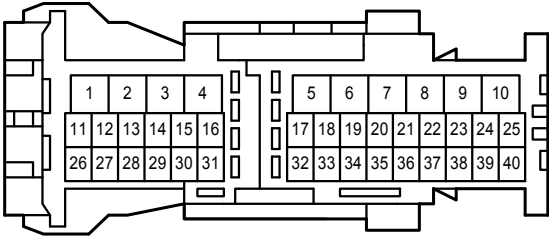


2C

 White

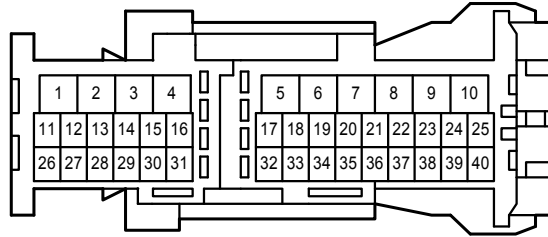


3B

 White

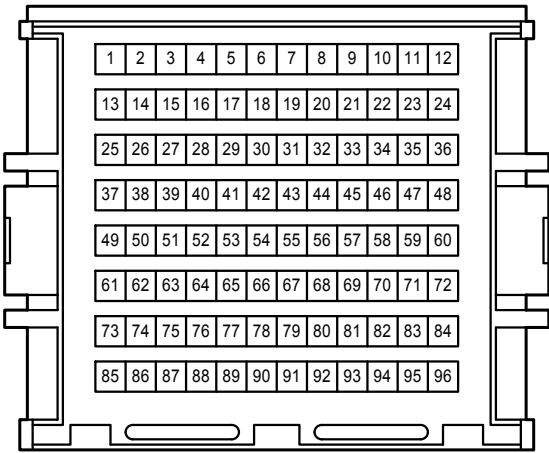


AL2

 Gray

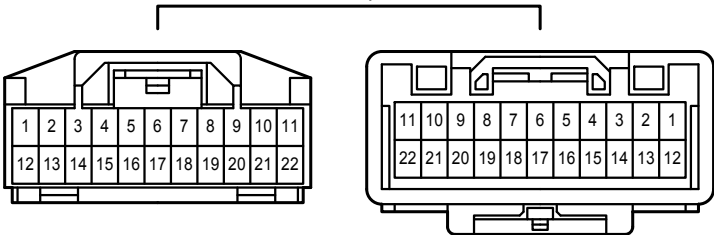


Audio System <w/o Stereo Component Amplifier>

 
AL4
Black

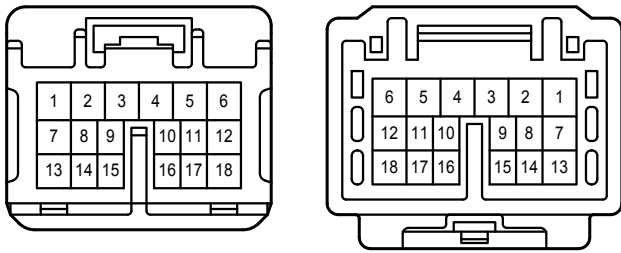


L11
Black

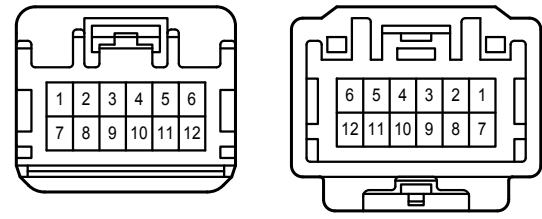 


L12
White

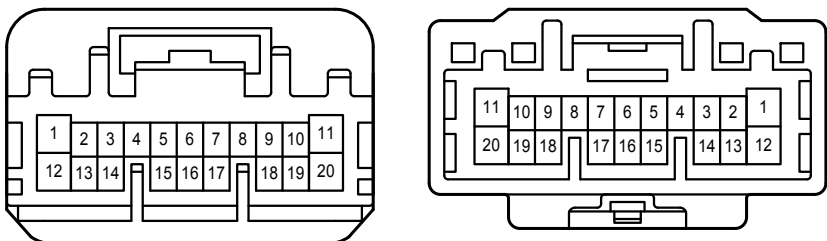 


LR2
Black

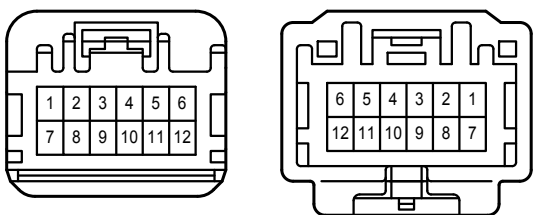 


LS2
Black

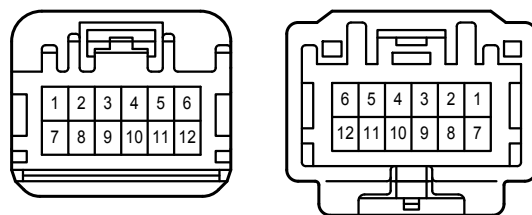 


Lz2
White

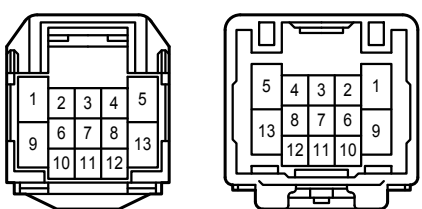 

NL2
White

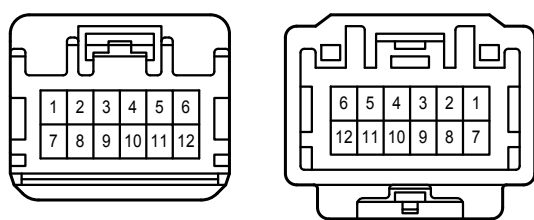 


OL2
White

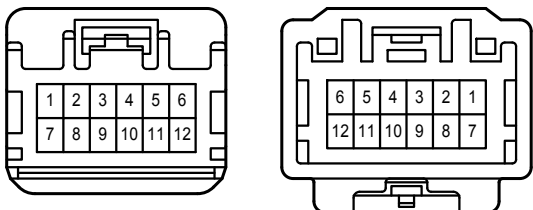 

Audio System <w/o Stereo Component Amplifier>

 PS1
White

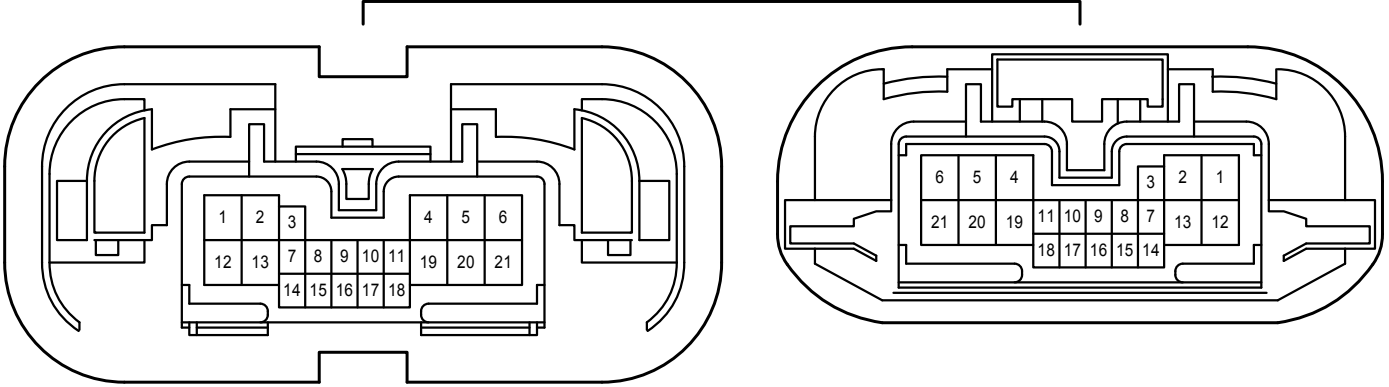

QR1
White

