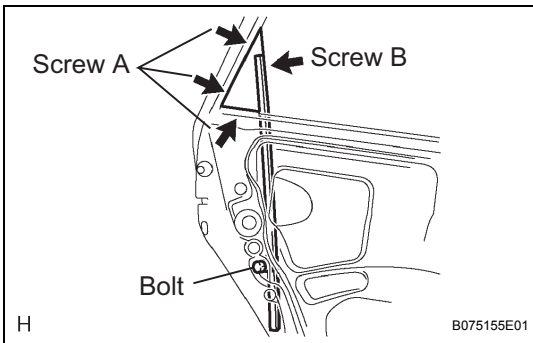
**14. REMOVE REAR DOOR SERVICE HOLE COVER LH**

- (a) Remove the 2 screws and No. 2 bracket.
- (b) Remove the service hole cover.

NOTICE:

Remove the remaining tape on the door side.

**15. REMOVE REAR DOOR WINDOW REAR GUIDE SUB-ASSEMBLY LH**

- (a) Remove the 3 screws labeled A, bolt and window guide rear together with the guide seal.
- (b) Remove the screw labeled B and rear door guide seal.

16. REMOVE REAR DOOR GLASS SUB-ASSEMBLY LH**HINT:**

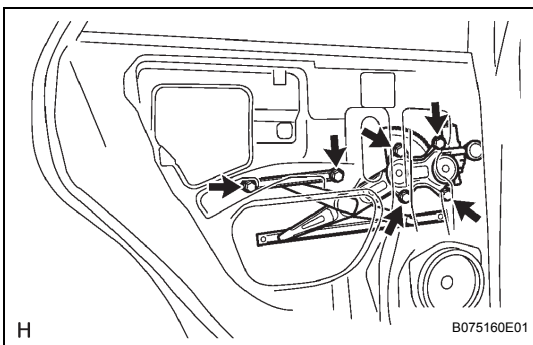
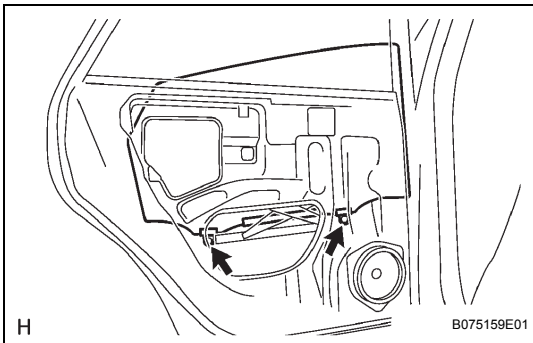
Insert cushions inside the door panel to prevent the glass from being scratched.

- (a) Connect the power window regulator switch.
- (b) Remove the 2 bolts and glass.

NOTICE:

Be careful when removing the bolts as the glass may fall and become damaged.

- (c) Disconnect the power window regulator switch.

**17. REMOVE REAR DOOR WINDOW REGULATOR SUB-ASSEMBLY LH**

- (a) Disconnect the connector.
- (b) Remove the 6 bolts and regulator.

NOTICE:

Be careful when removing the bolts as the window regulator may fall and become damaged.

HINT:

Remove the window regulator through the service hole.

- (c) Remove the glass ran.