

thousands of miles:	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105	110	115	120	125
months:	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	150
Replace engine oil and oil filter [1]	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Inspect and adjust all fluid levels	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Rotate tires	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Visual inspect brake pads/discs	x	x	x	x	x	x[3]	x	x	x	x	x	x[3]	x	x	x	x	x	x[3]	x	x	x	x	x	x[3]	x
Clean cabin air filter			x					x						x						x					
Replace cabin air filter					x						x							x						x	
Replace engine air filter					x						x							x						x	
Inspect transaxle fluid					x						x							x						x	
Inspect engine/Inverter coolant			x		x			x			x			x				x						x	
Replace engine/Inverter coolant																			x[2]						
Inspect ball joints & dust covers			x		x			x			x			x				x			x			x	
Inspect drive shaft boots			x		x			x			x			x				x			x			x	
Inspect exhaust system			x		x			x			x			x				x			x			x	
Inspect radiator & condenser			x		x			x			x			x				x			x			x	
Inspect steering gear box			x		x			x			x			x				x			x			x	
Inspect steering linkage & boots			x		x			x			x			x				x			x			x	
Inspect fuel lines, tank & vent					x						x							x						x	
Inspect fuel tank cap gasket					x						x							x						x	
Replace spark plugs																								x[4]	

- [1] Reset the oil replacement reminder {"MAINT REQD"} light after replacing engine oil.  
[2] Initial replacement at 100,000  
[3] Inspect thickness measurement and disc runout.  
[4] Required under the terms of the Emission Control Warranty. Does not apply to PZEV Prius in California, New York, Massachusetts, Maine and Vermont. For this model, replacement interval is 150,000 miles.

thousands of miles:	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240	245	250
months:	156	162	168	174	180	186	192	198	204	210	216	222	228	234	240	246	252	256	262	268	274	280	286	292	298
Replace engine oil and oil filter [1]	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Inspect and adjust all fluid levels	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Rotate tires	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Visual inspect brake pads/discs	x	x	x	x	x[3]	x	x	x	x	x	x[3]	x	x	x	x	x	x[3]	x	x	x	x	x	x	x[3]	x
Clean cabin air filter		x						x						x						x					
Replace cabin air filter					x						x							x					x		
Replace engine air filter					x						x							x					x		
Inspect transaxle fluid					x						x							x					x		
Inspect engine/Inverter coolant		x						x			x			x				x			x			x	
Replace engine/Inverter coolant					x[2]									x[2]											x[2]
Inspect ball joints & dust covers		x			x			x			x			x				x			x			x	
Inspect drive shaft boots		x			x			x			x			x				x			x			x	
Inspect exhaust system		x			x			x			x			x				x			x			x	
Inspect radiator & condenser		x			x			x			x			x				x			x			x	
Inspect steering gear box		x			x			x			x			x				x			x			x	
Inspect steering linkage & boots		x			x			x			x			x				x			x			x	
Inspect fuel lines, tank & vent					x						x							x						x	
Inspect fuel tank cap gasket					x						x							x						x	
Replace spark plugs					x[4]																				

- [1] Reset the oil replacement reminder {"MAINT REQD"} light after replacing engine oil.  
[2] Initial replacement at 100,000  
[3] Inspect thickness measurement and disc runout.  
[4] Required under the terms of the Emission Control Warranty. Does not apply to PZEV Prius in California, New York, Massachusetts, Maine and Vermont. For this model, replacement interval is 150,000 miles.