


Last Modified: 5-3-2010	6.4 A	From: 200904
Model Year: 2010	Model: Prius	Doc ID: RM0000034WW00FX
Title: EXTERIOR PANELS / TRIM: REAR BUMPER: REMOVAL (2010 Prius)		

REMOVAL


1. REMOVE REAR BUMPER ASSEMBLY

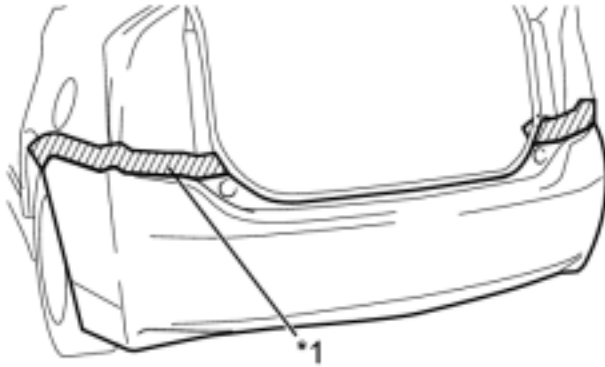

P


(a) Put protective tape around the rear bumper assembly.

Text in Illustration	Protective Tape
*1	

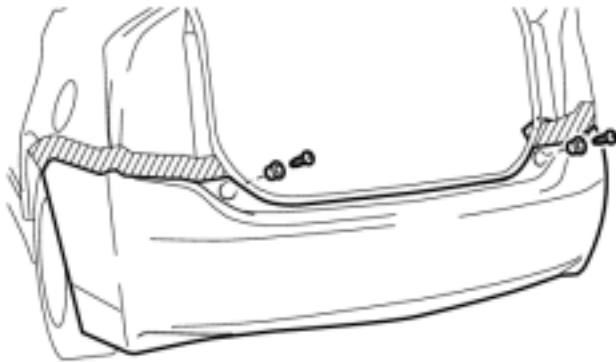


P

(b) Remove the 2 screws and 2 rear bumper upper stoppers.

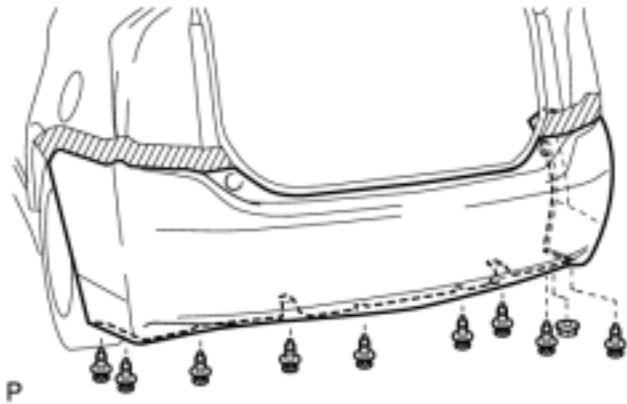

(c) Using a clip remover, remove the 9 clips.

(d) Remove the nut.

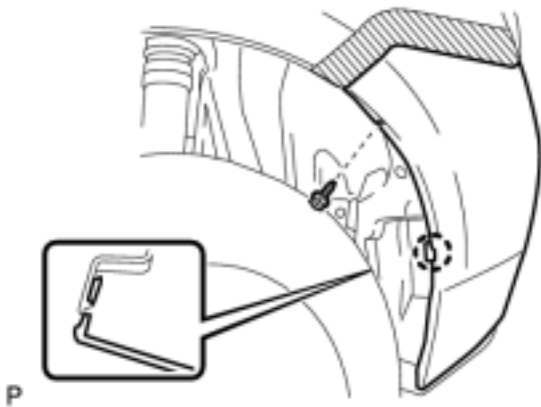

(e) Remove the screw.


HINT:

Use the same procedure for the RH side and LH side.

(f) Disengage the claw.

HINT:


Use the same procedure for the RH side and LH side.

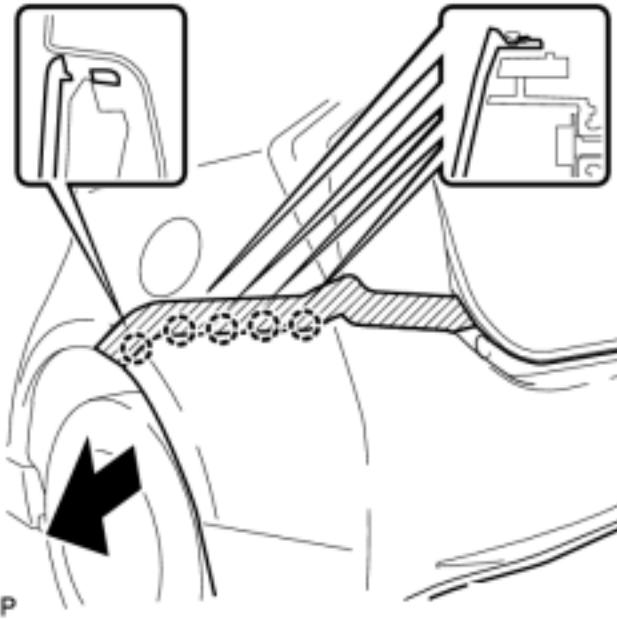

(g) Disengage the 5 claws.

HINT:

Use the same procedure for the RH side and LH side.

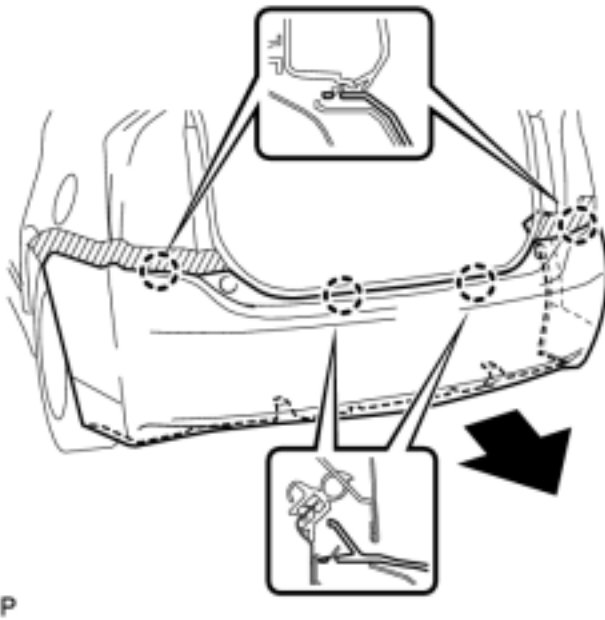

(h) Disengage the 4 claws and remove the rear bumper assembly as shown in the illustration.

