



Fleck SXT settings for Softeners and BackWash Filter

To Enter Master Programming Mode:

1. Set time to 12:01 PM by pressing and holding UP or DOWN arrows appropriately.
2. Press CYCLE Button to accept time setting
3. Press and Hold UP **and** DOWN arrows for 3-5 seconds until screen reads DF GAL
4. Edit parameter value using UP/DOWN arrows
5. Navigate through Parameters by pressing the CYCLE button.

Standard Settings

Abbreviation	Parameter	Softener		BW filters
		5600 & 2510	9100	
DF	Display Format	GAL		GAL
VT	Valve Type	dF1b	dF1b	FLtr
CT	Control Type	Fd	FI	tc
NT	Number of Tanks	1	2	1
C	*Unit Capacity	9x48: 32 10x54: 48 12x48: 64		
H	Feedwater Hardness	Hardness of Water (determined by test)		
RS	Reserve Selection	SF		
SF	Safety Factor	15	10	
DO	Day Override	14		3
RT	Regen Time	2:00 AM default		12:00
BW	Backwash	10 min default		10
BD	Brine Draw	60 min default		
RR	Rapid Rinse	10 min default		10
BF	Brine Fill	**		
FM	Flow Meter Type	0.7 default		

*Unit Capacity is the capacity per tank

** Please set 10 min to 9x48, 15 min to 10x54, 19 min to 12x48 (Capacity per tank)