

CHILTON[®]LIBRARY

Your Current Vehicle: 2015 Toyota Prius

[Top](#) / [Body](#) / [Interior](#)
/ [Interior Panels / Trim](#)
/ [Upper Instrument Panel](#)
/ [Removal \(2015 Prius From 08/2014\)](#)

Removal (2015 Prius From 08/2014)

1. PRECAUTION

2015 MY Prius [08/2014 -]; INTERIOR PANELS / TRIM: UPPER INSTRUMENT PANEL: PRECAUTION

NOTE

After turning the power switch off, waiting time may be required before disconnecting the cable from the auxiliary battery negative (-) terminal. Therefore, make sure to read the disconnecting the cable from the auxiliary battery negative (-) terminal notices before proceeding with work 2015 MY Prius [08/2014 -]; INTRODUCTION: REPAIR INSTRUCTION: PRECAUTION

2. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) 2015 MY Prius [08/2014 -]; INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+

3. REMOVE REAR DECK FLOOR BOX 2015 MY Prius [08/2014 -]; INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+

4. REMOVE REAR NO. 3 FLOOR BOARD 2015 MY Prius [08/2014 -]; INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+

5. DISCONNECT CABLE FROM AUXILIARY BATTERY NEGATIVE TERMINAL

WARNING


Wait at least 90 seconds after disconnecting the cable from the negative (-) auxiliary battery terminal to disable the SRS system.

NOTE

When disconnecting the cable, some systems need to be initialized after the cable is reconnected 2015 MY Prius [08/2014 -]; INTRODUCTION: REPAIR INSTRUCTION: INITIALIZATION.

6. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY

- Using a moulding remover, slightly lift the panel at the position shown in the illustration.

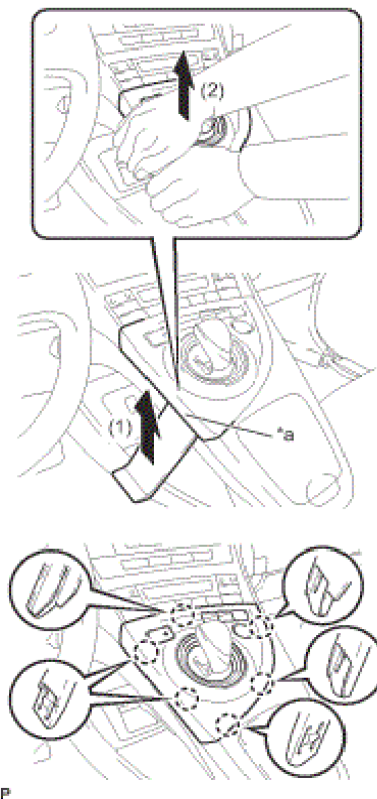

Click to Enlarge


Text in Illustration

*a	Lift slightly
----	---------------

- Pull the integration control and panel assembly in the direction indicated by the arrow to disengage the 6 claws.
- Disconnect each connector and remove the integration control and panel assembly.


7. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 2 claws and 2 clips.

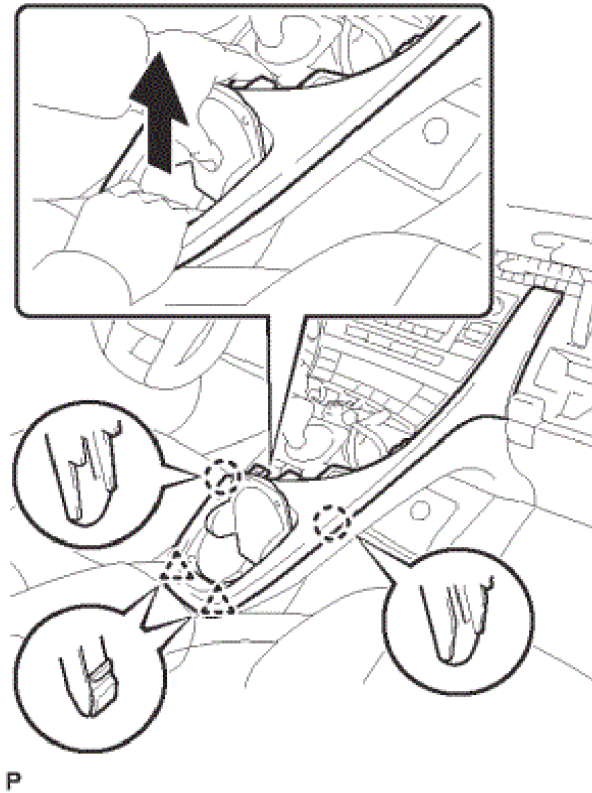

Click to Enlarge

- Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 5 claws and remove the lower center instrument cluster finish panel sub-assembly.

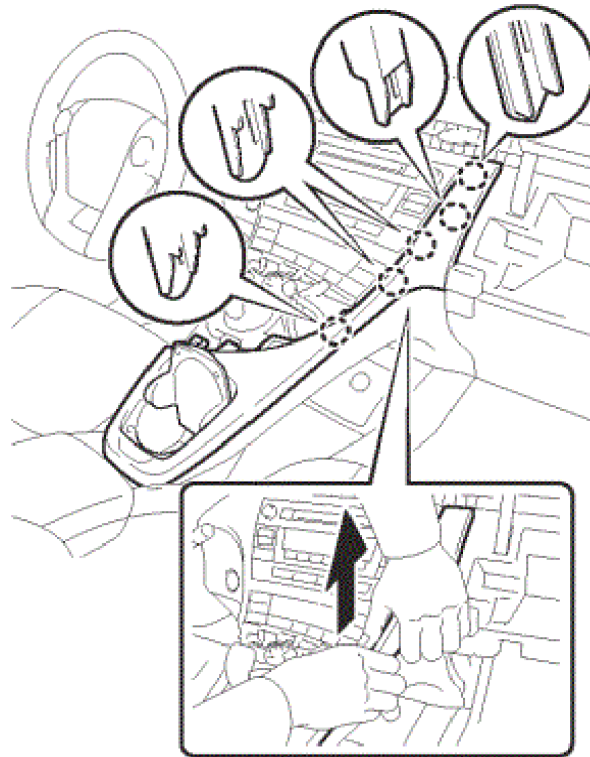


P

[Click to Enlarge](#)

8. REMOVE INSTRUMENT PANEL CUP HOLDER ASSEMBLY

- Remove the 4 screws and instrument panel cup holder assembly from the lower center instrument cluster finish panel sub-assembly.

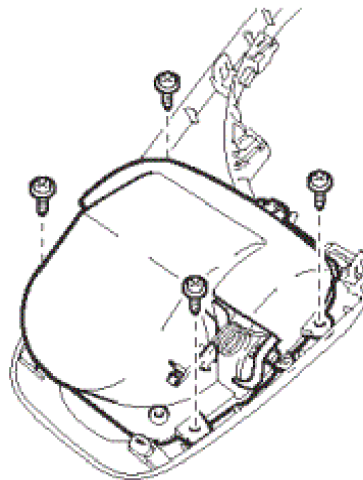


P

[Click to Enlarge](#)

9. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH


- Disengage the 14 claws.
- Disconnect the connector and remove the instrument cluster finish panel garnish.

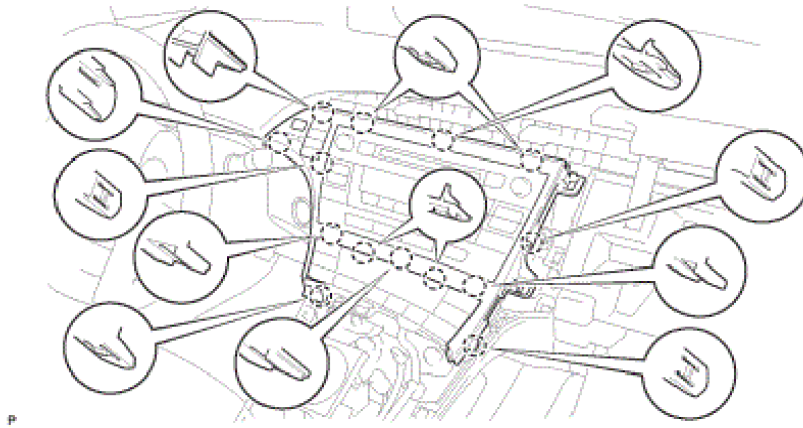

Click to Enlarge

10. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

- Disengage the 3 claws.

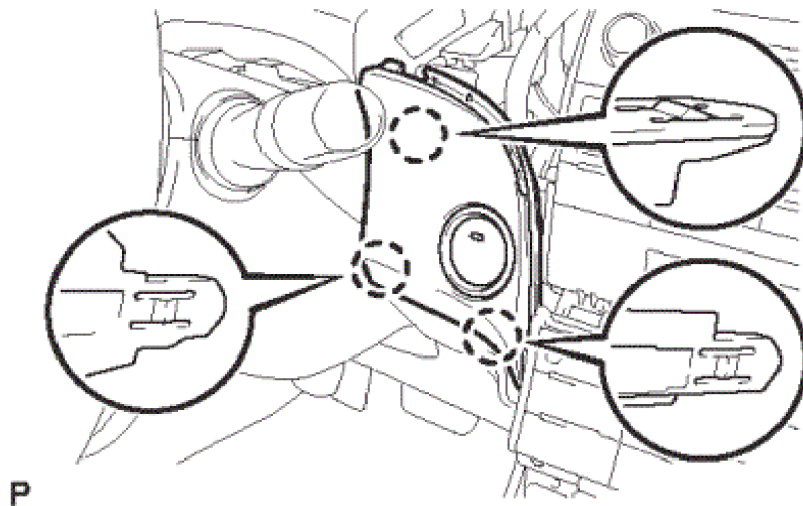

Click to Enlarge

- Disconnect the connector and remove the upper instrument panel finish panel sub-assembly.

11. REMOVE RADIO AND DISPLAY RECEIVER ASSEMBLY WITH BRACKET (for Radio and Display Type)

w/ Daytime Running Light: 2015 MY Prius [08/2014 -]; AUDIO / VIDEO: RADIO RECEIVER: REMOVAL+

w/o Daytime Running Light: 2015 MY Prius [08/2014 -]; AUDIO / VIDEO: RADIO RECEIVER: REMOVAL+


12. REMOVE NAVIGATION RECEIVER WITH BRACKET (for Navigation Receiver Type) 2015 MY Prius [08/2014 -]; NAVIGATION / MULTI INFO DISPLAY: NAVIGATION RECEIVER: REMOVAL+

13. REMOVE FRONT DOOR SCUFF PLATE LH 2015 MY Prius [08/2014 -];
INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+

14. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH 2015 MY Prius [08/2014 -];
INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+


15. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY

- Remove the screw .

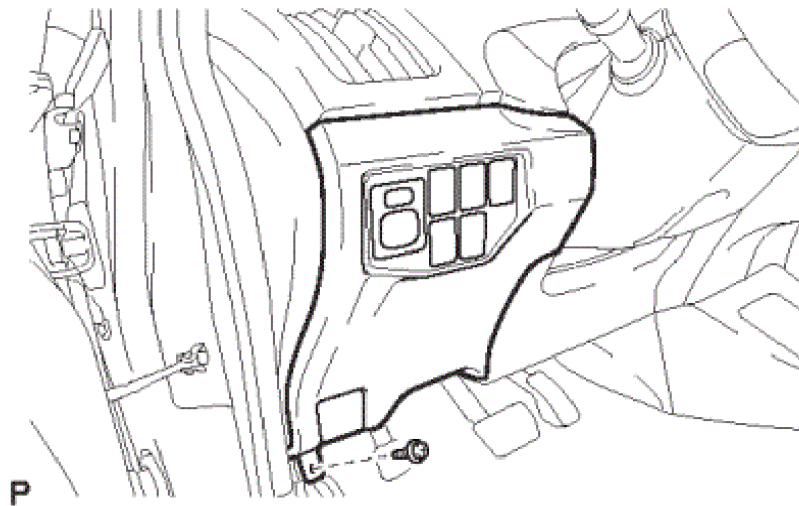


[Click to Enlarge](#)

- Disengage the 6 claws and clip as shown in the illustration.

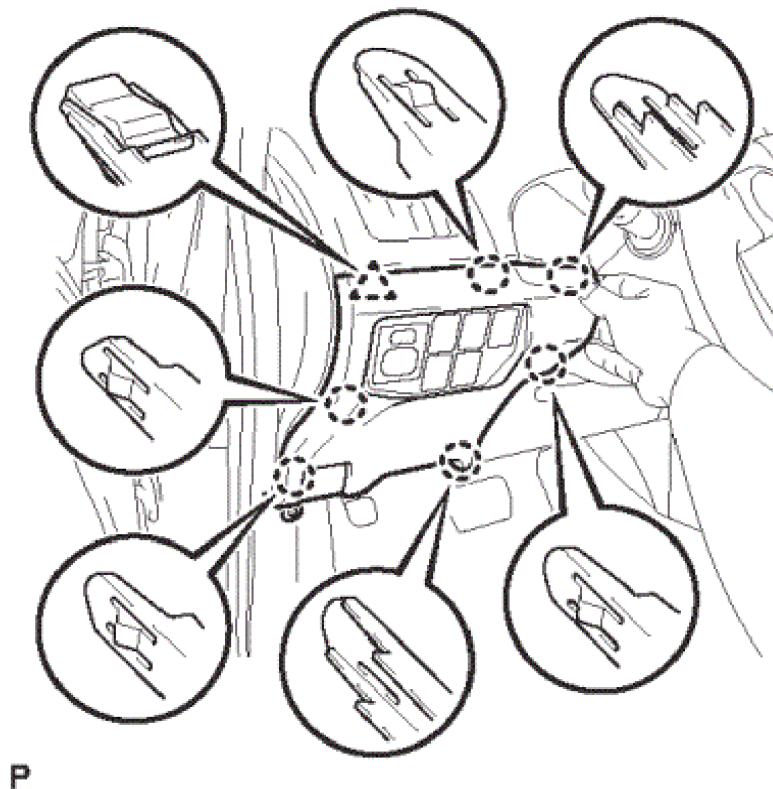

Click to Enlarge

- Disengage the claw and 2 guides and disconnect the hood lock control cable.

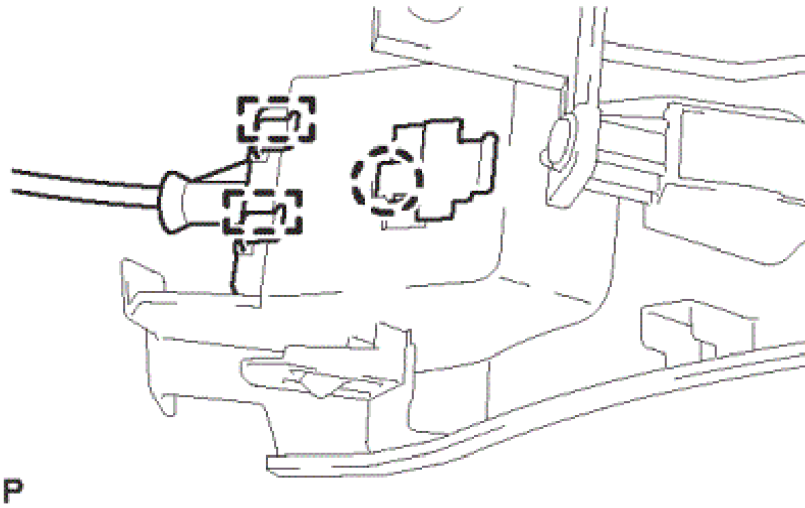


Click to Enlarge

- Disconnect each connector and clamp, and remove the lower instrument panel finish panel assembly.


16. REMOVE NO. 1 INSTRUMENT PANEL REGISTER

- Pull the No. 1 instrument panel register in the direction indicated by the arrow to disengage the 2 claws.

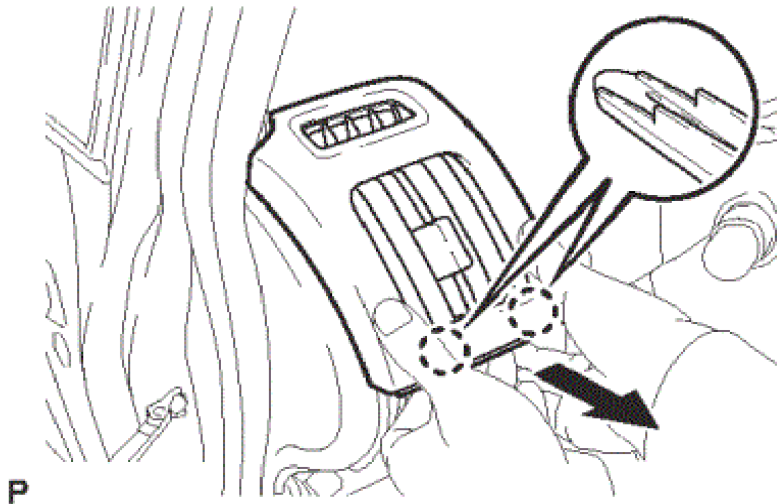

Click to Enlarge

- Pull the No. 1 instrument panel register in the direction indicated by the arrow to disengage the 2 claws and remove the No. 1 instrument panel register.

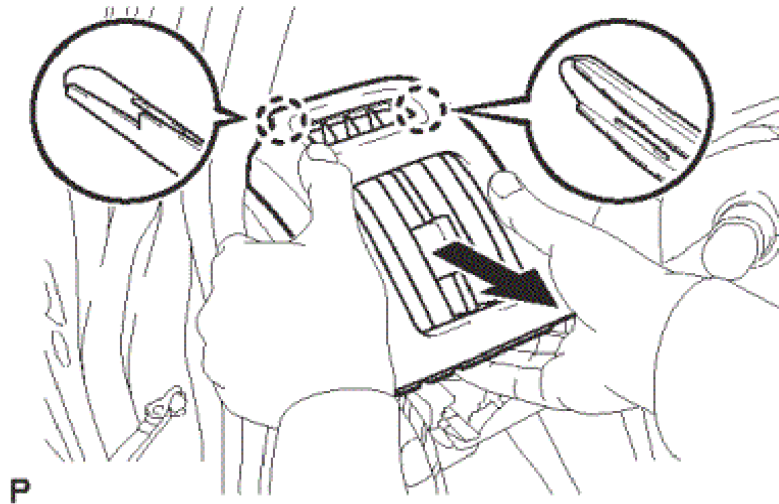


P

Click to Enlarge

17. REMOVE NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL

- Disengage the 4 claws to remove the No. 1 center instrument cluster finish panel.

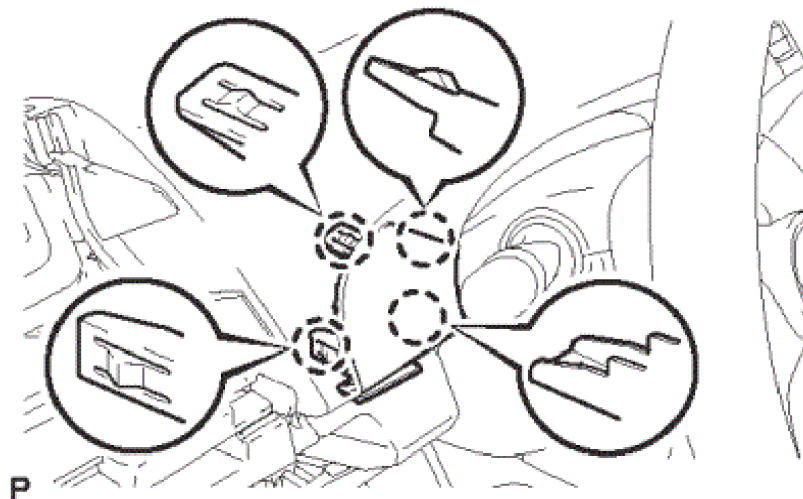


P

Click to Enlarge

18. DISCONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP LH


19. REMOVE INSTRUMENT PANEL FINISH PANEL END LH

- Pull the instrument panel finish panel end LH in the direction indicated by the arrow to disengage the 4 claws.

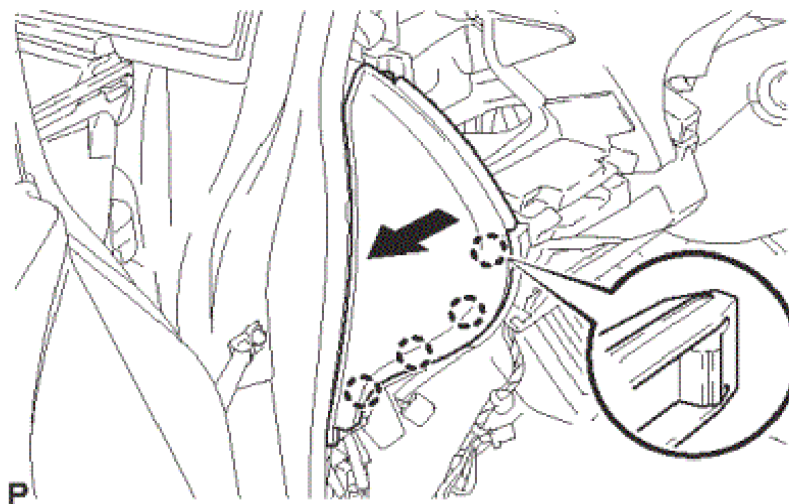


[Click to Enlarge](#)

- Disengage the guide as shown in the illustration.

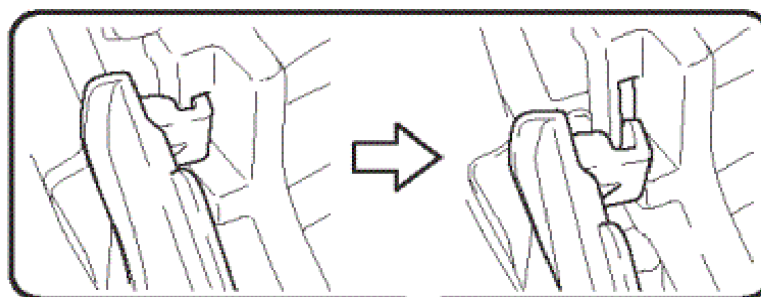

[Click to Enlarge](#)

- Disengage the guide and remove the instrument panel finish panel end LH as shown in the illustration.

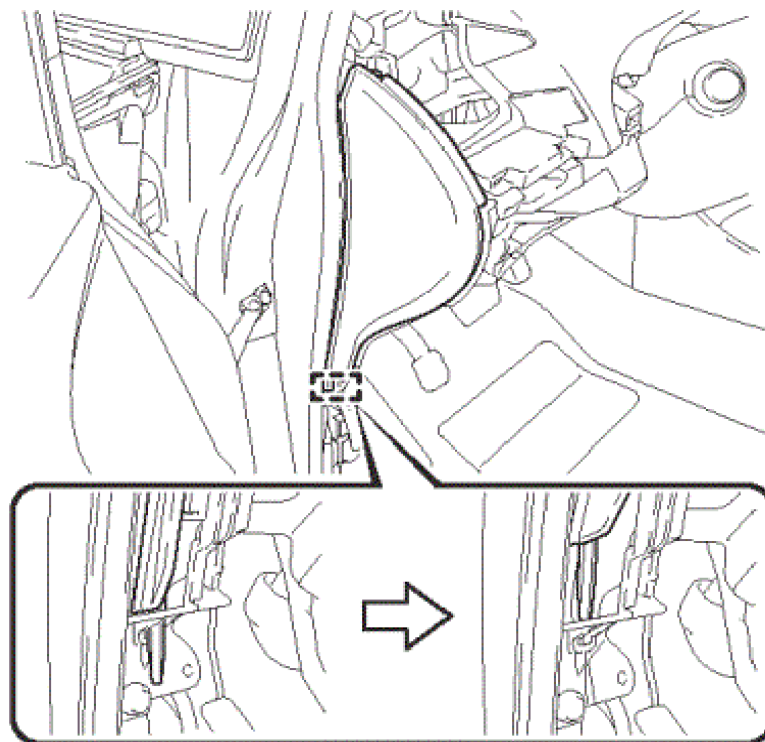


P

Click to Enlarge

20. REMOVE NO. 1 SIDE DEFROSTER NOZZLE

- Using a moulding remover, slightly lift the panel at the position shown in the illustration.

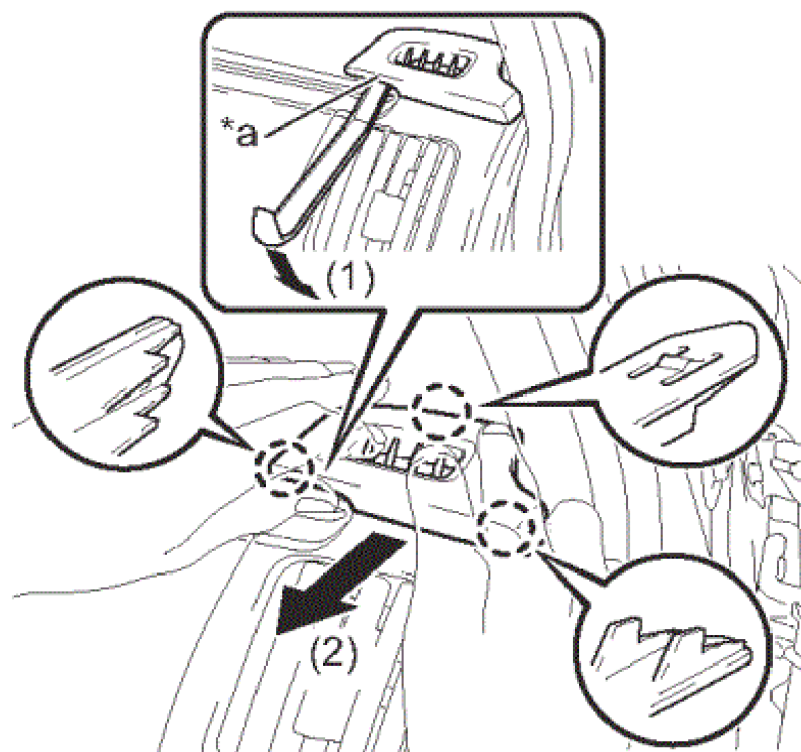

P

[Click to Enlarge](#)


Text in Illustration

*a	Lift slightly
----	---------------

- Pull the No. 1 side defroster nozzle in the direction indicated by the arrow to disengage the 3 claws and remove the No. 1 side defroster nozzle.


21. REMOVE NO. 2 INSTRUMENT PANEL REGISTER

- Pull the No. 2 instrument panel register in the direction indicated by the arrow to disengage the claw and clip.

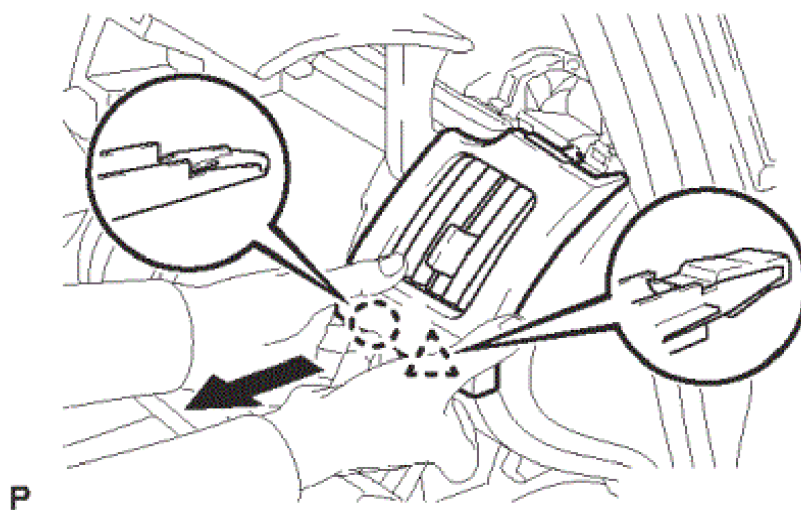

[Click to Enlarge](#)


- Pull the No. 2 instrument panel register in the direction indicated by the arrow to disengage the 2 claws and remove the No. 2 instrument panel register.

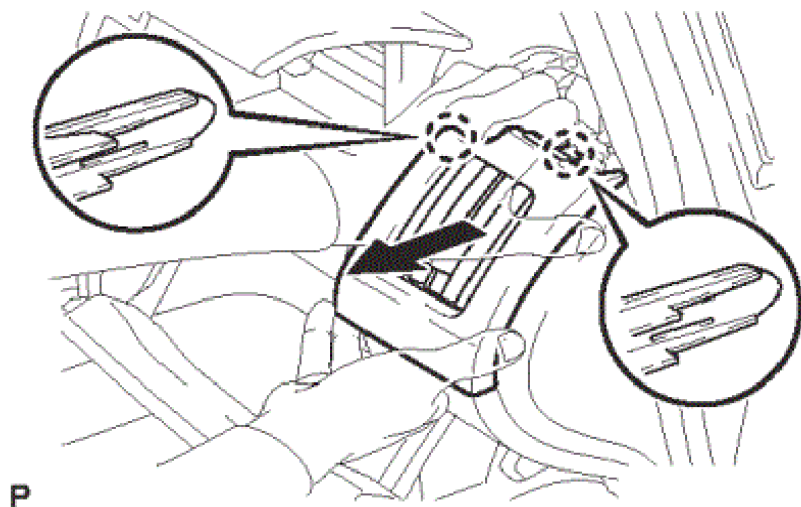

Click to Enlarge

22. REMOVE GLOVE COMPARTMENT DOOR

- Open the glove compartment door assembly.
- Pull the glove compartment door in the direction indicated by the arrow to disengage the 7 claws.

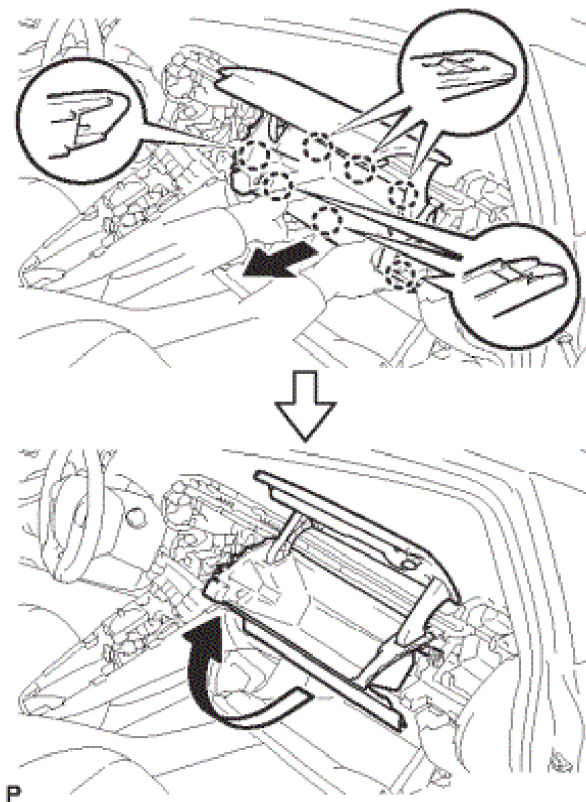


Click to Enlarge

- Pull the glove compartment door in the direction indicated by the arrow to remove the glove compartment door.

23. DISCONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP RH

24. REMOVE INSTRUMENT PANEL FINISH PANEL END RH


- Pull the instrument panel finish panel end RH in the direction indicated by the arrow to disengage the 4 claws.

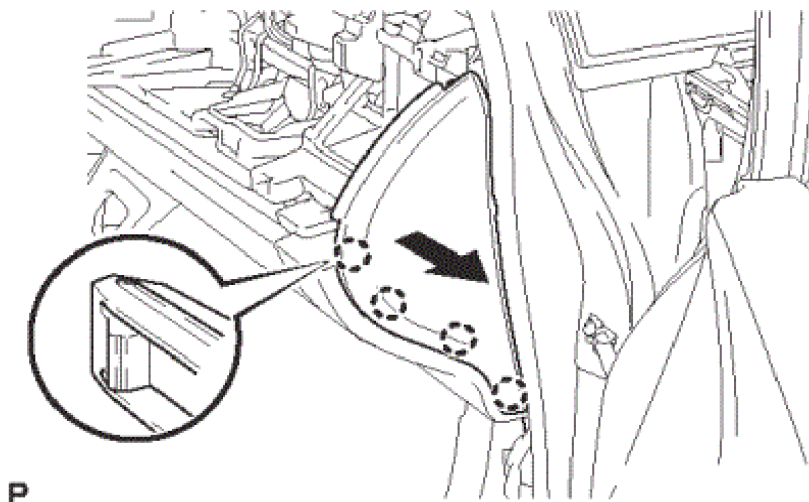

P

[Click to Enlarge](#)


- Disengage the guide as shown in the illustration.

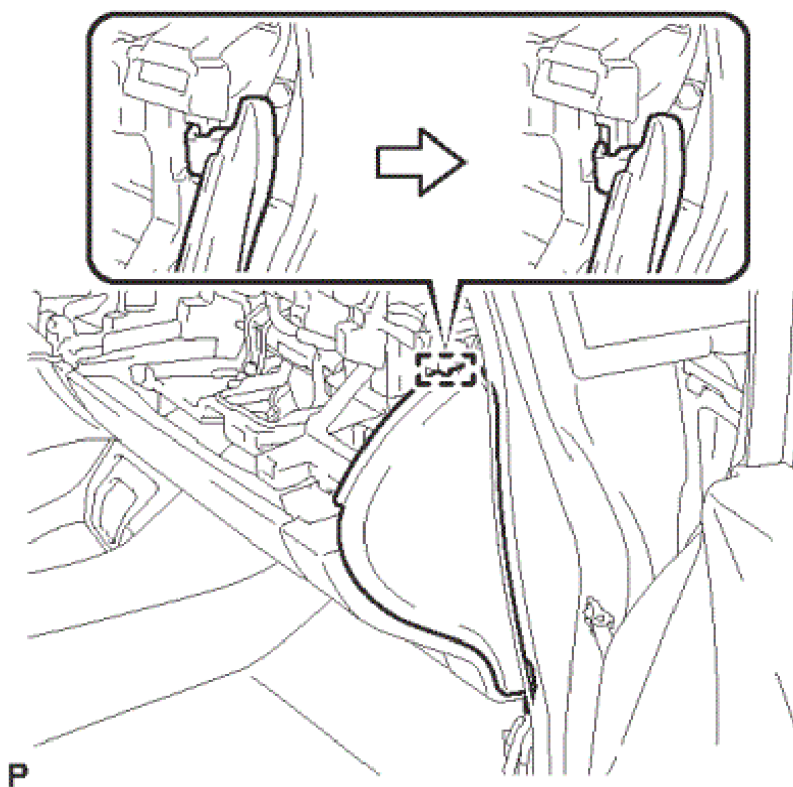

P

[Click to Enlarge](#)

- Disengage the guide and remove the instrument panel finish panel end RH as shown in the illustration.

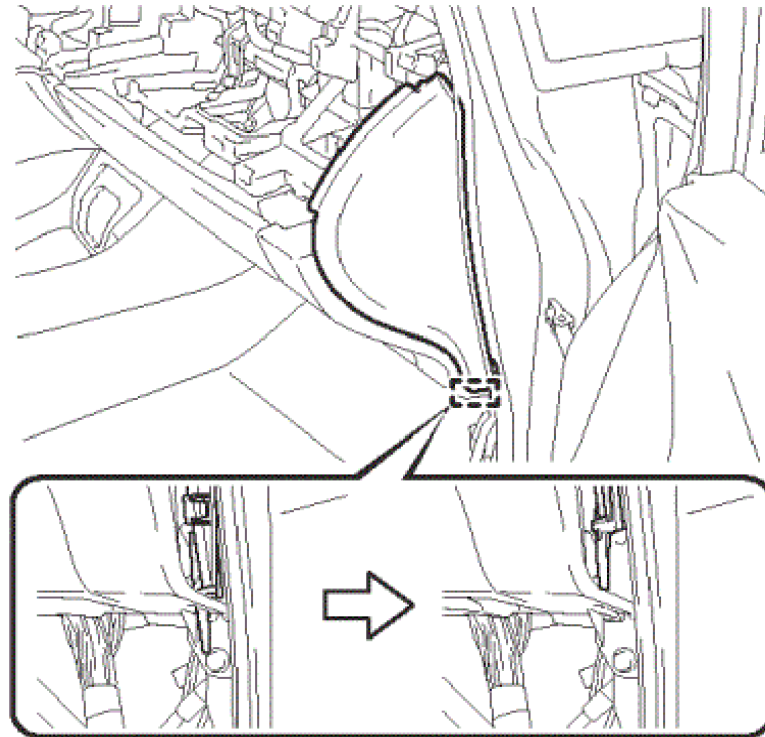


P

[Click to Enlarge](#)

25. REMOVE FRONT PILLAR GARNISH LH 2015 MY Prius [08/2014 -]; INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+

26. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH

- Disengage the 3 claws and front pillar garnish corner piece LH as shown in the illustration.

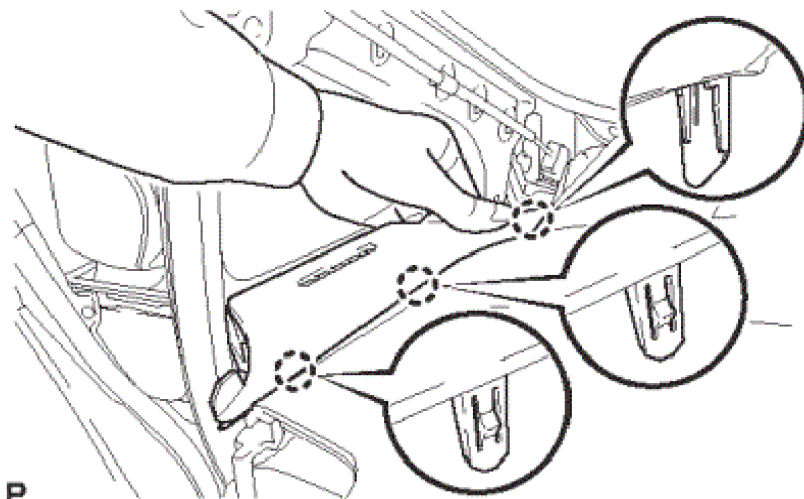


P

[Click to Enlarge](#)

27. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

- Pull the No. 1 instrument panel speaker panel sub-assembly in the direction indicated by the arrow to disengage the 6 claws and 2 guides, and remove the No. 1 instrument panel speaker panel sub-assembly.

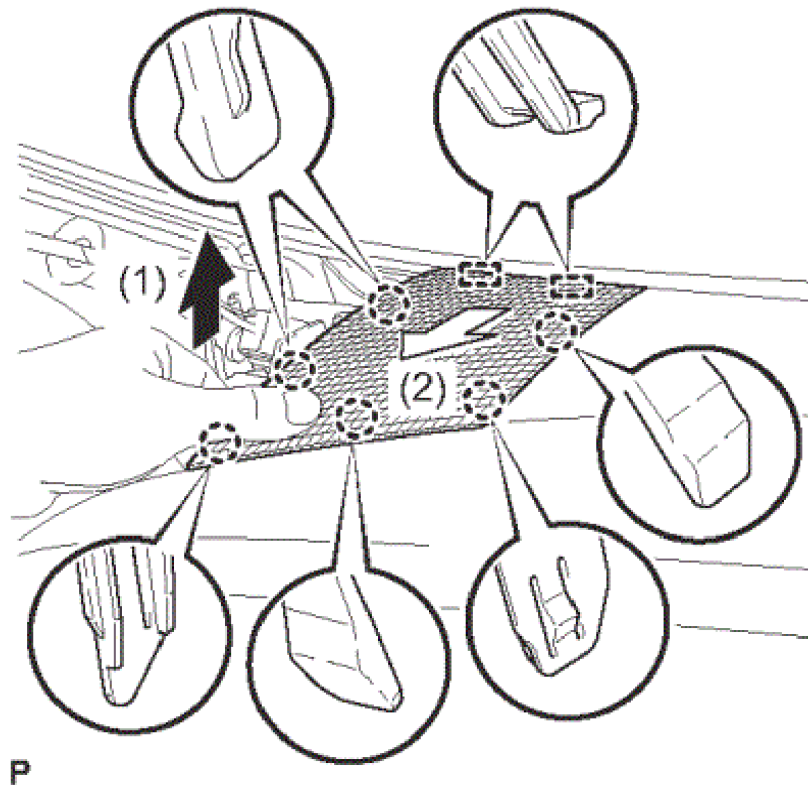

Click to Enlarge

28. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY 2015 MY Prius [08/2014 -];
AUDIO / VIDEO: INSTRUMENT PANEL SPEAKER: REMOVAL+

29. REMOVE FRONT PILLAR GARNISH RH


NOTE

HINT:

Use the same procedure for the RH side and LH side 2015 MY Prius [08/2014 -];
 INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL+.

30. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH

- Disengage the 3 claws and front pillar garnish corner piece RH as shown in the illustration.

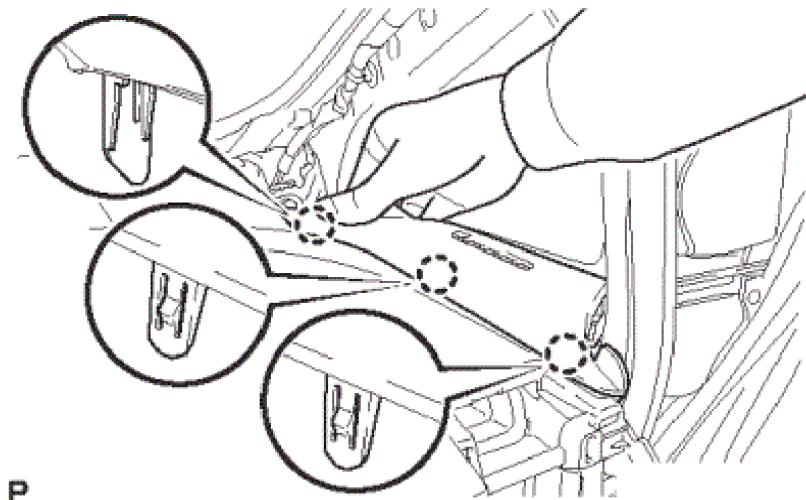


P

Click to Enlarge

31. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

- Pull the No. 2 instrument panel speaker panel sub-assembly in the direction indicated by the arrow to disengage the 6 claws and 2 guides, and remove the No. 2 instrument panel speaker panel sub-assembly.

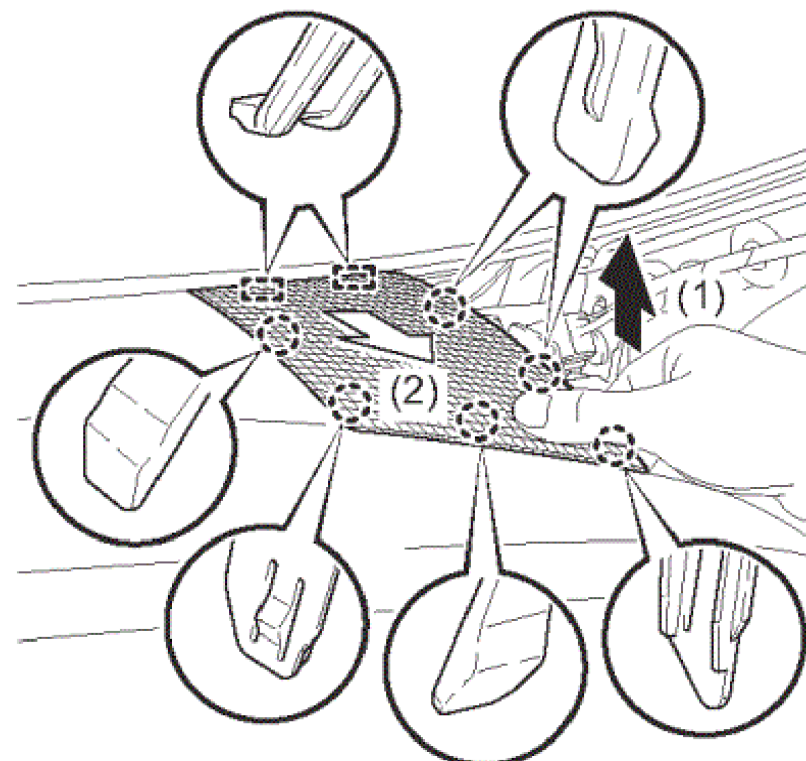

P

Click to Enlarge

32. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY


NOTE

HINT:

Use the same procedure for the RH side and LH side 2015 MY Prius [08/2014 -];
AUDIO / VIDEO: INSTRUMENT PANEL SPEAKER: REMOVAL+.

33. REMOVE INSTRUMENT CLUSTER FINISH PANEL END (w/ Headup Display)


- Pull the instrument cluster finish panel end in the direction indicated by the arrow to disengage the 5 claws and 2 guides, and remove the instrument cluster finish panel end

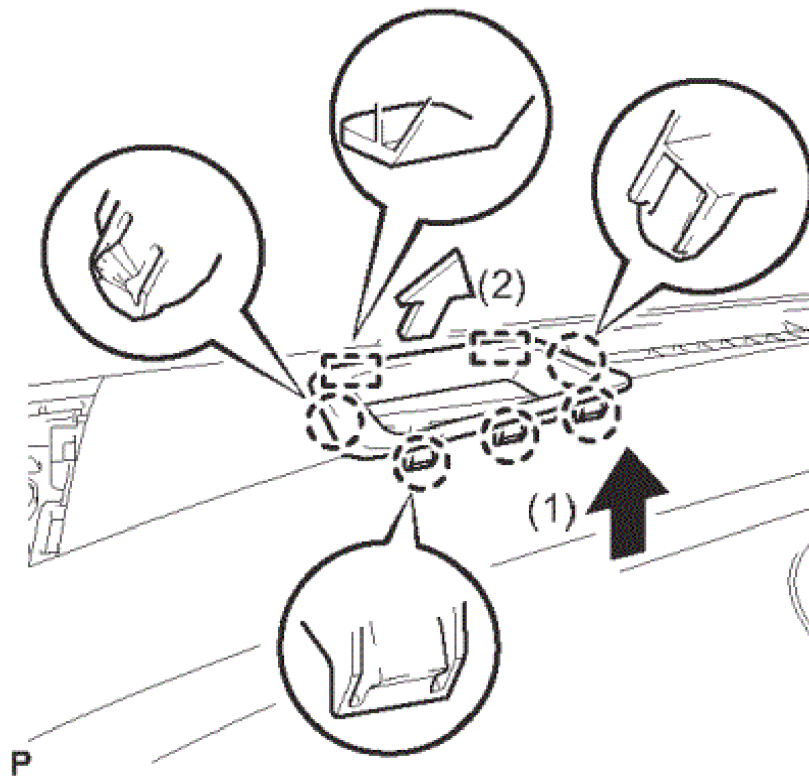

Click to Enlarge

34. REMOVE CENTER INSTRUMENT CLUSTER FINISH PANEL GARNISH

- Remove the 2 screws .
- Disengage the 7 claws.
- Disconnect the connector and remove the center instrument cluster finish panel garnish.

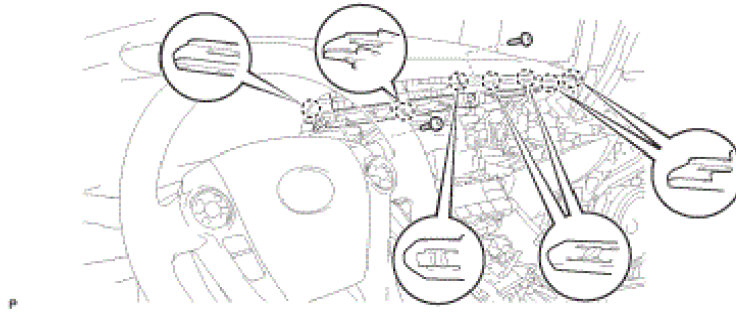


Click to Enlarge

**35. DISCONNECT NO. 3 INSTRUMENT PANEL WIRE 2015 MY Prius [08/2014 -];
SUPPLEMENTAL RESTRAINT SYSTEMS: FRONT PASSENGER AIRBAG
ASSEMBLY: REMOVAL+**


36. REMOVE UPPER INSTRUMENT PANEL ASSEMBLY

- Disconnect each connector.
- Disengage the 2 clamps.

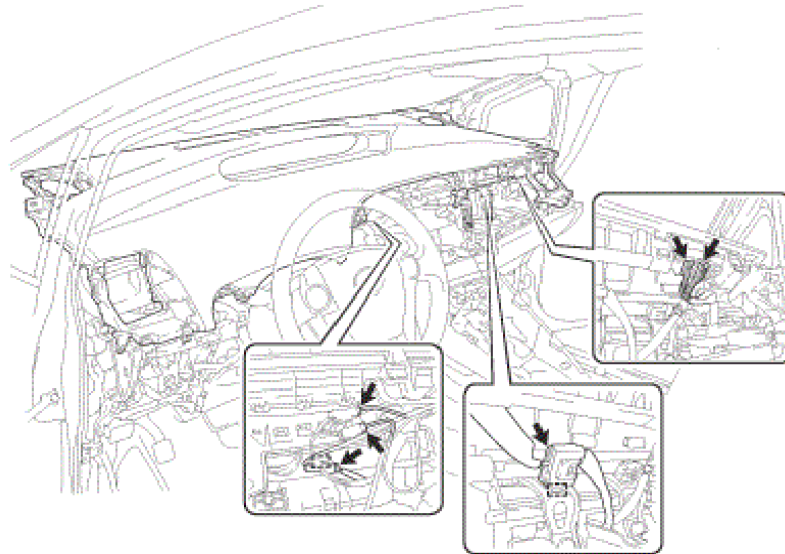

Click to Enlarge

- Remove the 2 bolts .
- Remove the 2 passenger airbag bolts .

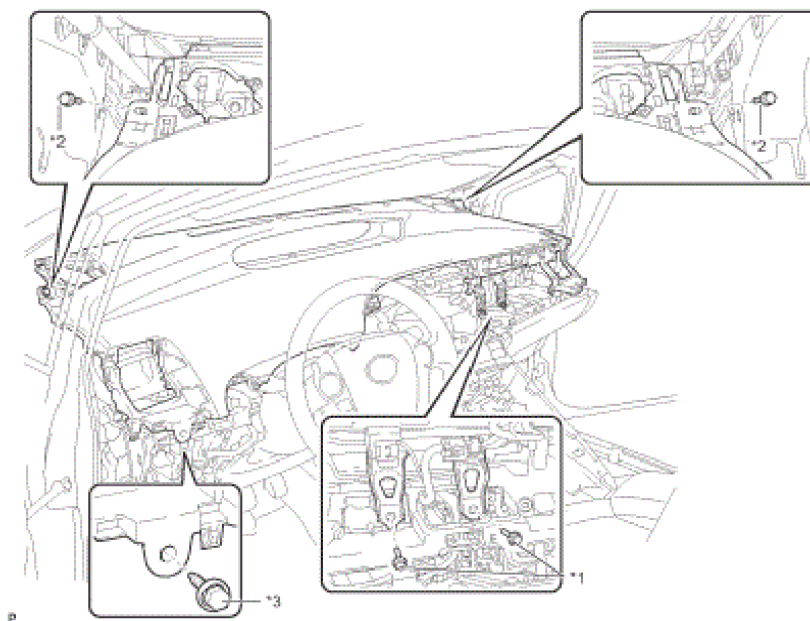


Click to Enlarge

Text in Illustration

*1	Passenger Airbag Bolt	*2	Bolt
*3	Bolt	-	-

- Remove the bolt .
- Pull the upper instrument panel assembly in the direction indicated by the arrow to disengage the 2 claws and 4 clips.
- Pull the upper instrument panel assembly in the direction indicated by the arrow to disengage the 5 claws and remove the upper instrument panel assembly.

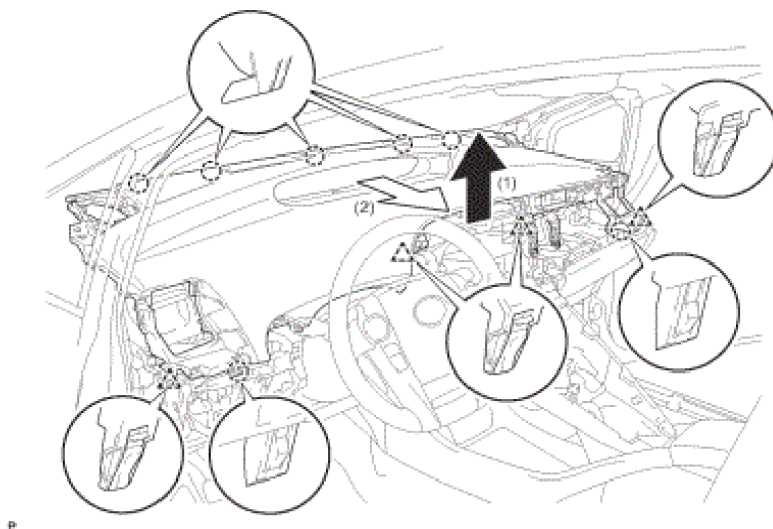

Click to Enlarge

Portions of materials contained herein have been reprinted under license from Toyota Motor Sales, U.S.A., Inc., License Agreement TMS1005. See details here (</sitecontent/Acknowledgements.html>).

Copyright ©2017 by Chilton, an imprint of Cengage Learning

(/lh/Home/Index/mwellX164f29DSzF8Z-y3zcAtIOITRe8tRypYly6211RVAzw1)Home

Terms and Conditions (http://www.cengage.com/content/footer/terms_of_use.aspx)

Privacy Statement (http://www.cengage.com/content/footer/privacy_statement.aspx)

Contact Us (<http://www.cengage.com/contact/>)

