

Required Maintenance

NOTE: For demonstration purposes, this table only looks at the first 200,000 km of your vehicle's life. These required services should continue to be performed at the indicated intervals.

| Service | Service interval (.000 km /or months, whichever comes first) | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|----|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|---|---------------------------------------|
| | Service interval (.000 km) | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 | 168 | 176 | 184 | | 192 | 200 | |
| | Service interval (months) | 6 | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 | 126 | 132 | 138 | 144 | 150 | | |
| All models | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Oil & Filter Service 8,000 km / 6 months, then every 16,000 km / 12 months * | • | •* | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | Continue every 16,000 km or 12 months |
| Maintenance Service 32,000 km / 24 months, then every 16,000 km / 12 months | | | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | Continue every 16,000 km or 12 months | |
| Replace Cabin Air Filter 16,000 km / 12 months | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | Continue every 16,000 km or 12 months | |
| Brake Service 32,000 km / 24 months | | | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | Continue every 32,000 km or 24 months | |
| Brake Fluid Replacement 48,000 km / 36 months | | | | | | • | | | | | | • | | | | | | | | | | | | | | • | Continue every 48,000 km or 36 months | |
| Replace Super Long Life Coolant 160,000 km / 120 months, then every 80,000 km / 60 months | | | | | | | | | | | | | | | | | | | | | | | | | | • | Continue every 80,000 km or 60 months | |
| Replace Iridium Spark Plugs 192,000 km / 144 months | | | | | | | | | | | | | | | | | | | | | | | | | | • | Continue every 192,000 km or 144 months | |
| Replace Standard Spark Plugs [Tacoma V6 only] 48,000 km / 36 months | | | | | | | • | | | | | | • | | | | | | | | | | | | | • | Continue every 48,000 km or 36 months | |
| All Hybrids | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Replace Inverter Coolant 160,000 km / 120 months, then every 80,000 km / 60 months | | | | | | | | | | | | | | | | | | | | | | | | | | | • | Continue every 80,000 km or 60 months |
| AWD/4WD/RWD Vehicles | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Tighten and/or Lubricate Propeller Shaft 16,000 km / 12 months | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | Continue every 16,000 km or 12 months | |
| Sienna AWD and Highlander Hybrid | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Tighten Rear Driveshaft Inboard CV Joint Nuts 16,000 km / 12 months | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | Continue every 16,000 km or 12 months | |

The Maintenance Menu provides a vehicle specific summary of your vehicle's maintenance requirements. Visit www.toyota.ca or ask your Toyota Service Advisor for your personalized copy.

* Oil & Filter Service is also required at 16,000 km.

Required Maintenance

REGULAR MAINTENANCE SERVICE

Your Toyota requires the following regularly scheduled maintenance at the interval indicated on page 25.

OIL & FILTER SERVICE

- Replace engine oil & filter.
- Remove & inspect air filter element (Replace if needed).
- Lubricate locks, latches & hinges.
- Inspect lights, horn & wipers for proper function.
- Inspect coolant, brake & washer fluid levels.
- Inspect tires & adjust pressure as required, including spare. Rotate tires if needed.

MAINTENANCE SERVICE

- Replace engine oil & filter.
- Remove & inspect air filter element (Replace if needed).
- Lubricate locks, latches & hinges.
- Inspect lights, horn & wipers for proper function.
- Inspect coolant, brake, and washer fluid levels.
- Inspect automatic transmission, manual transmission, hybrid transaxle, differential and transfer case for leaks.
- Perform battery service and comprehensive electrical charging system evaluation (except Hybrids)
- Inspect valve clearance audibly.
- Inspect drive belts for damage. Adjust belt tension if required.
- Inspect steering linkage and suspension parts for looseness, damage or leakage.
- Inspect ball joints & dust covers, drive shaft and steering rack boots, chassis nuts & bolts for looseness or damage.
- Tighten rear driveshaft inboard constant velocity joint nuts (if applicable) .
- Remove wheel and brake drum if equipped. Inspect brake linings, drums, pads, rotors, calipers, lines and hoses.
- Inspect exhaust system, fuel lines & connections, fuel tank vapour vent system hoses, fuel tank bands and fuel tank cap gasket.
- Inspect tires & adjust pressure as required, including spare. Rotate tires if needed.
- Road test.

SPECIAL OPERATING CONDITIONS

If you primarily operate your vehicle under any of the following conditions, please refer to additional maintenance requirements, shown below:

1. Short trips of less than 5 km (or less than 8 km in temperatures below 0°C).
2. Towing a trailer, using a camper or car top carrier.
3. Driving on dusty or muddy roads.
4. Frequent mountainous driving.

ADDITIONAL MAINTENANCE REQUIREMENTS

- Inspect brakes, steering and suspension components every 6 months/8,000 km.
- Inspect driveshaft boots, propeller shaft and body/chassis bolts, every 6 months/8,000 km.
- Change manual transmission, transfer case and differential fluids every 24 months/32,000 km.
- Replace automatic transmission fluid every 72 months/96,000 km (for condition # 2 above, only).

OFF-ROAD MAINTENANCE REQUIREMENTS

If you are operating a four-wheel drive vehicle in off-road conditions, and have driven through deep sand, mud or water, you must immediately have the above additional maintenance requirements performed, as well as change all fluids, and lubricate suspension parts.