

# REMOVAL


1. REMOVE NO. 1 ENGINE UNDER COVER

2. REMOVE INLET AIR CLEANER ASSEMBLY\_ INFO

3. DRAIN COOLANT (for Engine)\_ INFO

4. REMOVE WATER PUMP ASSEMBLY

(a) Disconnect the water pump connector from the water pump assembly.

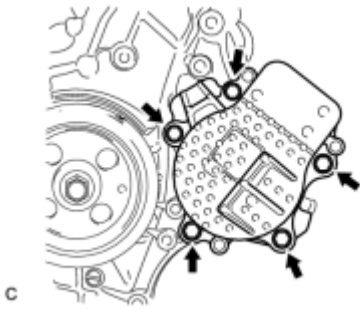

(b) Remove the 5 bolts and water pump assembly from the timing chain cover.



(c) Remove the water pump gasket from the water pump.