

Last Modified: 5-3-2010	6.4 A	From: 200904
Model Year: 2010	Model: Prius	Doc ID: RM000000AR900ZX
Title: SEAT: FRONT SEAT ASSEMBLY: REMOVAL (2010 Prius)		

REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD

INFO

2. REMOVE REAR DECK FLOOR BOX

INFO

3. REMOVE REAR NO. 3 FLOOR BOARD

INFO

4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected


INFO

5. REMOVE FRONT SEAT HEADREST ASSEMBLY

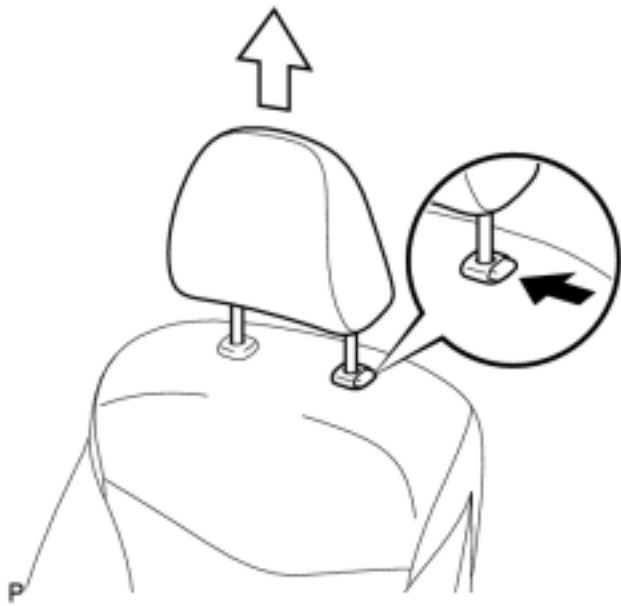

(a) Press the headrest support button and pull up the headrest as shown in the illustration to remove it.


6. REMOVE OUTER SEAT TRACK COVER

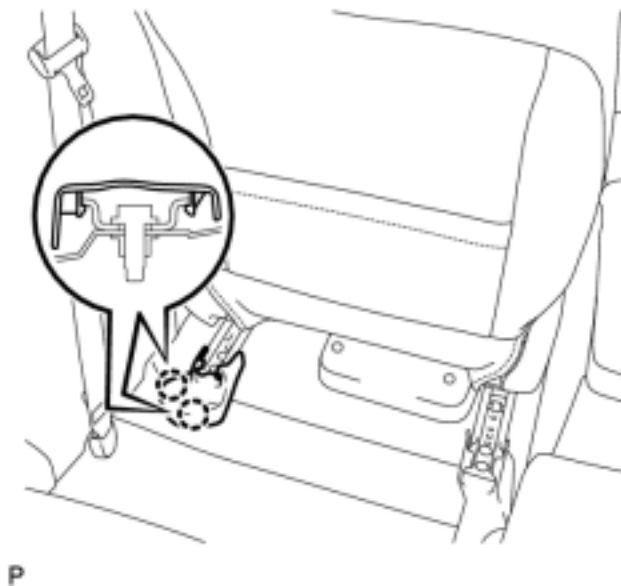

(a) Lift up the seat track adjusting handle and move the seat to the foremost position.

(b) Disengage the 2 claws and remove the outer seat track cover.

7. REMOVE INNER SEAT TRACK COVER

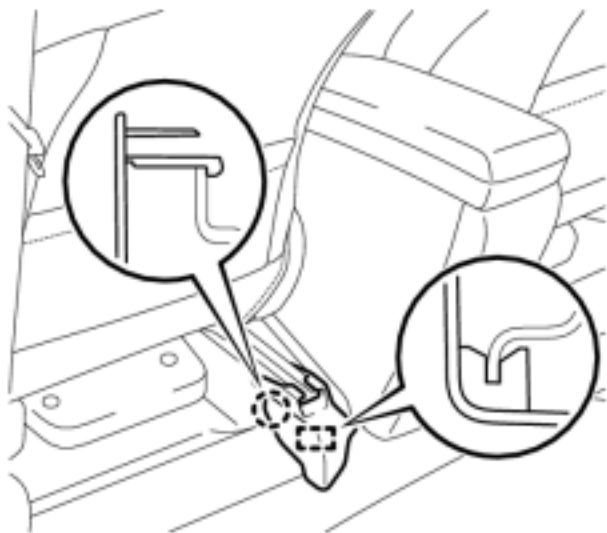


(a) Disengage the claw.

P

(b) Separate the guide and remove the inner seat track cover.

8. REMOVE FRONT SEAT ASSEMBLY

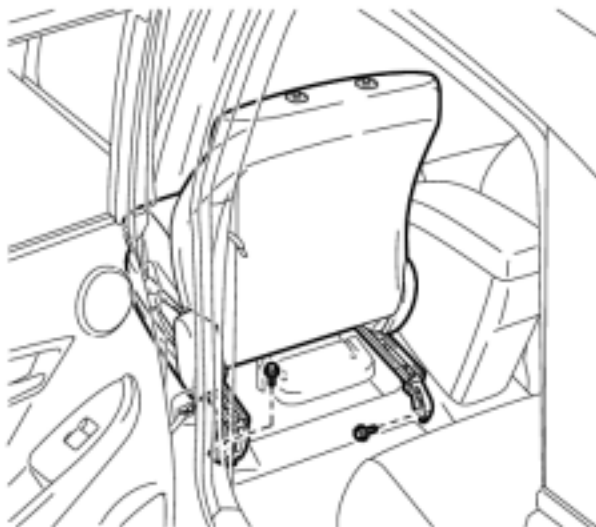

(a) Remove the 2 bolts on the rear side of the seat.

P

(b) Lift up the seat track adjusting handle and move the seat to the rearmost position.



(c) Remove the 2 bolts on the front side of the seat.

(d) Lift up the seat track adjusting handle and move the seat to the center position. Also, operate the reclining adjuster release handle and move the seatback to the upright position.

(e) Disconnect the connectors under the seat.

(f) Remove the seat.

NOTICE:

Be careful not to damage the vehicle body.

