


Last Modified: 5-3-2010	6.4 A	From: 200904
Model Year: 2010	Model: Prius	Doc ID: RM000002XNW00LX
Title: SEAT: REAR SEAT ASSEMBLY: REMOVAL (2010 Prius)		

REMOVAL

1. REMOVE REAR SEAT CUSHION ASSEMBLY

- (a) Disengage the 2 front hooks of the seat cushion from the vehicle body as shown in the illustration.

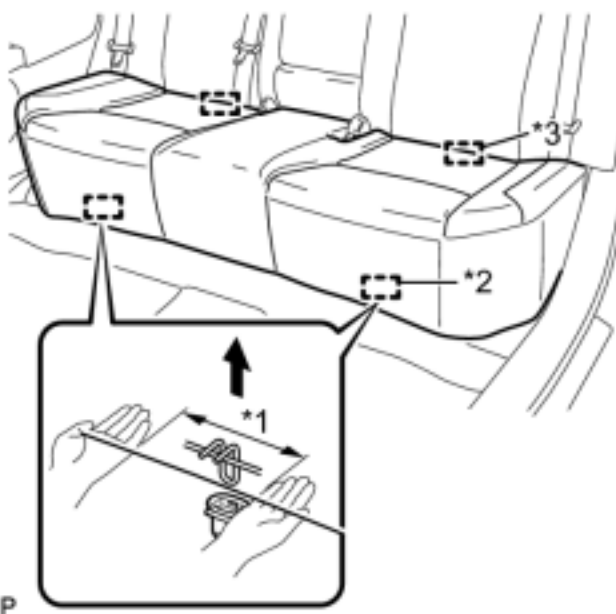

Text in Illustration	
*1	100 mm (3.94 in.) or less
*2	Hook
*3	Guide

NOTICE:

Follow the instructions below carefully as the cushion frame deforms easily.

- (1) Choose a hook to detach first. Place your hands near the hook as shown in the illustration. Then lift the seat cushion to detach the hook.
- (2) Repeat the above procedure for the other hook.


- (b) Disengage the 2 guides of the seat cushion from the seatback.

- (c) Remove the rear seat cushion assembly.

2. REMOVE REAR SIDE SEATBACK ASSEMBLY LH




(a) Remove the bolt.

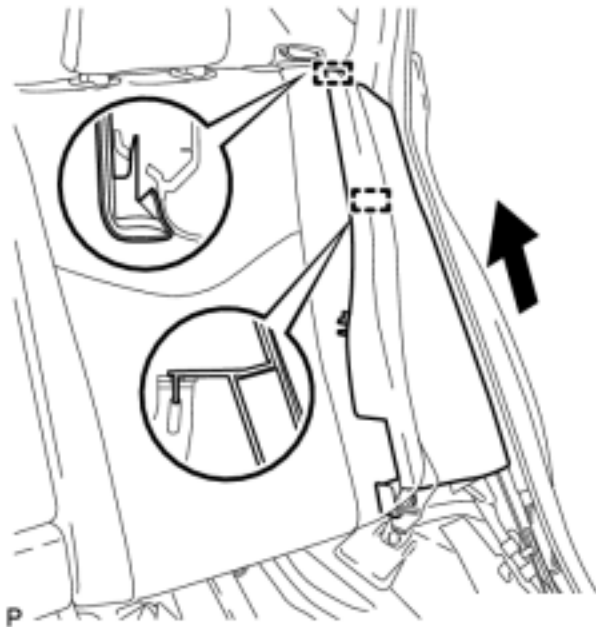


(b) Disengage the 2 guides and remove the rear side seatback assembly LH as shown in the illustration.

3. REMOVE REAR SIDE SEATBACK ASSEMBLY RH

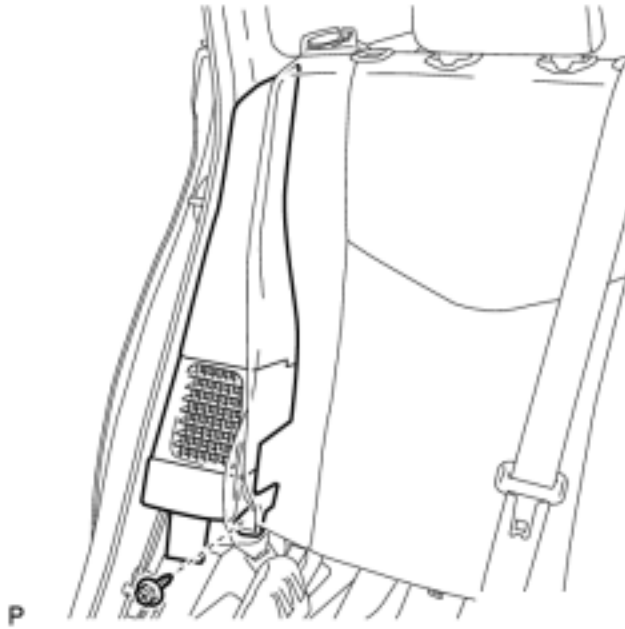

(a) Remove the bolt.

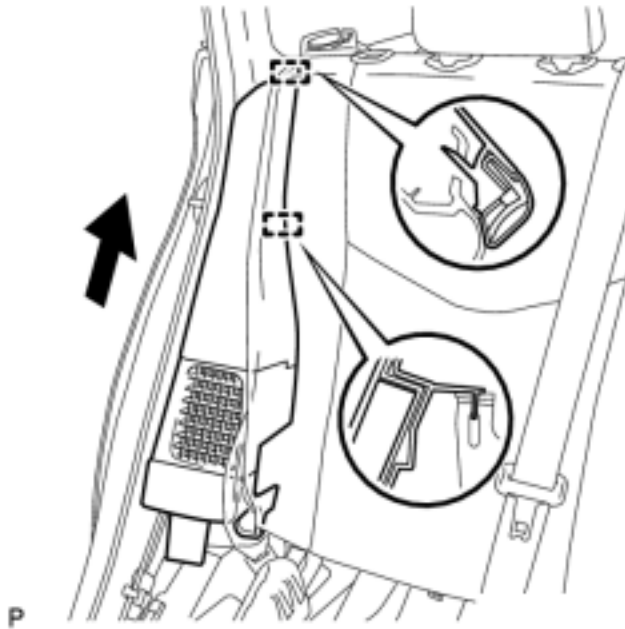

(b) Disengage the 2 guides and remove the rear side seatback assembly RH as shown in the illustration.

4. DISCONNECT REAR CENTER SEAT BELT ASSEMBLY


INFO

5. REMOVE REAR SEAT HEADREST ASSEMBLY LH




- (a) Press the 2 headrest support buttons and pull up the rear seat headrest assembly LH as shown in the illustration.

6. REMOVE REAR SEAT HEADREST ASSEMBLY RH

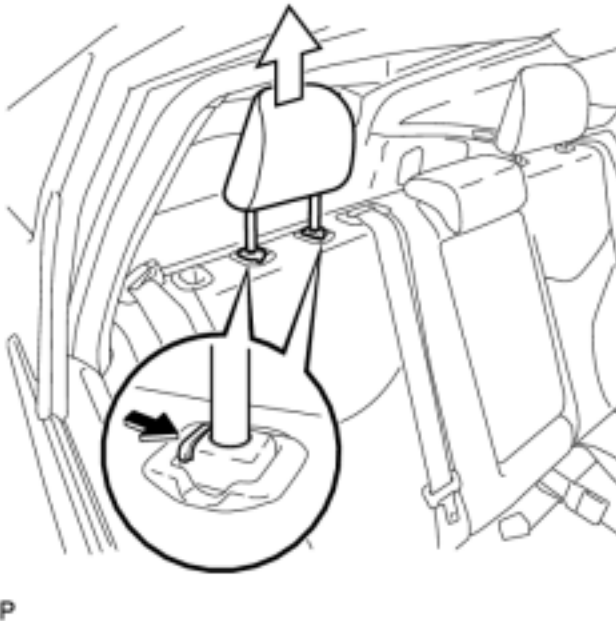

- (a) Press the 2 headrest support buttons and pull up the rear seat headrest assembly RH as shown in the illustration.


7. REMOVE REAR SEAT CENTER HEADREST ASSEMBLY

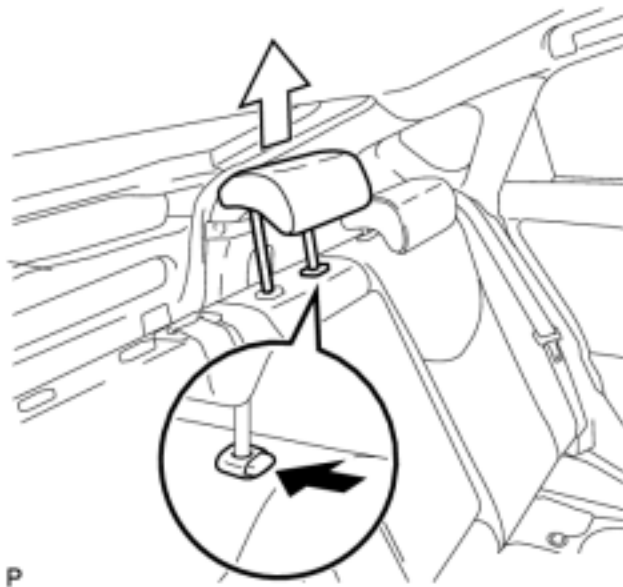

(a) Press the headrest support button and pull up the rear seat center headrest assembly as shown in the illustration.

8. REMOVE REAR SEATBACK ASSEMBLY LH

(a) Fold the rear seatback assembly LH forward.

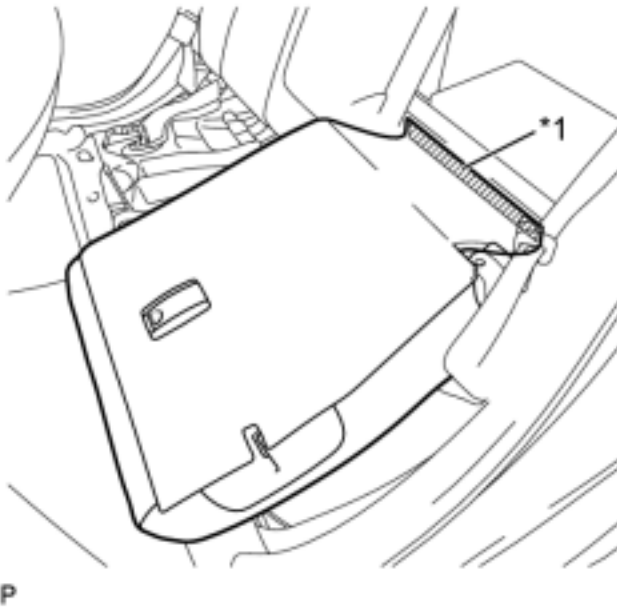


(b) Disengage the fastener.

Text in Illustration

*1

Fastener

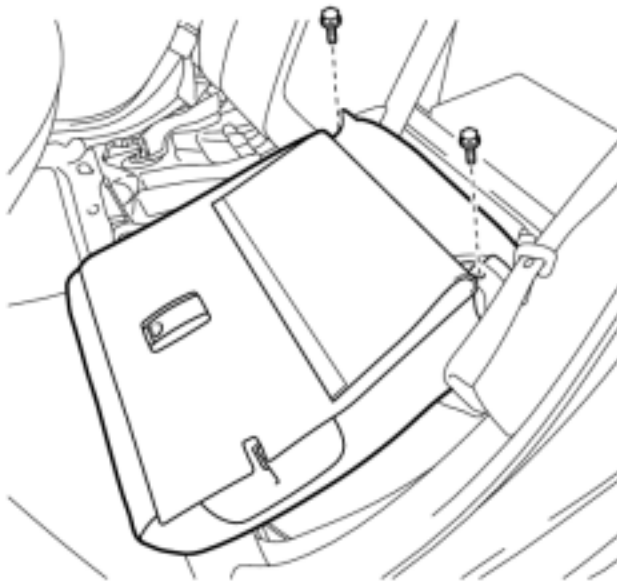


P

(c) Remove the 2 bolts and rear seatback assembly LH.

9. REMOVE REAR SEATBACK ASSEMBLY RH

(a) Fold the rear seatback assembly RH forward.

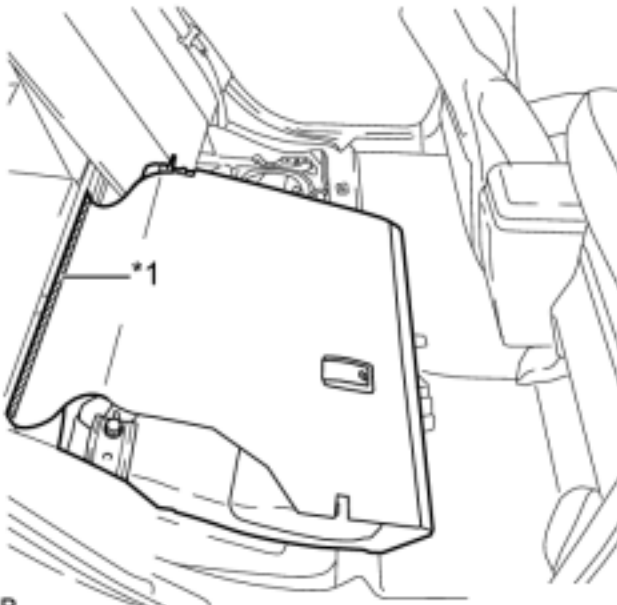

P

(b) Disengage the fastener.

Text in Illustration

*1

Fastener



(c) Remove the 2 bolts and rear seatback assembly RH.

