

2004 Prius Service

	Service Item	Interval	Notes
<input type="checkbox"/>	thousands of miles:	150	
<input type="checkbox"/>	months:	180	
<input type="checkbox"/>	Replace engine oil and oil filter [1]	x	[1] Reset the oil replacement reminder {"MAINT REQD"} light after replacing engine oil.
<input type="checkbox"/>	Inspect and adjust all fluid levels	x	
<input type="checkbox"/>	Rotate tires	x	39 PSI Front; 37 PSI Rear
<input type="checkbox"/>	inspect brake pads/discs	x[3]	[3] Inspect thickness measurement and disc runout.
<input checked="" type="checkbox"/>	Replace cabin air filter	x	DONE
<input checked="" type="checkbox"/>	Replace engine air filter	x	DONE
<input type="checkbox"/>	Inspect transaxle fluid	x	
<input type="checkbox"/>	Replace Engine & Inverter coolant	x[2]	[2] Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter.
<input type="checkbox"/>	Inspect ball joints & dust covers	x	
<input type="checkbox"/>	Inspect drive shaft boots	x	
<input type="checkbox"/>	Inspect exhaust system	x	
<input type="checkbox"/>	Inspect radiator & condenser	x	
<input type="checkbox"/>	Inspect steering gear box	x	
<input type="checkbox"/>	Inspect steering linkage & boots	x	
<input type="checkbox"/>	Inspect fuel lines, tank & vent	x	
<input type="checkbox"/>	Inspect fuel tank cap gasket	x	
<input type="checkbox"/>	Replace spark plugs	x[4]	[4] Required under the terms of the Emission Control Warranty for PZEV Prius in California, New York, Massachusetts, Maine, and Vermont.