


INSPECTION

1. INSPECT AIR FUEL RATIO SENSOR

Text in Illustration

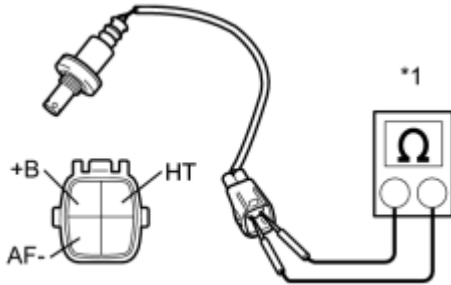

*1	Ohmmeter
----	----------

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
(HT) - (+B)	20°C (68°F)	1.8 to 3.4 Ω
(HT) - (AF-)	-	10 kΩ or higher

If the result is not as specified, replace the air fuel ratio sensor.