

DTC	P0A0F-204	Engine Failed to Start
DTC	P0A0F-205	Engine Failed to Start
DTC	P0A0F-533	Engine Failed to Start
DTC	P0A0F-534	Engine Failed to Start

DESCRIPTION

The HV control ECU performs the fail-safe control, when the ECM detects an error which will affect THS control.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A0F	204	Abnormal signal input from ECM (abnormal engine output)	<ul style="list-style-type: none"> ECM SFI system
P0A0F	205	Abnormal signal input from ECM (engine is unable to start)	<ul style="list-style-type: none"> ECM SFI system
P0A0F	533	Abnormal signal input from ECM (abnormal engine output by running out of fuel)	<ul style="list-style-type: none"> ECM SFI system
P0A0F	534	Abnormal signal input from ECM (engine is unable to start by running out of fuel)	<ul style="list-style-type: none"> ECM SFI system

HV

INSPECTION PROCEDURE

1	READ OUTPUT DTC (ENGINE)
----------	---------------------------------

- (a) Connect the intelligent tester to the DLC3.
- (b) Turn the power switch ON (IG).
- (c) Turn the intelligent tester ON.
- (d) Enter the following menus: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (e) Read DTCs.

Result:

DTCs are output

NG	GO TO RELEVANT DTC CHART
-----------	---------------------------------

OK

REPLACE ECM
