

n How to initialize the tire pressure warning system

STEP 1 Park the vehicle in safe place and turn the “POWER” switch OFF.


While the vehicle is moving, initialization is not performed.

STEP 2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 565)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

(Push Power Button twice without foot on brake)

STEP 3 Turn the “POWER” switch to ON mode. (Push Power Button twice without foot on brake)

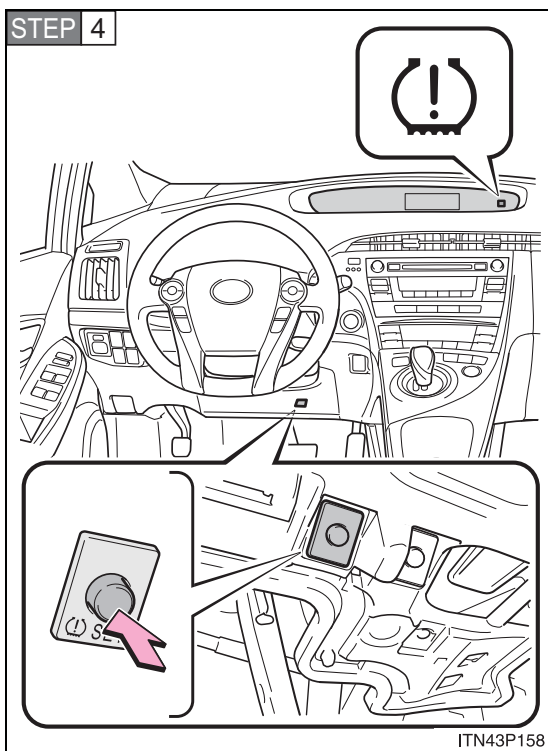

Push and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

STEP 5 Wait for a few minutes with the ON mode, and then turn “POWER” switch OFF. (Say wait 5 minutes?)