


# COMPONENTS


## ILLUSTRATION

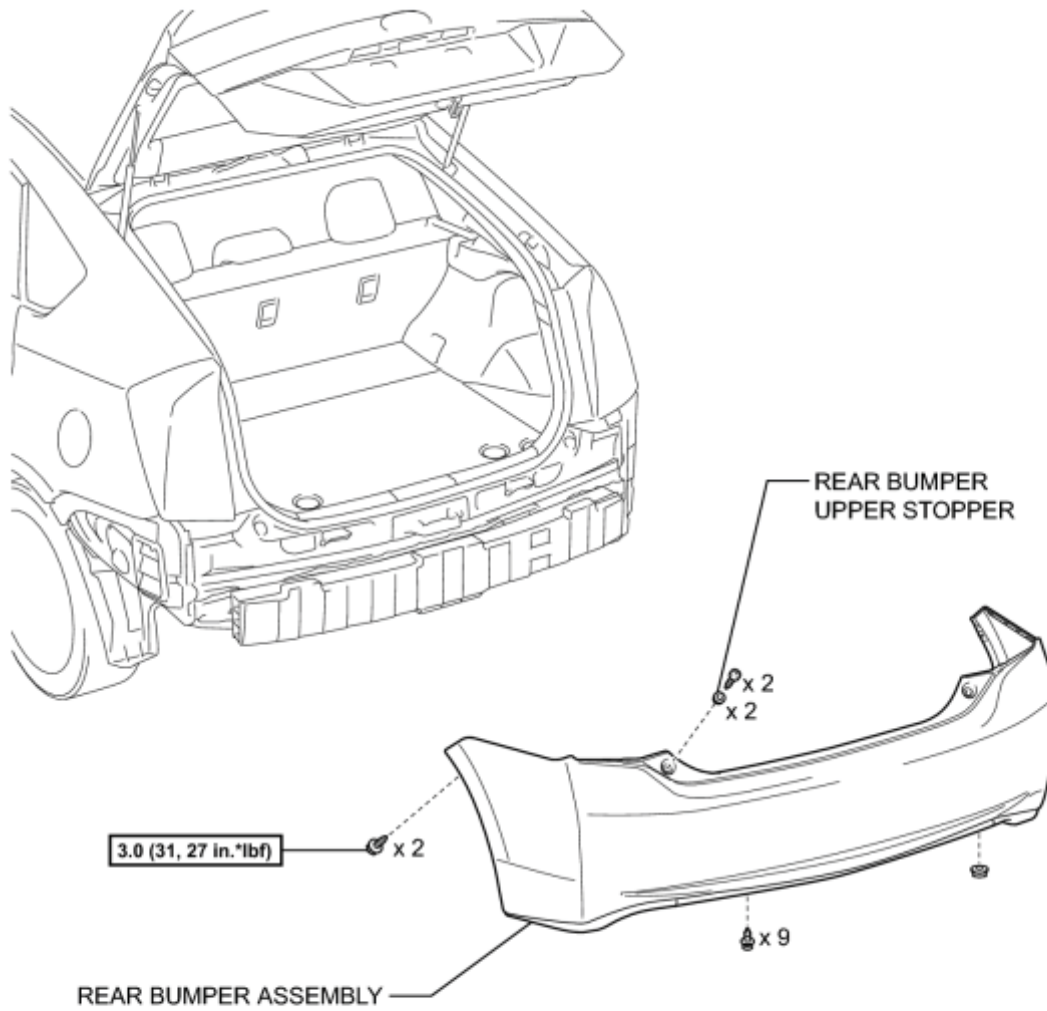

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque


P

## ILLUSTRATION

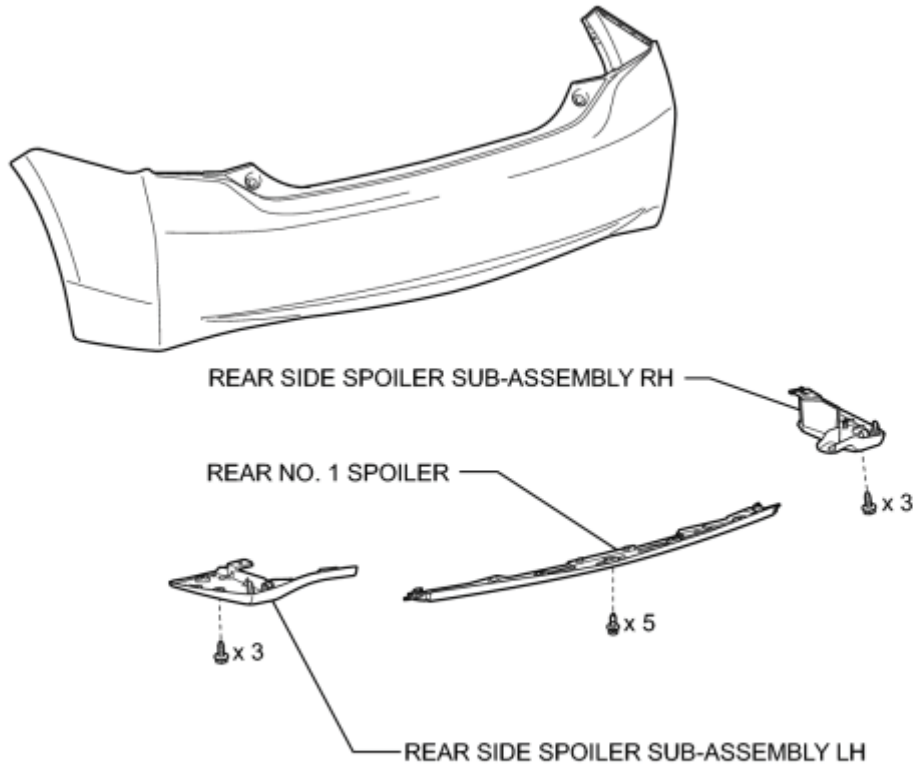

P

## ILLUSTRATION

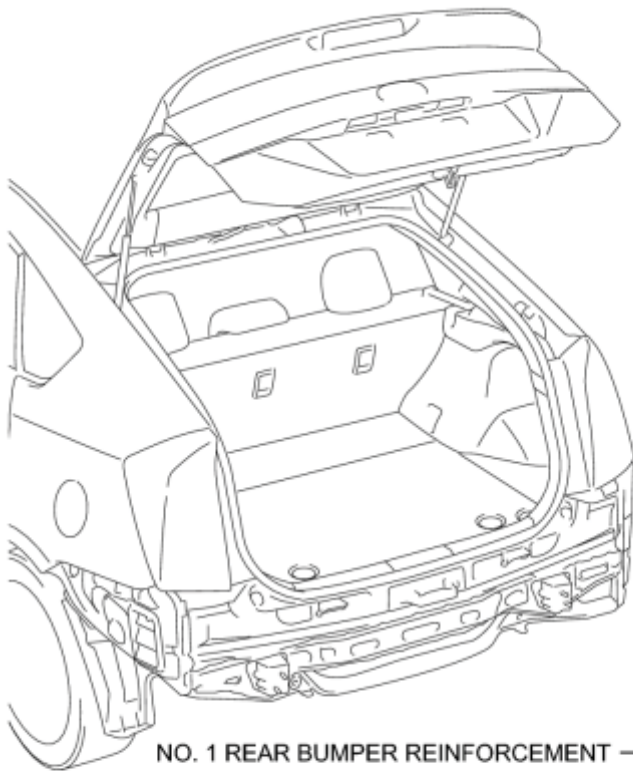

NO. 1 REAR BUMPER REINFORCEMENT




REAR BUMPER  
SIDE RETAINER RH

29 (296, 21)



REAR BUMPER  
SIDE RETAINER LH

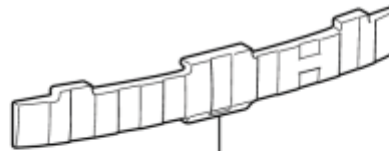


REAR BUMPER ENERGY ABSORBER

**N\*m (kgf\*cm, ft.\*lbf)**: Specified torque

P

# REMOVAL


## 1. REMOVE REAR BUMPER ASSEMBLY

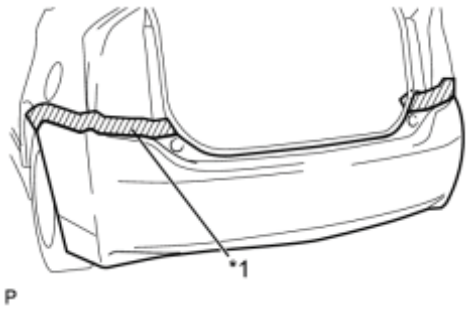


(a) Put protective tape around the rear bumper assembly.

### Text in Illustration

*1	Protective Tape
----	-----------------

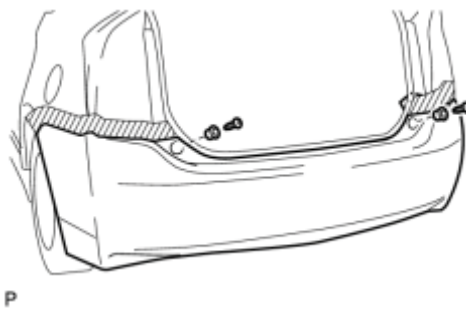


(b) Remove the 2 screws and 2 rear bumper upper stoppers.

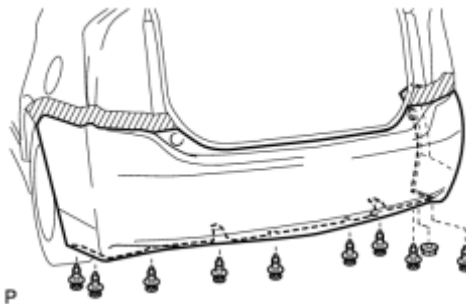

(c) Using a clip remover, remove the 9 clips.

(d) Remove the nut.

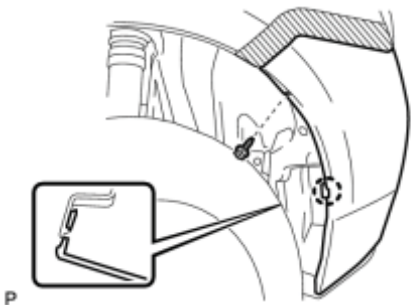

(e) Remove the screw.


HINT:

Use the same procedure for the RH side and LH side.

(f) Disengage the claw.

HINT:


Use the same procedure for the RH side and LH side.

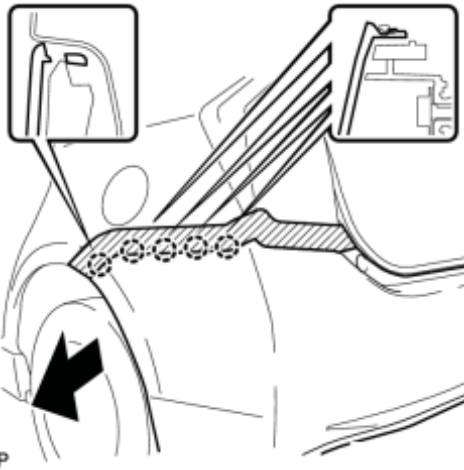

(g) Disengage the 5 claws.

HINT:


Use the same procedure for the RH side and LH side.

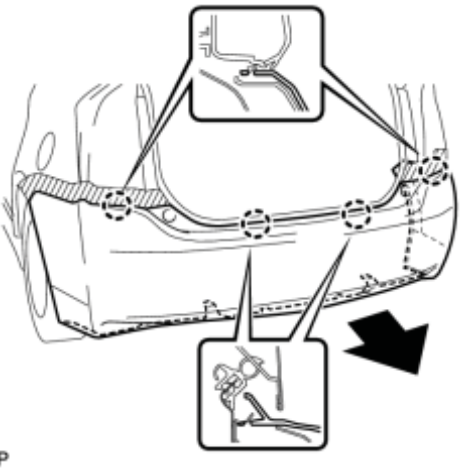

(h) Disengage the 4 claws and remove the rear bumper assembly as shown in the illustration.

# DISASSEMBLY


## 1. REMOVE REAR SIDE SPOILER SUB-ASSEMBLY LH

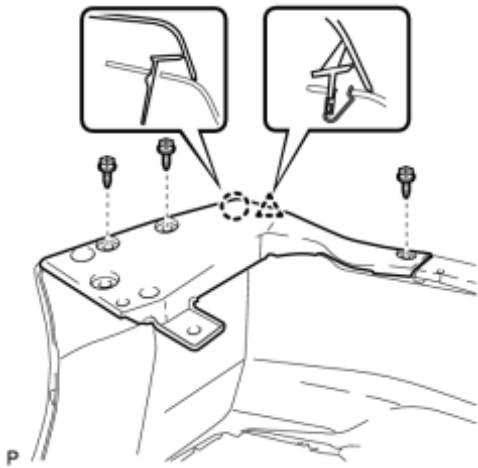

(a) Remove the 3 screws.

(b) Disengage the claw and clip, and remove the rear side spoiler sub-assembly LH.

## 2. REMOVE REAR SIDE SPOILER SUB-ASSEMBLY RH

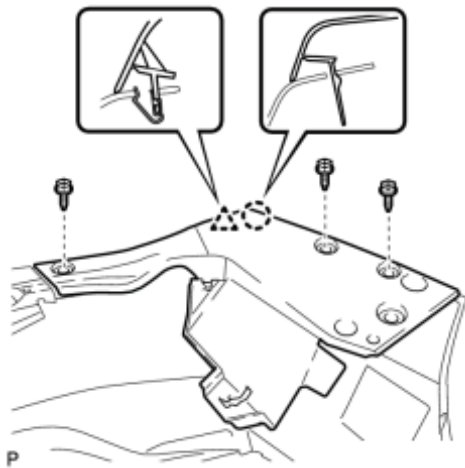


(a) Remove the 3 screws.

(b) Disengage the claw and clip, and remove the rear side spoiler sub-assembly RH.

## 3. REMOVE REAR NO. 1 SPOILER


(a) Remove the 5 clips.

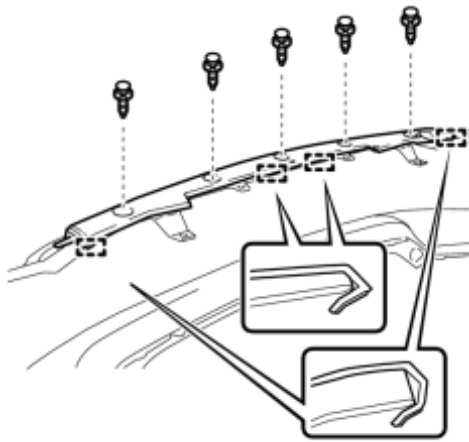

P

(b) Disengage the 4 guides and remove the rear No. 1 spoiler.

#### 4. REMOVE REAR BUMPER SIDE RETAINER LH

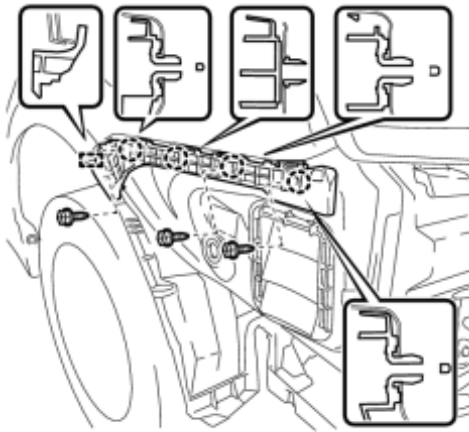

P

(a) Remove the 3 screws.

(b) Disengage the 4 claws and guide, and remove the rear bumper side retainer LH.


#### 5. REMOVE REAR BUMPER SIDE RETAINER RH

HINT:

Use the same procedure for the RH side and LH side.


#### 6. REMOVE REAR BUMPER ENERGY ABSORBER

(a) Disengage the 2 guides and remove the rear bumper energy absorber.

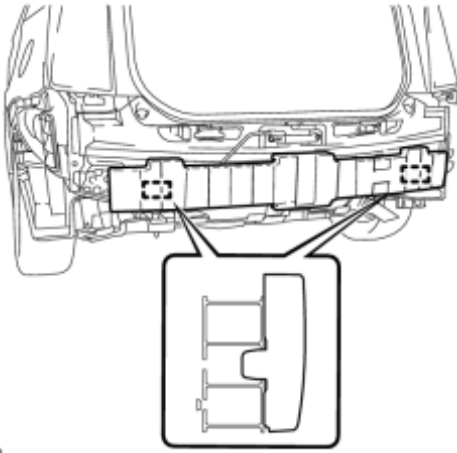

P

## 7. REMOVE NO. 1 REAR BUMPER REINFORCEMENT

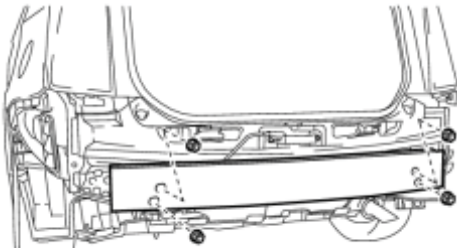


P

(a) Remove the 4 nuts and No. 1 rear bumper reinforcement.



# REASSEMBLY


## 1. INSTALL NO. 1 REAR BUMPER REINFORCEMENT

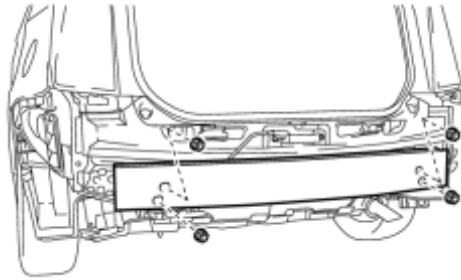

(a) Install the No. 1 rear bumper reinforcement with the 4 nuts.


Torque: **29 N·m (296 kgf·cm, 21ft·lbf)**

## 2. INSTALL REAR BUMPER ENERGY ABSORBER

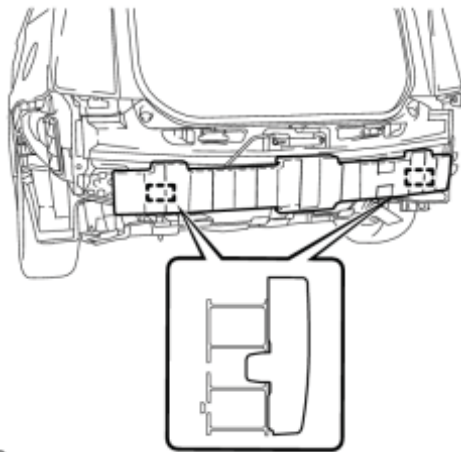

(a) Engage the 2 guides to install the rear bumper energy absorber.

## 3. INSTALL REAR BUMPER SIDE RETAINER LH

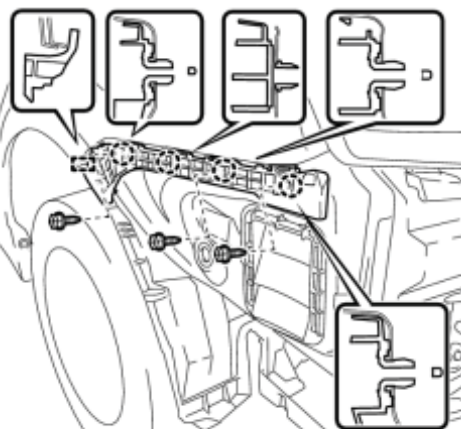

(a) Engage the guide and 4 claws.


(b) Install the rear bumper side retainer LH with the 3 screws.

#### 4. INSTALL REAR BUMPER SIDE RETAINER RH

HINT:

Use the same procedure for the RH side and LH side.


#### 5. INSTALL REAR NO. 1 SPOILER

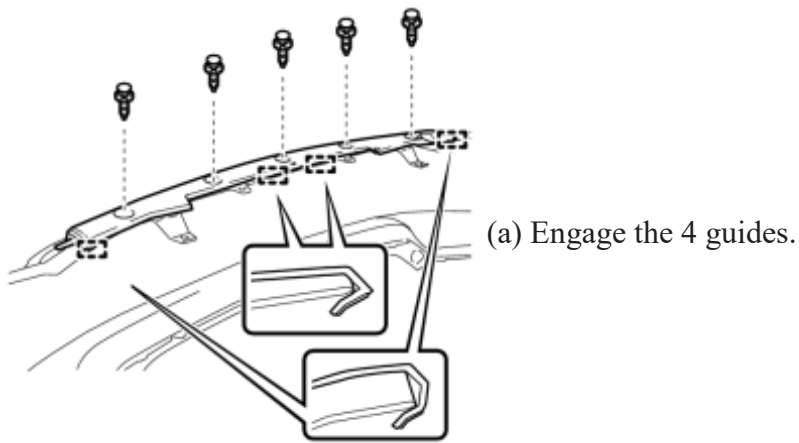

P

(b) Install the rear No. 1 spoiler with the 5 clips.


#### 6. INSTALL REAR SIDE SPOILER SUB-ASSEMBLY LH

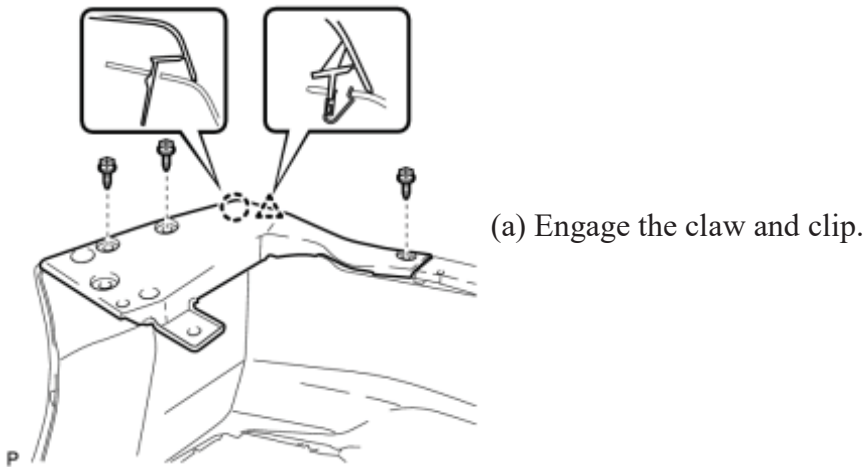

P

(b) Install the rear side spoiler sub-assembly LH with the 3 screws.

#### 7. INSTALL REAR SIDE SPOILER SUB-ASSEMBLY RH

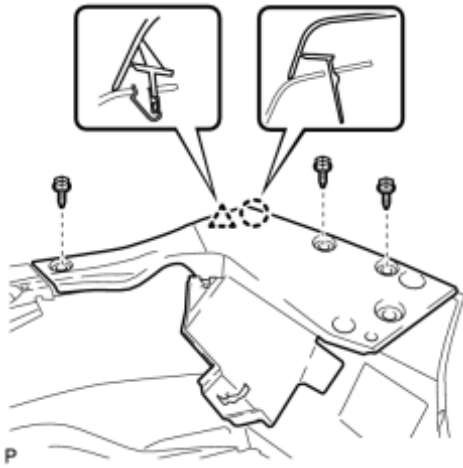


(a) Engage the claw and clip.


(b) Install the rear side spoiler sub-assembly RH with the 3 screws.

# INSTALLATION

## 1. INSTALL REAR BUMPER ASSEMBLY

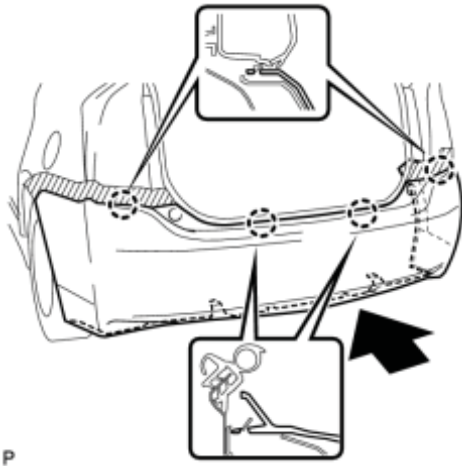


(a) Engage the 4 claws and install the rear bumper assembly as shown in the illustration.

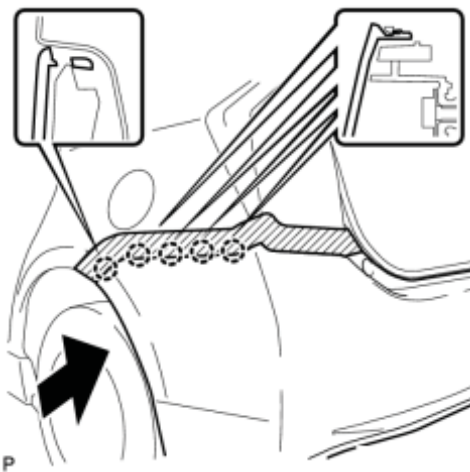

(b) Engage the 5 claws.

HINT:

Use the same procedure for the RH side and LH side.

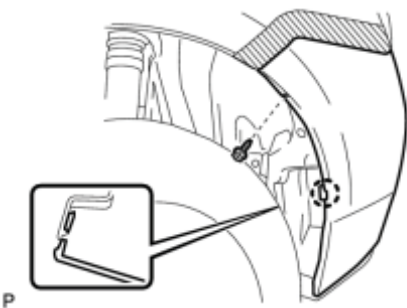

(c) Install the screw.

Torque: **3.0 N·m (31 kgf·cm, 27in·lbf)**


HINT:

Use the same procedure for the RH side and LH side.


(d) Engage the claw.

HINT:

Use the same procedure for the RH side and LH side.

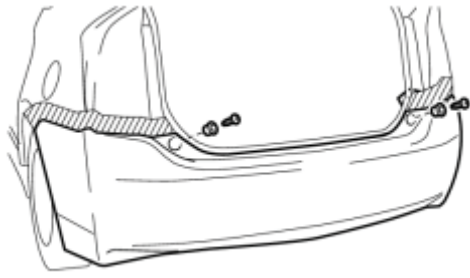

(e) Engage the 2 rear bumper upper stoppers and install the 2 screws.

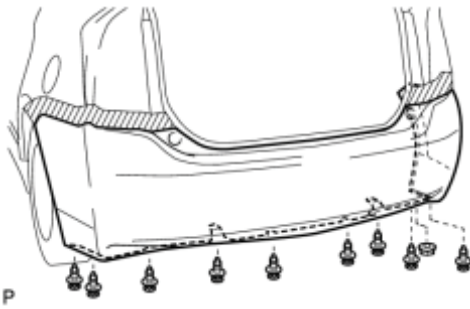

(f) Install the 9 clips.

(g) Install the nut.

## 2. BUMPER POSITION SETTING (w/ Advanced Parking Guidance System)

INFO