


### 31. REMOVE NO. 1 HYBRID BATTERY EXHAUST DUCT

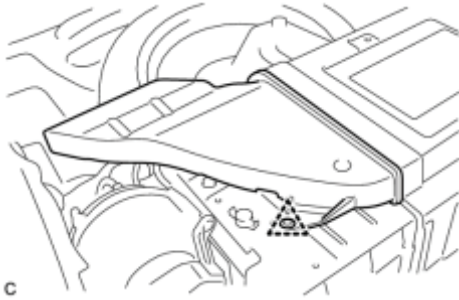


(a) Remove the clip and No. 1 hybrid battery exhaust duct.

### 32. REMOVE UPPER HYBRID BATTERY COVER SUB-ASSEMBLY

#### CAUTION:

Be sure to wear insulated gloves and protective goggles.

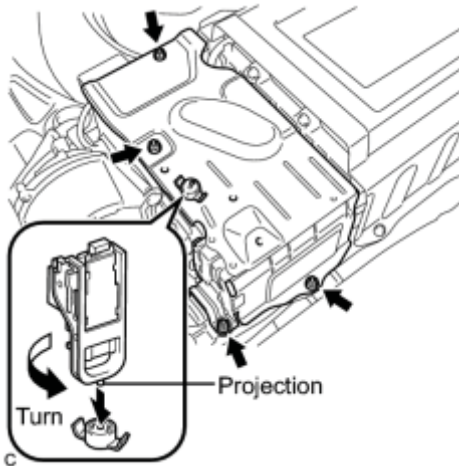

(a) Using the service plug grip, remove the battery cover lock striker.

#### HINT:

Insert the projection part of the service plug grip, and turn the button of the battery cover lock striker counterclockwise, and release the lock.

(b) Remove the 4 nuts and upper hybrid battery cover sub-assembly.

### 33. REMOVE NO. 1 HYBRID BATTERY INTAKE DUCT

(a) Remove the 2 clips and No. 1 hybrid battery intake duct.