



P

## ILLUSTRATION

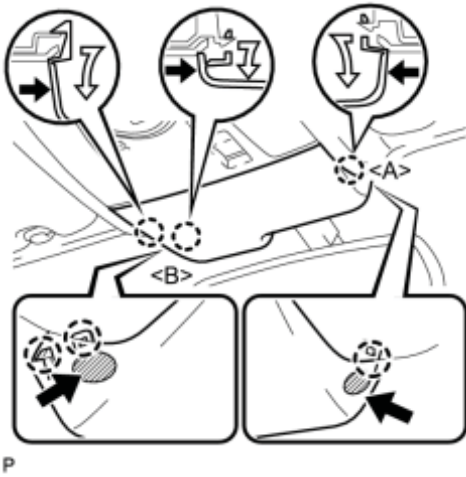

(a) Disengage the claw <A> as shown in the illustration.

(b) Disengage the 2 claws <B> as shown in the illustration.

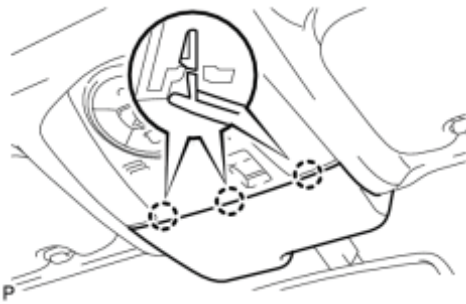

(c) Disengage the 3 claws and remove the roof top moulding.

#### 48. REMOVE LANE RECOGNITION CAMERA SENSOR ASSEMBLY (w/ Lane Keeping Assist System)

INFO

#### 49. REMOVE MAP LIGHT ASSEMBLY (w/o Sliding Roof)

INFO

#### 50. REMOVE MAP LIGHT ASSEMBLY (w/ Sliding Roof)

INFO

#### 51. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

INFO

#### 52. REMOVE FRONT ASSIST GRIP ASSEMBLY

(a) Using a clip remover, disengage the 4 claws.

NOTICE:

Do not forcibly pry the assist grip covers to prevent them from being deformed.


- Gently pry on the assist grip covers as shown in the illustration to remove them.



- Tape the clip remover tip before use.

P

(b) Pull off the 2 assist grip covers by hand.

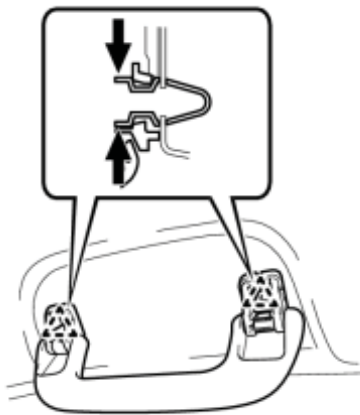

(c) Disengage the 2 clips and remove the front assist grip assembly.

P

(d) Remove the 2 clips from the vehicle body.

HINT:


Use the same procedure for the other front assist grip.

### 53. REMOVE REAR ASSIST GRIP ASSEMBLY

(a) Using a clip remover, disengage the 4 claws.

NOTICE:

Do not forcibly pry the assist grip covers to prevent them from being

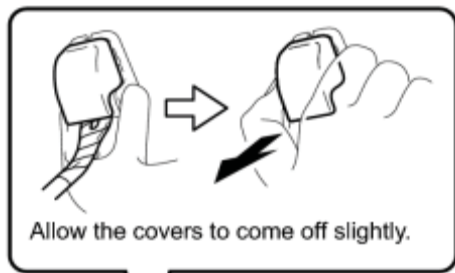


deformed.

- Gently pry on the assist grip covers as shown in the illustration to remove them.
- Tape the clip remover tip before use.



P

(b) Pull off the 2 assist grip covers by hand.

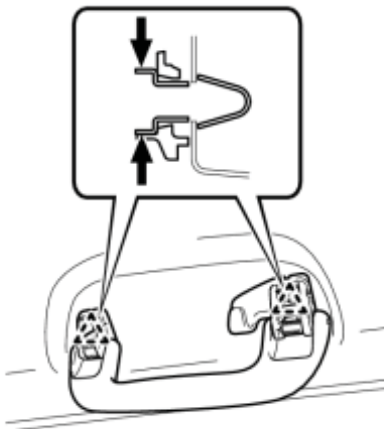

P

(c) Disengage the 2 clips and remove the rear assist grip assembly.

(d) Remove the 2 clips from the vehicle body.

HINT:

Use the same procedure for the other rear assist grip.

#### 54. REMOVE VISOR BRACKET COVER LH

(a) Using a moulding remover, disengage the 3 claws and remove the visor bracket cover LH.