

Help ensure the highest levels of safety, performance and reliability for your Toyota.

Here's what we recommend for your next service visit.

2017 Prius Prime



ENGINE TYPE:

Hybrid - 2ZR-FXE, CVT, 2WD

MILEAGE:

100,000

105,000 Miles

Recommended Maintenance

| | |
|--|--|
| Check Installation Of Driver's Floor Mat | Inspect Ball Joints And Dust Covers |
| Rotate Tires | Inspect Brake Lines And Hoses |
| Inspect Engine/Inverter Coolant [1] | Inspect Drive Shaft Boots |
| Inspect Wiper Blades | Inspect Steering Linkage And Boots |
| Inspect Rack-and-Pinion Assembly | Inspect Exhaust Pipes And Mountings |
| Inspect Radiator, Condenser and/or Intercooler (If Applicable) | Inspect Cabin Air Filter (If Equipped) |

| | |
|--------------------------------------|---|
| Inspect /Adjust All Fluid Levels [2] | Visually Inspect Brake Linings/Drums And Brake Pads/Discs [3] |
|--------------------------------------|---|

NOTE: If 0W-20 oil WAS NOT used at the last oil change, replace engine oil and oil filter.

Where and how you're driving impacts your servicing needs.

Please speak to your servicing dealer about any special operating condition.

Driving on dirt roads or on dusty roads

| | |
|---------------------------------------|---|
| Inspect Engine Air Filter | Torque Nuts And Bolts On Chassis And Body |
| Replace Engine Oil And Oil Filter [4] | |

Driving while towing, using a car-top carrier, or heavy vehicle loading [5]

| | |
|---------------------------------------|---|
| Replace Engine Oil And Oil Filter [4] | Torque Nuts And Bolts On Chassis And Body |
|---------------------------------------|---|

Repeated trips of less than five miles in temperatures below 32 F/ 0 C

| |
|---------------------------------------|
| Replace Engine Oil And Oil Filter [4] |
|---------------------------------------|

Extensive idling and or low speed driving for a long distance

| |
|---------------------------------------|
| Replace Engine Oil And Oil Filter [4] |
|---------------------------------------|

1. Refer to "Engine/Inverter Coolant" in the "Explanation of Maintenance Items" section.
2. Inspect sealed transmissions, transfer cases, and differentials for signs of leakage. If any leakage from a sealed component is suspected, it is recommended that you have the sealed component inspected by a Toyota dealer. Inspect power steering fluid (if equipped) and brake fluid level/condition. Inspect engine and inverter (if equipped) coolant level/condition/ freezing point. Your dealer may recommend services (Dealer-Recommended Maintenance) based on inspection results.
3. Thickness Measurement And Runout.
4. Reset "Maint Req'd" Light If Equipped after maintenance at every 5,000 miles.
5. Not all vehicles are designed for towing. Refer to your Vehicle Owner's Manual for details.