
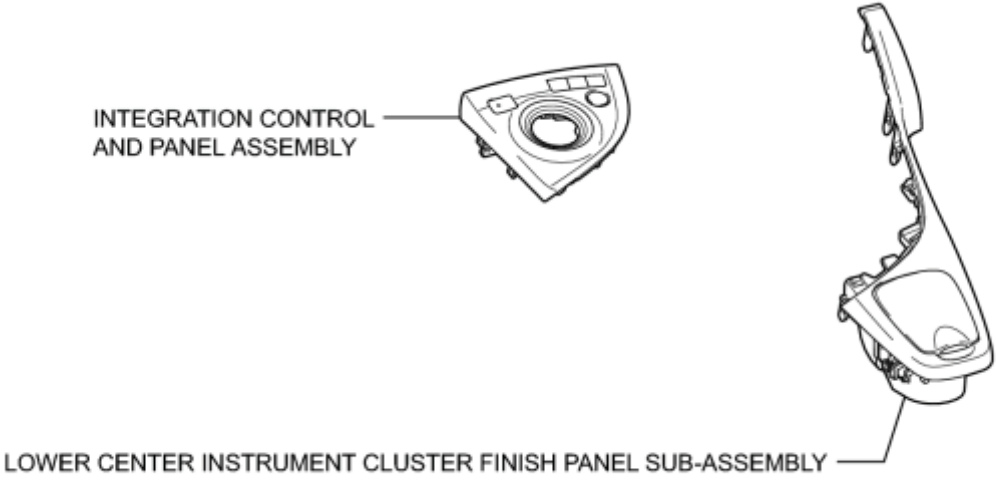


COMPONENTS

ILLUSTRATION

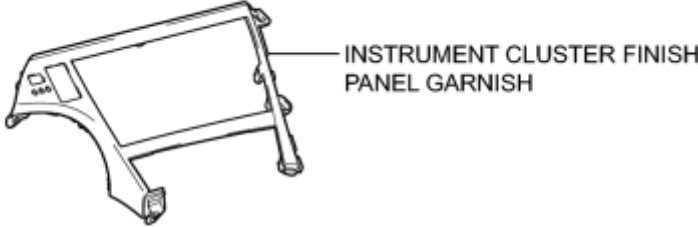

P


REMOVAL

1. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY_ INFO

2. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY_ INFO

3. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH_ INFO

4. REMOVE AIR CONDITIONING CONTROL ASSEMBLY

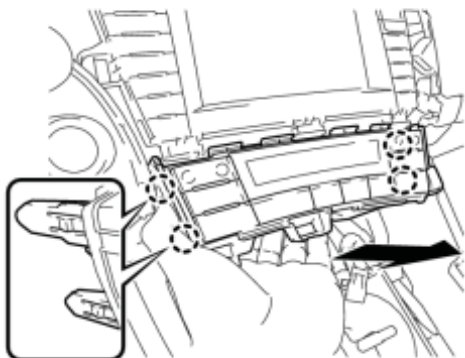

(a) Disengage the 4 claws and remove the air conditioning control assembly as shown in the illustration.

P

(b) Disconnect the connector.

NOTICE:

Since the connectors for the air conditioning control assembly and the integration control and panel sub-assembly are the same shape, mark them so that they will not be reconnected incorrectly.




INSTALLATION

1. INSTALL AIR CONDITIONING CONTROL ASSEMBLY

(a) Connect the connector.

NOTICE:

Since the connectors for the air conditioning control assembly and the integration control and panel sub-assembly are the same shape, take care to connect each connector to the correct component.

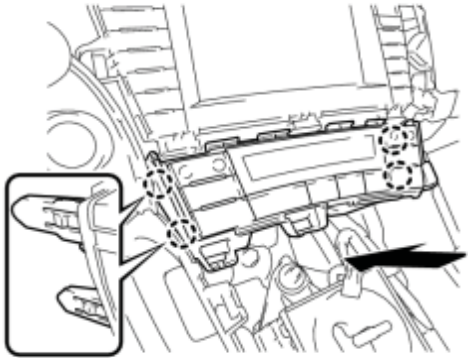

(b) Engage the 4 claws to install the air conditioning control assembly.

P

2. INSTALL INSTRUMENT CLUSTER FINISH PANEL GARNISH_ [INFO](#)

3. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY_ [INFO](#)

4. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY_ [INFO](#)

REMOVAL

1. PRECAUTION

INFO

2. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) INFO

3. REMOVE REAR DECK FLOOR BOX INFO

4. REMOVE REAR NO. 3 FLOOR BOARD INFO

5. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

6. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY

(a) Using a moulding remover, slightly lift the panel at the position shown in the illustration.

Text in Illustration

*a	Lift slightly
----	---------------



(b) Pull the integration control and panel assembly in the direction indicated by the arrow to disengage the 6 claws.


(c) Disconnect each connector and remove the integration control and panel assembly.

7. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

(a) Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 2 claws and 2 clips.



P

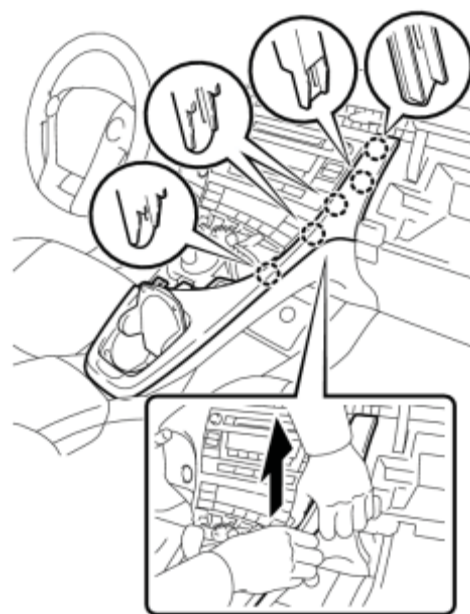


P

(b) Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 5 claws and remove the lower center instrument cluster finish panel sub-assembly.

8. REMOVE INSTRUMENT PANEL CUP HOLDER ASSEMBLY

(a) Remove the 4 screws <C> and instrument panel cup holder assembly from the lower center instrument cluster finish panel sub-assembly.

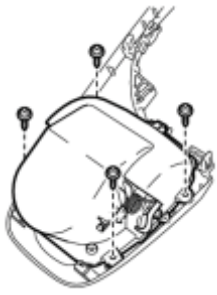


P

9. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH


(a) Disengage the 14 claws.

(b) Disconnect the connector and remove the instrument cluster finish panel garnish.

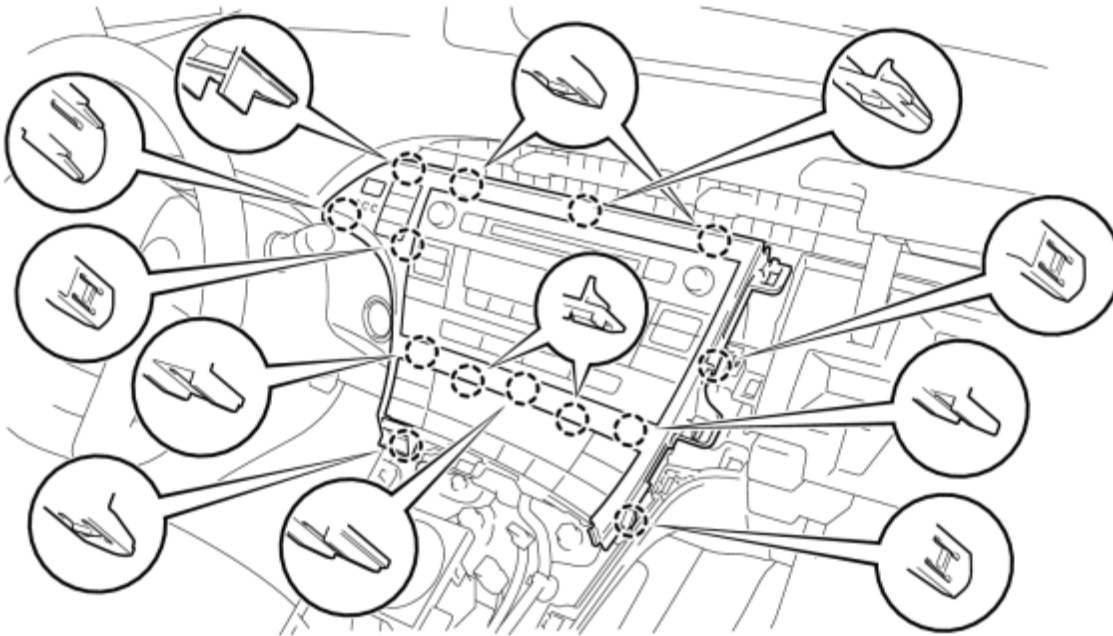

P

10. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

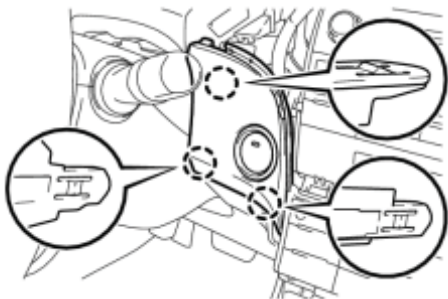

P

(a) Disengage the 3 claws.