

## 120,000 miles or 144 months

- Check installation of driver's floor mat
- Inspect and adjust all fluid levels
- Inspect wiper blades
- Replace cabin air filter
- Replace engine air filter
- Replace engine oil and oil filter<sup>1</sup>
- Replace spark plugs<sup>3</sup>
- Rotate tires

**Inspect the following:**

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>_ Automatic transmission for signs of leakage</li> <li>_ Ball joints and dust covers</li> <li>_ Brake lines and hoses</li> <li>_ Brake linings/drums and brake pads/discs<sup>4</sup></li> <li>_ Drive shaft boots</li> <li>_ Engine/Inverter coolant<sup>5</sup></li> </ul> | <ul style="list-style-type: none"> <li>_ Exhaust pipes and mountings</li> <li>_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>_ Fuel tank cap gasket</li> <li>_ Radiator, condenser and/or intercooler</li> <li>_ Steering gear</li> <li>_ Steering linkage and boots</li> </ul> |
|---|--|

### Additional Maintenance Items for Special Operating Conditions<sup>2</sup>

**Driving on dirt roads or dusty roads:**

- Tighten nuts and bolts on chassis and body

**Driving while towing, using a car-top carrier, or heavy vehicle loading<sup>6</sup>:**

- Replace automatic transmission fluid
- Tighten nuts and bolts on chassis and body

**DEALER SERVICE VERIFICATION:**

**DATE:**

**MILEAGE:**

<sup>1</sup> Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after maintenance at every 5,000 miles.  
<sup>2</sup> Perform these service items only if you drive primarily under the conditions indicated.  
<sup>3</sup> Maintenance services of spark plugs are required under the terms of the Emissions Control Warranty. For vehicles corresponding to PZEV the replacement interval is 150,000 miles.  
<sup>4</sup> Inspect thickness measurement and disc runout.  
<sup>5</sup> Refer to "Engine/Inverter Coolant" in the "Explanation of Maintenance Items" section in the back of this guide for more information.  
<sup>6</sup> Not all vehicles are designed for towing. Refer to your Vehicle Owner's Manual for details.