


Last Modified: 01-14-2019	6.8:8.0.48	Doc ID: RM100000001FZBC
Model Year Start: 2019	Model: Prius	Prod Date Range: [12/2018 - ]
Title: MIRROR (INT): INNER REAR VIEW MIRROR (w/ EC Mirror): REMOVAL; 2019 MY Prius [12/2018 - ]		

## REMOVAL



### PROCEDURE

#### 1. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/o Pre-collision System)

(a) Disengage the 2 guides and slide the inner rear view mirror stay holder cover as shown in the illustration.

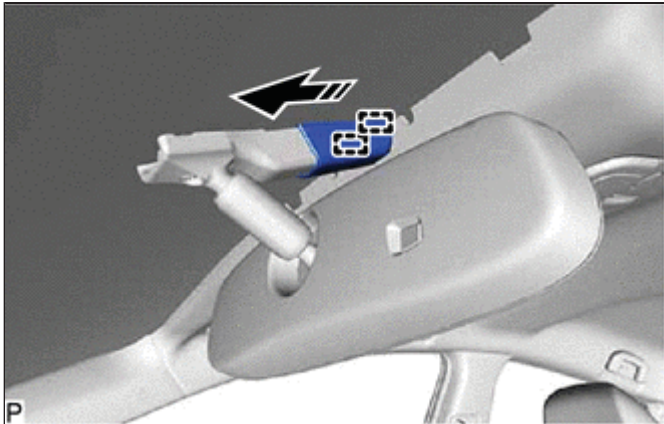


(b) Disengage the 6 claws to remove the inner rear view mirror stay holder cover as shown in the illustration.

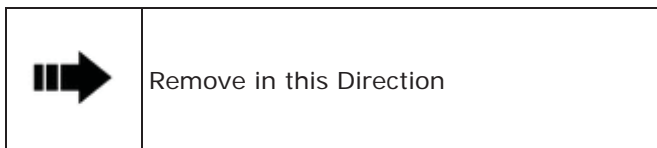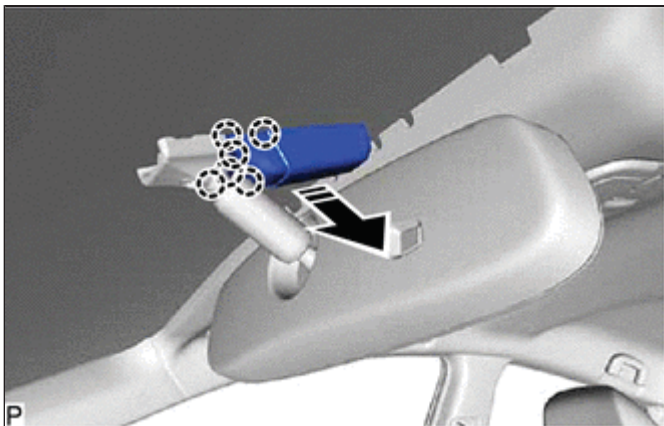



#### 2. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/o Pre-collision System)

(a) Disconnect the connector.

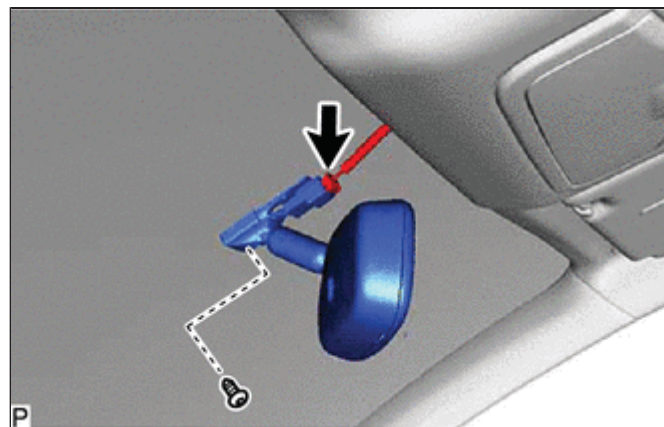

(b) Using a T20 "TORX" socket wrench, remove the screw.

(c) Slide the inner rear view mirror assembly as shown in the illustration to remove it.

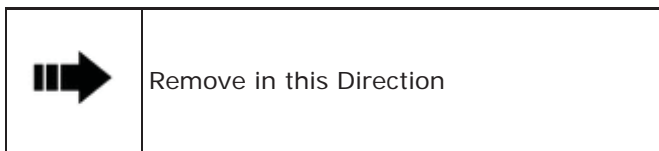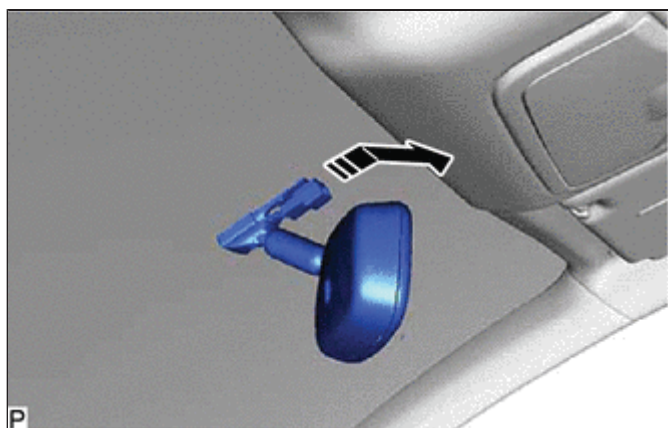

### 3. REMOVE NO. 2 FORWARD RECOGNITION COVER (w/ Pre-collision System)


Click here [INFO](#)

### 4. REMOVE NO. 1 FORWARD RECOGNITION COVER (w/ Pre-collision System)

Click here [INFO](#)

### 5. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ Pre-collision System)

(a) Disconnect the connector.

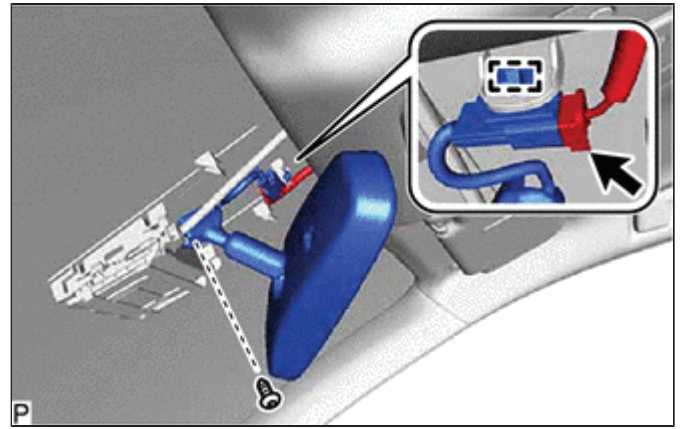

(b) Disengage the clamp.

(c) Using a T20 "TORX" socket wrench, remove the screw.

(d) Slide the inner rear view mirror assembly as shown in the illustration to remove it.

