

トヨタ プリウス PHV (ZVW52)

Toyota Prius PHV (ZVW52)

のフロントバンパ取り外し作業

Front bumper removal work

トヨタ プリウス PHV のフロントバンパ取り外し作業について紹介します。

Introducing the work to remove the front bumper of the Toyota Prius PHV.

フロントバンパ取り外し作業 Front bumper removal work

1. フロントバンパ取り外し 1. Front bumper removal

- ① 傷付き防止のため、フロントバンパ ASSY 周辺に保護テープを貼ります。
1 Apply protective tape around the front bumper assembly to prevent damage.





- ② 2 Remove the seven clips and remove the radiator support opening cover.



3 Use a flathead screwdriver to turn the pin hold clip 90 ° and remove the two pin hold clips. (Left and right)



④ スクリューを取り外します。(左右) 4 Remove the screw. (Left and right)

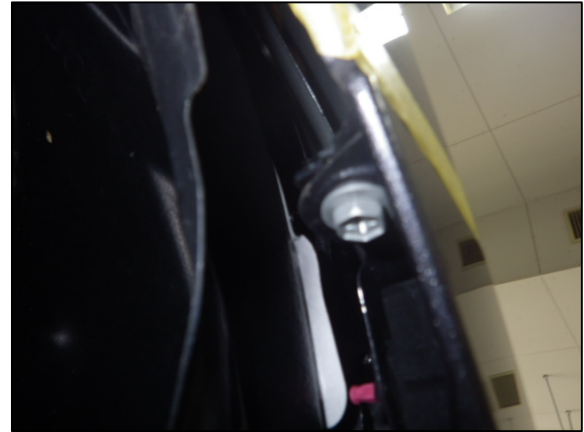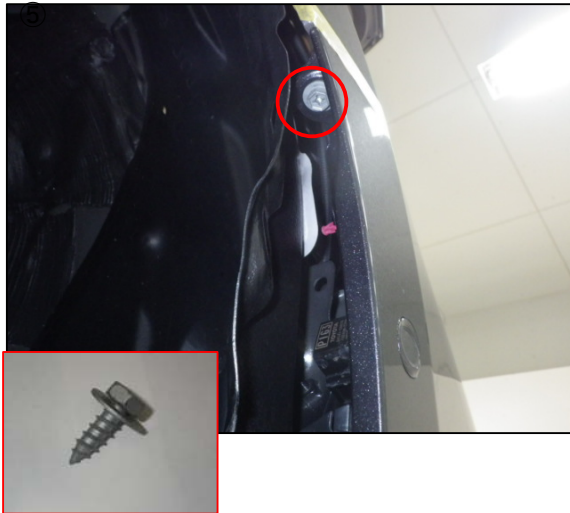

⑤ スクリュー10本を取り外します。 5 Remove the 10 screws.



⑥ ツメのかん合3ヶ所を外します。(左右) 6 Remove the three claws. (Left and right)




7 Pull the end of the front bumper assembly and disconnect the connector.



⑧ インテリジェントクリアランスソナーシステムあり車
8 Cars with intelligent clearance
sonar system

Disconnect the connector.

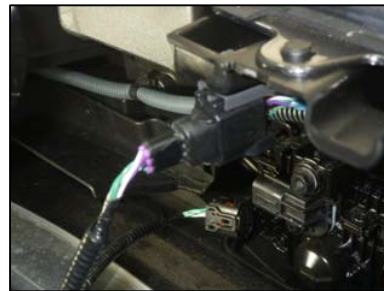


⑨ Toyota Safety Sense P 付き車
Car with P

Disconnect the connector.



⑩ Remove two bolts and four clips, and remove the front bumper assembly.

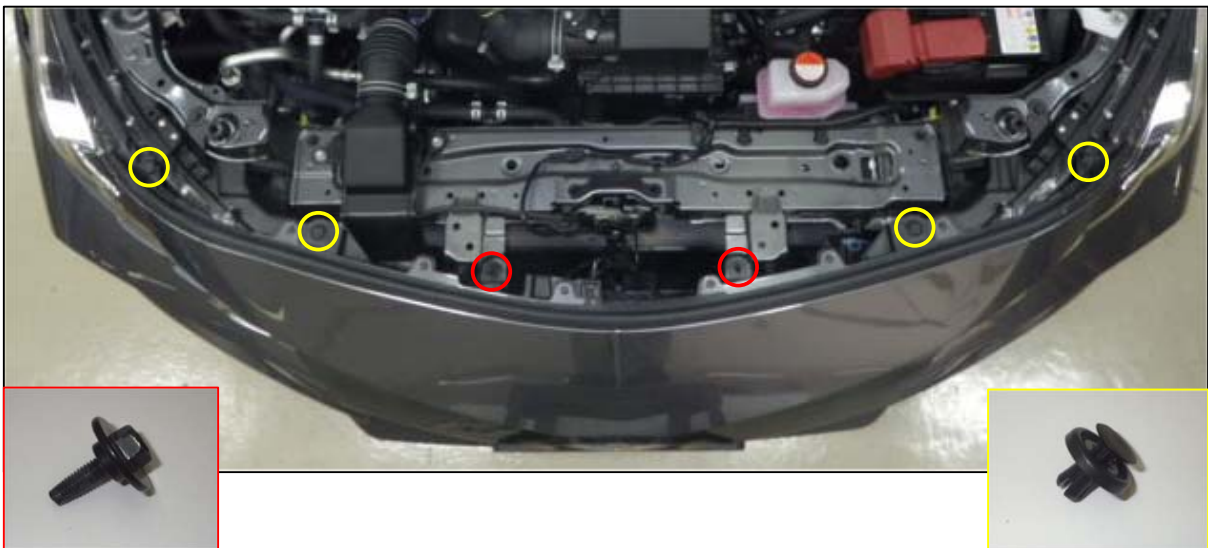

- ◆ 1 All used clips were reusable.
 - ※ 1 Tools to use: flathead screwdriver, clip remover, 10mm box wrench.
 - ※ 1 If you remove the battery or electrical component connector, adjustment, initialization, and registration may be required.
- For more information, see the manufacturer's electronic technical manual.