


DTC CHECK / CLEAR

1. DTC CHECK (USING SST CHECK WIRE)

(a) Turn the power switch off.

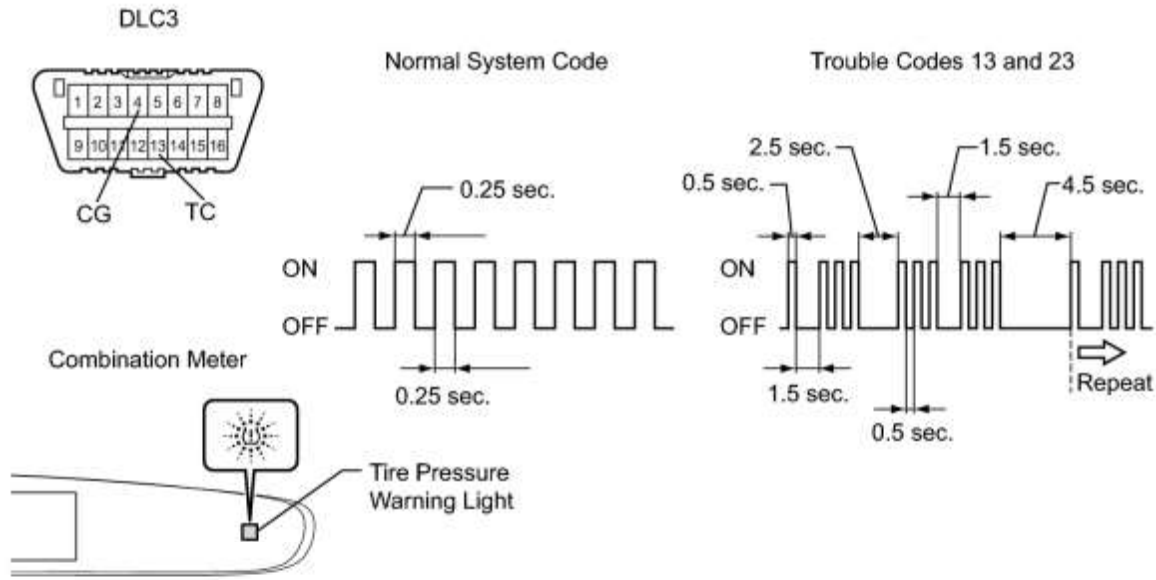

(b) Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST: 09843-18040

(c) Turn the power switch on (IG).

(d) Read and record any DTCs from the tire pressure warning light on the combination meter. Refer to the illustration as examples of the normal system code and codes 13 and 23.

HINT:

- If the tire pressure warning light does not indicate any DTCs or the normal system code, inspect the tire pressure warning light circuit or TC and CG terminal circuit.

Trouble Area	See Procedure
Tire pressure warning light circuit	INFO
TC and CG terminal circuit	INFO

- If 2 or more malfunctions are indicated at the same time, the lowest numbered DTC is displayed first.

(e) Refer to Diagnostic Trouble Code Chart [INFO](#) for DTC information.

(f) After completing the check, turn the power switch off and remove SST from the DLC3.