








DIAGNOSTIC TROUBLE CODE CHART









HINT:





If a trouble code is displayed during the DTC check, inspect the circuit listed for that code. For details of each code, refer to the relevant page listed under respective "DTC Code" in the DTC chart.

Tire Pressure Warning System

DTC Code	Detection Item	Trouble Area	See page
C2111/11	Transmitter ID1 Operation Stop	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU 	INFO
C2112/12	Transmitter ID2 Operation Stop	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU 	INFO
C2113/13	Transmitter ID3 Operation Stop	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU 	INFO
C2114/14	Transmitter ID4 Operation Stop	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU 	INFO
C2121/21	No Signal from Transmitter ID1	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU 	INFO
C2122/22	No Signal from Transmitter ID2	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU 	INFO
C2123/23	No Signal from Transmitter ID3	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and 	INFO

DTC Code	Detection Item	Trouble Area	See page
		receiver 3. Wire harness or connector 4. Tire pressure warning ECU	
C2124/24	No Signal from Transmitter ID4	1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU	
C2126/26	Transmitter ID not Received in Main Mode	1. ID registration failure 2. Tire pressure warning valve and transmitter 3. Tire pressure warning antenna and receiver 4. Wire harness or connector 5. Tire pressure warning ECU	
C2141/41	Transmitter ID1 Error	1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU	
C2142/42	Transmitter ID2 Error	1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU	
C2143/43	Transmitter ID3 Error	1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU	
C2144/44	Transmitter ID4 Error	1. Tire pressure warning valve and transmitter 2. Tire pressure warning ECU	
C2165/65	Abnormal Temperature Inside ID1 Tire	1. Tires 2. Tire pressure warning valve and transmitter	

DTC Code	Detection Item	Trouble Area	See page
		3. Tire pressure warning ECU	
C2166/66	Abnormal Temperature Inside ID2 Tire	<ol style="list-style-type: none"> 1. Tires 2. Tire pressure warning valve and transmitter 3. Tire pressure warning ECU 	
C2167/67	Abnormal Temperature Inside ID3 Tire	<ol style="list-style-type: none"> 1. Tires 2. Tire pressure warning valve and transmitter 3. Tire pressure warning ECU 	
C2168/68	Abnormal Temperature Inside ID4 Tire	<ol style="list-style-type: none"> 1. Tires 2. Tire pressure warning valve and transmitter 3. Tire pressure warning ECU 	
C2171/71	Transmitter ID not Registered	Tire pressure warning ECU	
C2175/75	Vehicle Speed or RSSI Signal Error	<ol style="list-style-type: none"> 1. Combination meter 2. Tire pressure warning valve and transmitter 3. Tire pressure warning antenna and receiver 4. Wire harness or connector 5. Tire pressure warning ECU 	
C2176/76	Receiver Error	Tire pressure warning ECU	
C2177/77	Initialization not Completed	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU 	
C2181/81	Transmitter ID1 not Received (Test Mode DTC)	<ol style="list-style-type: none"> 1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and 	

DTC Code	Detection Item	Trouble Area	See page
		receiver 3. Wire harness or connector 4. Tire pressure warning ECU	
C2182/82	Transmitter ID2 not Received (Test Mode DTC)	1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU	
C2183/83	Transmitter ID3 not Received (Test Mode DTC)	1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU	
C2184/84	Transmitter ID4 not Received (Test Mode DTC)	1. Tire pressure warning valve and transmitter 2. Tire pressure warning antenna and receiver 3. Wire harness or connector 4. Tire pressure warning ECU	
C2191/91	Vehicle Speed Signal Error (Test Mode DTC)	1. Vehicle speed sensor 2. Combination meter assembly 3. Wire harness or connector 4. Tire pressure warning ECU	
C2196/96	RSSI Signal Error (Test Mode DTC)	1. Tire pressure warning antenna and receiver 2. Wire harness or connector 3. Tire pressure warning ECU	