

31. INSTALL STUD BOLT

(a) Install the stud bolt to the engine mounting bracket RH.

Torque:

10 N·m {102 kgf·cm, 7 ft·lbf}

32. INSTALL TIMING CHAIN COVER OIL SEAL

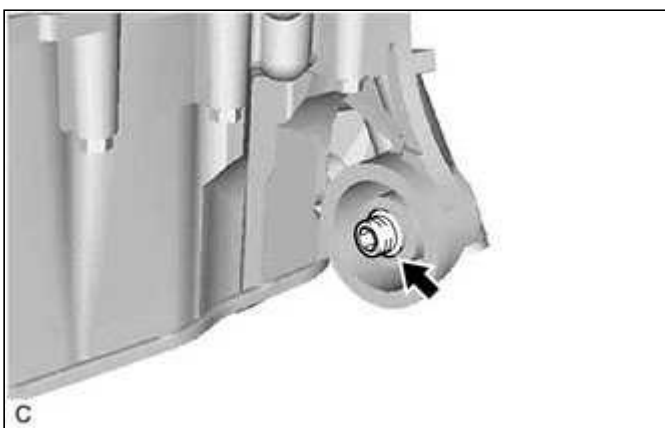
Click here [INFO](#)

33. INSTALL CRANKSHAFT PULLEY

Click here [INFO](#)

34. INSTALL NO. 1 CHAIN TENSIONER ASSEMBLY

Click here [INFO](#)

35. INSTALL OIL FILTER UNION (for Oil Filter Sub-assembly Type)

(a) Using a 12 mm hexagon socket wrench, install the oil filter union to the oil filter bracket.

Torque:

29.5 N·m {301 kgf·cm, 22 ft·lbf}

36. INSTALL OIL FILTER

Click here [INFO](#)

37. INSTALL SPARK PLUG TUBE GASKET

(a) Using a cutter knife, cut off the seal part of the removed spark plug tube gasket.

