


# HEADLIGHT (w/ DAYTIME RUNNING LIGHT)

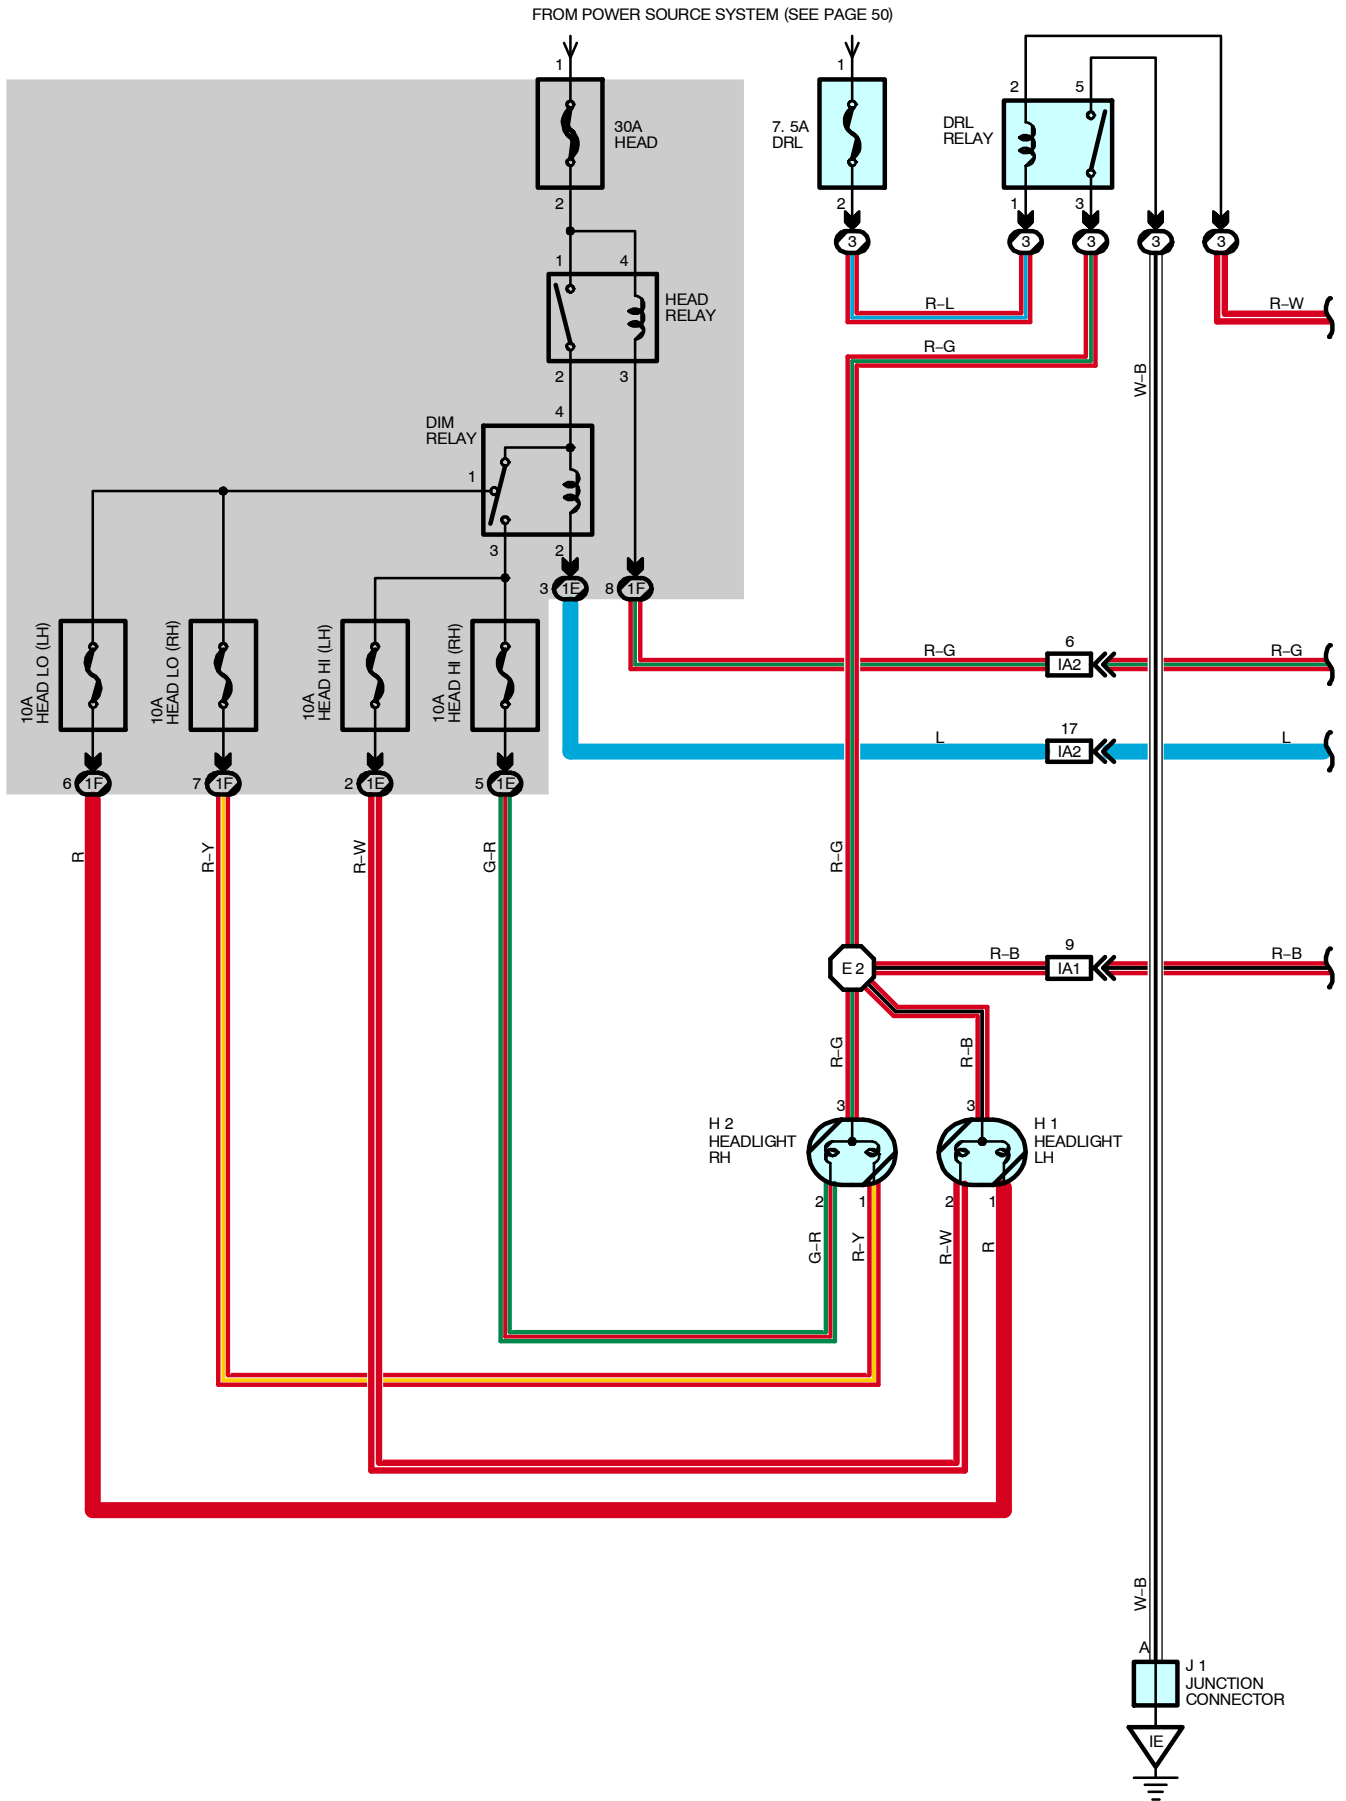



# HEADLIGHT (w/ DAYTIME RUNNING LIGHT)

## SYSTEM OUTLINE

When the ignition SW is turned on ST position and "READY" signal from engine control module is sent to the daytime running light relay via body ECU. If the parking brake pedal is depressed (Parking brake SW is on) at that time, the daytime running light system does not operate. If the parking brake pedal is released (Parking brake SW is off), the daytime running light system operates and the low beam headlight comes on.

## SERVICE HINTS

### HEAD RELAY

- 1-2 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position
- Closed with the engine running and the parking brake lever is released (Parking brake SW off)

### D3 DAYTIME RUNNING LIGHT RELAY

- 12-GROUND : Approx. **12** volts with the ignition SW at **ON** position
- 3-GROUND : Always approx. **12** volts
- 11-GROUND : Continuity with the parking brake pedal dipressed
- 2-GROUND : Always continuity
- 8-GROUND : Continuity with the dimmer SW at **HIGH** or **FLASH** position

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
B8	A	36	H1	34	J17	37
B9	B	36	H2	34	J20	37
C10	36	J1	37	J27	A	37
C13	36	J11	37	J28	B	37
D3	36	J12	A	37	P2	37
D5	36	J13	B	37		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
3	24	Engine Room R/B No.3 (Engine Compartment Right)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	27	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1F		
1J		
2A	30	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Panel LH)
2B		
2C		
2G	31	Engine Room Main Wire and Instrument Panel J/B (Cowl Side Panel LH)
2I	31	Cowl Wire and Instrument Panel J/B (Cowl Side Panel LH)
2K		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	42	Engine Room Main Wire and Cowl Wire (Cowl Side Panel LH)
IA2		
ID1	42	Instrument Panel Wire and Cowl Wire (Left Kick Panel)
ID2		

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
ID	42	Cowl Side Panel LH
IE		
IG	42	Cowl Side Panel RH
IH	42	Right Kick Panel



**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	<a href="#">40</a>	Engine Room Main Wire			