

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY INFO

7. REMOVE WINDSHIELD WIPER MOTOR AND LINK ASSEMBLY

HINT:


Refer to the procedure up to Remove Windshield Wiper Motor And Link Assembly INFO.

8. REMOVE COWL BODY MOUNTING REINFORCEMENT LH



(a) Remove the 3 bolts and cowl body mounting reinforcement LH.

9. REMOVE OUTER COWL TOP PANEL SUB-ASSEMBLY

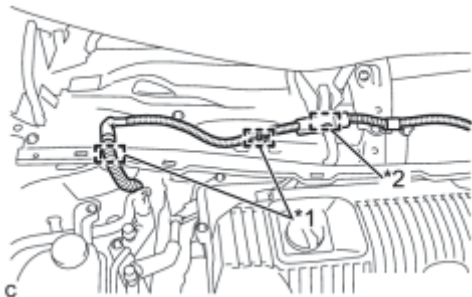

(a) Disengage the 2 clamps and guide of the wire harness.


**Text in Illustration**

*1	Clamp
*2	Guide




(b) Disengage the claw and bend the No. 1 heater air duct splash shield seal.

(c) Disengage the claw and bend the water guard plate RH.

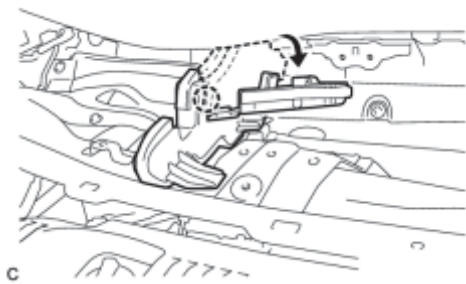

c

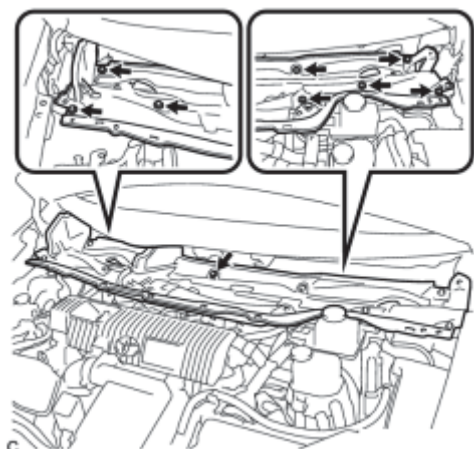

(d) Remove the 9 bolts and outer cowl top panel sub-assembly.

## 10. DRAIN BRAKE FLUID


### NOTICE:

If brake fluid leaks onto any painted surface, immediately wash it off.

## 11. REMOVE BRAKE PEDAL RETURN SPRING\_ INFO

## 12. REMOVE PUSH ROD PIN\_ INFO

## 13. SEPARATE BRAKE MASTER CYLINDER RESERVOIR WITH BRACKET

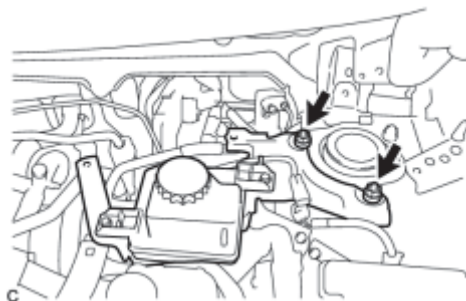

(a) Remove the 2 nuts and separate the brake master cylinder reservoir with bracket.

## 14. DISCONNECT NO. 1 RESERVOIR HOSE