


COMPONENTS


ILLUSTRATION

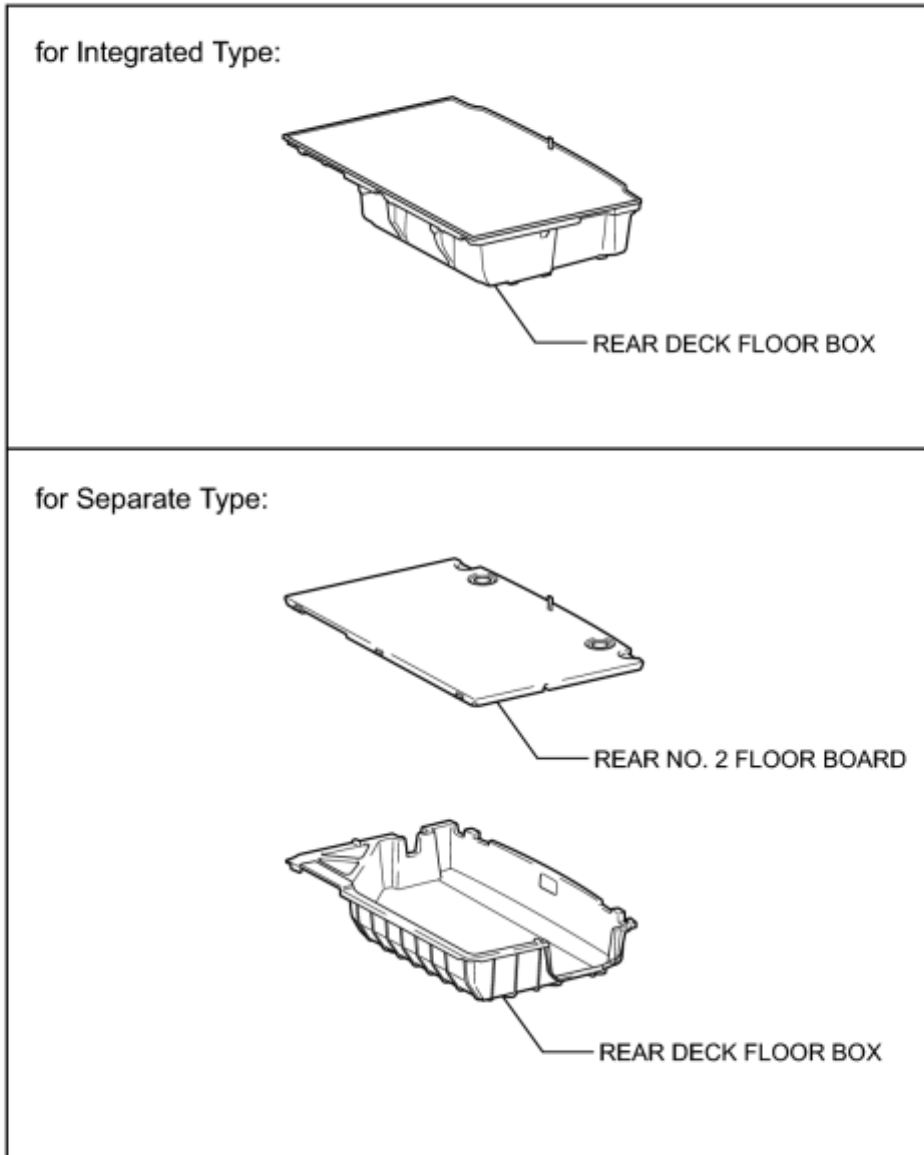

P


ILLUSTRATION

REAR SIDE SEATBACK ASSEMBLY LH

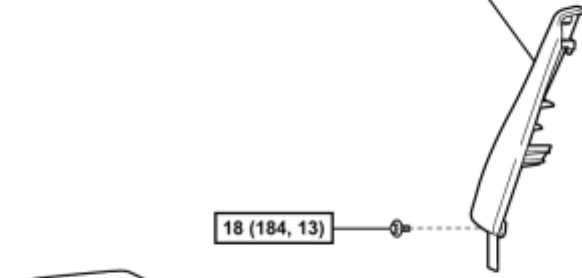


18 (184, 13)

REAR SEAT CUSHION ASSEMBLY

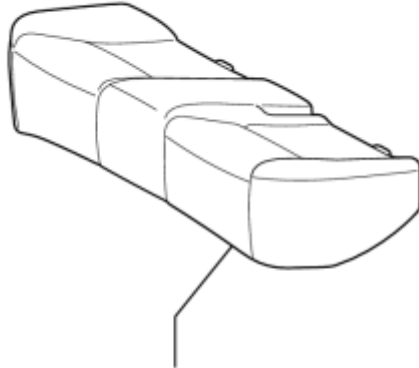

REAR DOOR OPENING TRIM WEATHERSTRIP LH



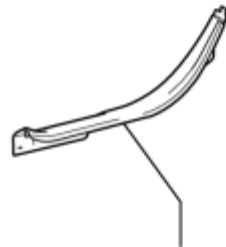


REAR DOOR SCUFF PLATE LH

N*m (kgf*cm, ft.*lbf): Specified torque

P

ILLUSTRATION

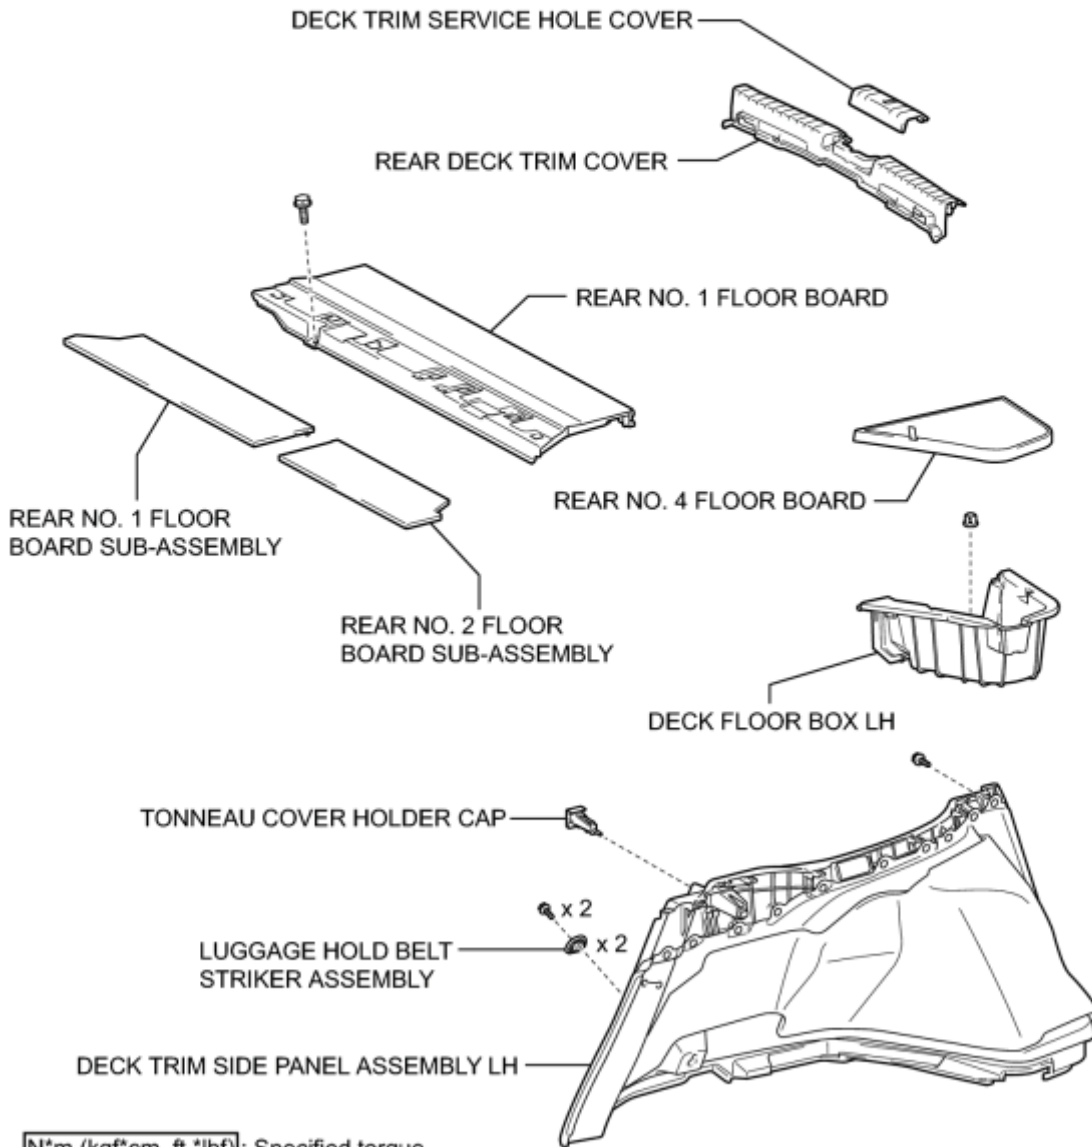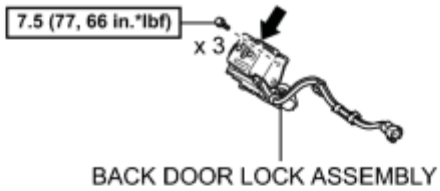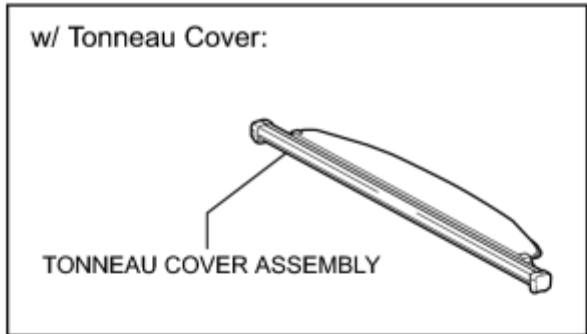


[N*m (kgf*cm, ft.*lbf)]: Specified torque

← MP grease


P

REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) INFO
2. REMOVE REAR DECK FLOOR BOX INFO
3. REMOVE REAR DOOR SCUFF PLATE LH INFO
4. DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH
5. REMOVE REAR SEAT CUSHION ASSEMBLY INFO
6. REMOVE REAR SIDE SEATBACK ASSEMBLY LH INFO
7. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover) INFO
8. REMOVE REAR NO. 4 FLOOR BOARD INFO
9. REMOVE DECK FLOOR BOX LH INFO
10. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY INFO
11. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY INFO
12. REMOVE REAR NO. 1 FLOOR BOARD INFO
13. REMOVE DECK TRIM SERVICE HOLE COVER INFO
14. REMOVE REAR DECK TRIM COVER INFO
15. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY INFO
16. REMOVE TONNEAU COVER HOLDER CAP INFO
17. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH INFO
18. REMOVE BACK DOOR LOCK ASSEMBLY

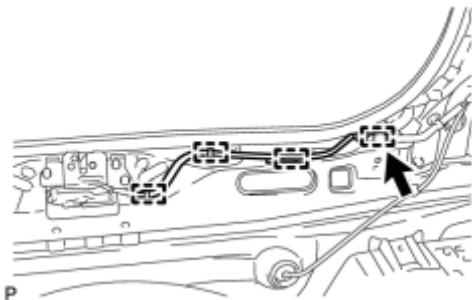

(a) Disconnect the connector and disengage the 4 clamps.


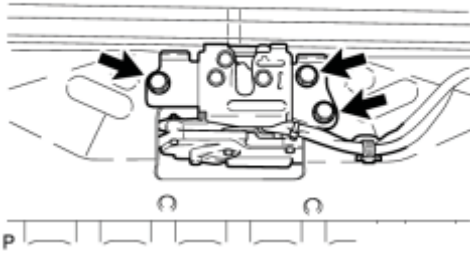


(b) Remove the 3 bolts and back door lock assembly.

INSPECTION


1. INSPECT BACK DOOR LOCK ASSEMBLY

(a) Check the operation of the door lock motor.

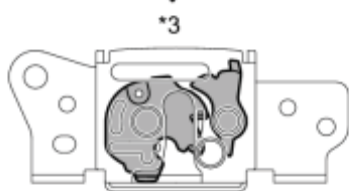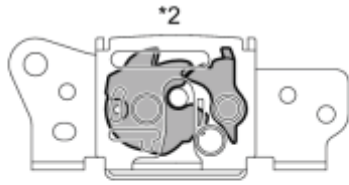

(1) Move the door lock to the lock position.

*1

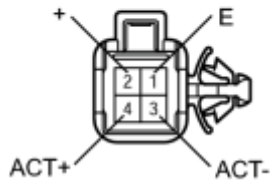

P

(2) Apply battery voltage to the door lock motor and check the operation of the door lock motor.

OK:

Connection	Result
Battery positive (+) → 4 (ACT+)	Unlocks
Battery negative (-) → 3 (ACT-)	

If the result is not as specified, replace the back door lock assembly.

(b) Check the operation of the door courtesy switch.

(1) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
-------------------	-----------	---------------------

Tester Connection	Condition	Specified Condition
1 (E) - 2 (+)	Locked	10 k Ω or higher
1 (E) - 2 (+)	Unlocked	Below 1 Ω

Text in Illustration


*1	Component without harness connected (Back Door Lock Assembly)
*2	Lock
*3	Unlock

If the result is not as specified, replace the back door lock assembly.

INSTALLATION


1. INSTALL BACK DOOR LOCK ASSEMBLY

(a) Apply MP grease to the sliding parts of the back door lock assembly.

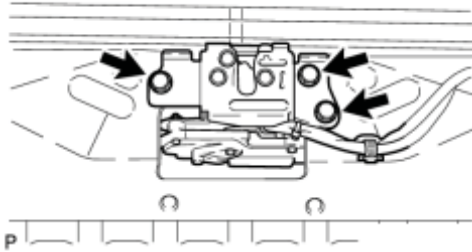

(b) Install the back door lock assembly with the 3 bolts.

Torque: 7.5 N·m (77 kgf·cm, 66in·lbf)

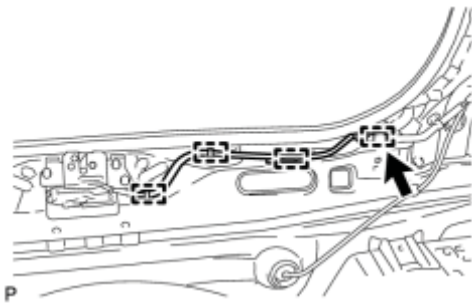

(c) Engage the 4 clamps and connect the connector.

2. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH_ [INFO](#)

3. INSTALL TONNEAU COVER HOLDER CAP_ [INFO](#)

4. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY_ [INFO](#)

5. INSTALL REAR DECK TRIM COVER_ [INFO](#)

6. INSTALL DECK TRIM SERVICE HOLE COVER_ [INFO](#)

7. INSTALL REAR NO. 1 FLOOR BOARD_ [INFO](#)

8. INSTALL REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY_ [INFO](#)

9. INSTALL REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY_ [INFO](#)

10. INSTALL DECK FLOOR BOX LH_ [INFO](#)

11. INSTALL REAR NO. 4 FLOOR BOARD_ [INFO](#)

12. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)_ [INFO](#)

13. INSTALL REAR SIDE SEATBACK ASSEMBLY LH_ INFO
14. INSTALL REAR SEAT CUSHION ASSEMBLY_ INFO
15. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH_ INFO
16. INSTALL REAR DOOR SCUFF PLATE LH_ INFO
17. INSTALL REAR DECK FLOOR BOX_ INFO
18. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type)_ INFO