


# REMOVAL

## 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

### NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

## 2. REMOVE NO. 1 RELAY BLOCK COVER

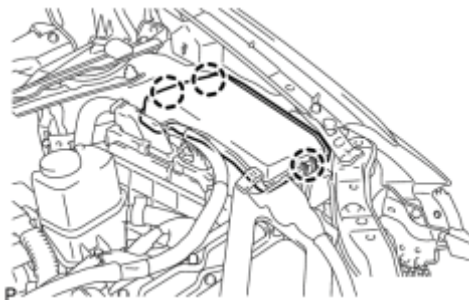


(a) Disengage the 3 claws and remove the No. 1 relay block cover.

## 3. REMOVE INTEGRATION NO.2 RELAY

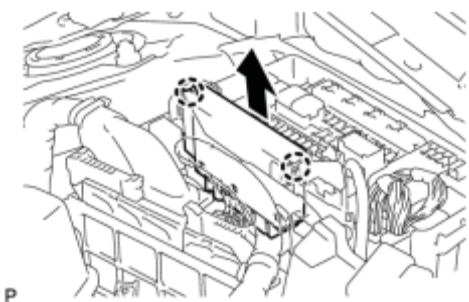


(a) Disengage the 2 claws and pull up the integration relay as shown in the illustration.

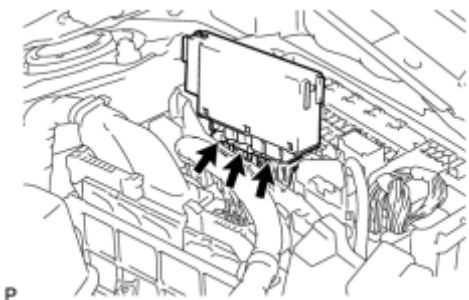


(b) Disconnect the 3 connectors and remove the integration relay.

# INSTALLATION

## 1. INSTALL INTEGRATION NO.2 RELAY

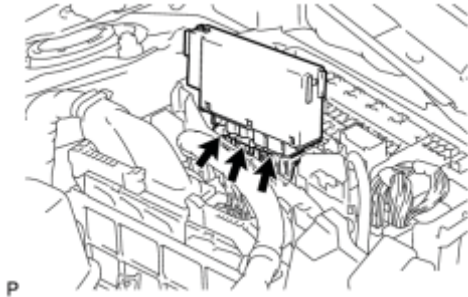

(a) Connect the 3 connectors.

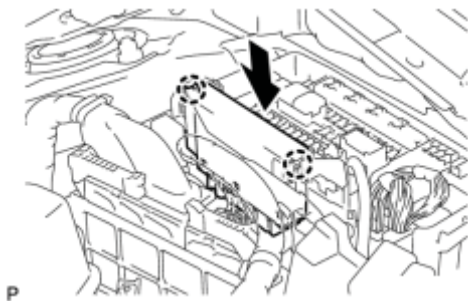

(b) Engage the 2 claws to install the integration relay as shown in the illustration.


## 2. INSTALL NO. 1 RELAY BLOCK COVER



(a) Engage the 3 claws to install the No. 1 relay block cover.

## 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

### NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected .