



Gauges and meters

► Vehicles without multi-information display

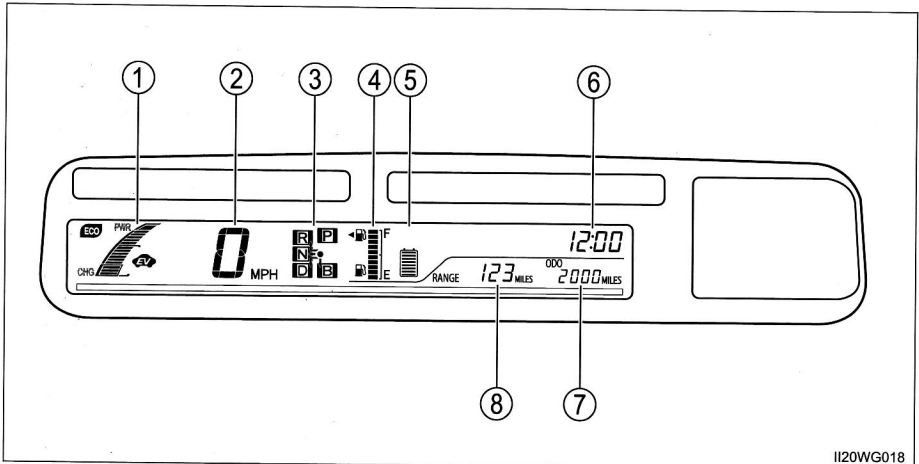

► Vehicles with multi-information display

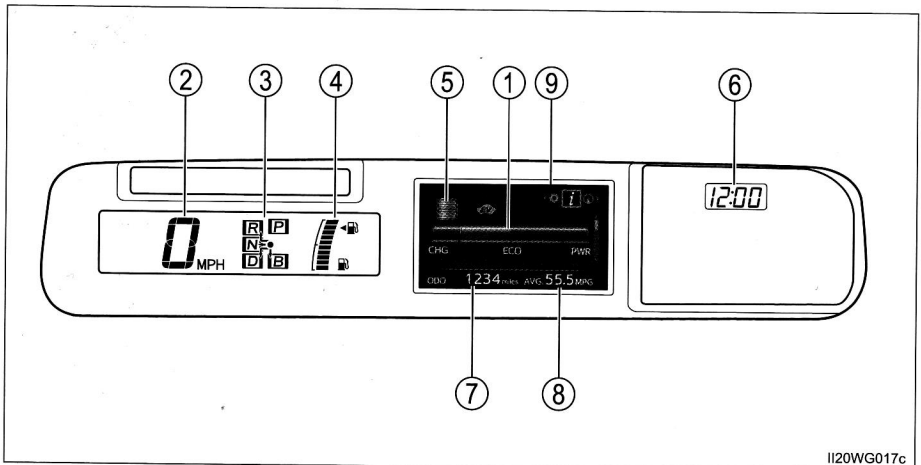

The units used on the meters may differ depending on the target region.

- ① Hybrid System Indicator
Displays hybrid system output or regeneration level
- ② Speedometer
Displays the vehicle speed
- ③ Shift position indicators
Displays the selected shift position. (→P. 183)
- ④ Fuel gauge
Displays the quantity of fuel remaining in the tank
- ⑤ Hybrid battery (traction battery) status
The amount of charge remaining in the hybrid battery (traction battery) is shown by 8 bars.
- ⑥ Clock
Displays the time. (Adjustment procedure: →P. 388)
- ⑦ Odometer and trip meter display
Odometer:
Displays the total distance that the vehicle has been driven
Trip meter:
Displays the distance the vehicle has been driven since the meter was last reset. Trip meters "A" and "B" can be used to record and display different distances independently.
- ⑧ Trip information display
Displays fuel consumption, etc.
- ⑨ Multi-information display
Presents the driver with a variety of driving-related data (→P. 100)
Displays warning messages in case of a malfunction (→P. 506)