# **ELECTRONIC SHIFT SWITCH 7**

# INSTRUCTION MANUAL

Thank you for purchasing the **ELECTRONIC SHIFT SWITCH** controller.

This product converts the factory Toyota Prius ZVW30 model shift lever into a button type shifter for one-touch gear changing.

Please be sure to read the contents of this manual to ensure proper installation and usage of this product. Also, please keep this instruction manual in a safe place for future reference.

Do not use this product for any other vehicles other than the ones listed here.

Be sure to include these instructions to the next owner in case of ownership change.

□ For Vehicle:

Toyota Prius Type ZVW30 Year 2009/05~ Toyota Prius PHV Type ZVW35 Year 2012/01~



### Safety Cautions

Please be sure to read the Safety Cautions before use of this product.







## PARTS LIST

NAME	DIAGRAM	PCS
① SHIFT SWITCH		1
<ol> <li>Instruction Manual</li> </ol>	ELECTRONCE SHAFT SHAFTONY / THE THE ADDRESS SHAFTONY / THE THE ADDRESS SHAFTONY / THE ADDRESS SHAFT	1

### Specifications

- Voltage: (DC)10 ~ 16 [V] For 12 V vehicles only
- Operating Temp: -20 ~ 70 [°C] Avoid moisture and direct sunlight

#### **ELECTRONIC SHIFT SWITCH 7**

## INSTALLATION



### Turn IGNITION OFF

Turn Ignition OFF to prevent fires and malfunction.

### **REMOVE THE CONTROL PANEL**

- Raise the panel around the shift lever using a moulding remover.
- Remove the 6 clips marked by the 
   and remove the panel.
  - % PULL STRAIGHT UP on the clips to avoid damage to the clip.
- Raise the panel and remove the 2 connectors (refer to O in diagram).





#### □ REMOVE THE SHIFT LEVER

 Remove the 3 nuts holding the Shift Lever in place.



- Raise the Shift Lever STRAIGHT UP and remove the attached connector shown by the ○ in the diagram. Remove Shifter.
  - Remove the Instrument Cluster Finish Panel if the Shift Lever is difficult to remove



### □ INSTALLING THE SHIFT SWITCH

 Pass the ESS harness through the control panel from front to back.



 Insert the ESS into the round slot of the integration control panel.



 Be sure that the 3 clips on the backside of the panel are securely attached to the round edges.



- Reconnect the 2 connectors to the back of the control panel.
- Attach the Shift Lever connector to the connector on this product.



- Replace the integrated control panel back into position by re-attaching the clips.
  - ※ Be sure not to pinch any wiring when replacing.





Be sure to securely connect all connectors Improperly connected connectors may cause an error in the hybrid system.

If the Hybrid System Error occurs...

Please make sure the connectors are properly connected

Confirm that the 3 connectors are properly connected. The error will disappear shortly after all connectors have been properly connected.

Please contact dealer of purchase if error persists.

### When charging a Prius PHV...

The illumination will stay ON

The PRIUS PHV monitors the shift lever while charging. Therefore, the power of the shift lever will be ON at this time. The illumination will remain on during charging but this is not a malfunction.

# INSTRUCTIONS

### Switch Functions

Shift Switch	Function	
D	DRIVE	
N (Long Push)	NEUTRAL	
R	REVERSE	
В	ENGINE BRAKE	

Comparison with Factory Shift Lever (Right Hand Drive model shown)



※ All Shift Positions are the same as factory All factory restricted operations will be the same for this product.

### □ Shift Position Safe Guards

 Any improper or unsafe use of the Shift Switch will result in a warning buzzer and will automatically cause the following safety operations.

Operation	Shift Position	
Changing from P to another mode without stepping on the brakes	Ρ	
Trying to select B while in P or N	Mode will stay in P or N	
Pressing R while moving forward	Ν	
Pressing D while moving backwards	Ν	
Pressing B while in R	Ν	



# ILLUMINATION SETTING



#### ILLUMINATION SETTING MODE

 Press [D]、 [N] on the ESS while the IGNITION is OFF. Keep the buttons depressed then turn the vehicle IGNITION switch ON.
 Flashing [D] and [B] indicates SETTING MODE.



If the start up demonstration begins, the unit is still in NORMAL MODE so please try the process over again.

#### □ ILLUMINATION SETTING PROCEDURES

 Illumination color can be changed in ILLUMINATION SETTING MODE. Make sure the [D] and [B] switches are flashing to confirm setting mode.

Follow the steps below to change settings: Press [N] : L E D COLOR CHANGE

```
\mathsf{GREEN} \to \mathsf{AQUA} \to \mathsf{BLUE} \to \mathsf{PURPLE} \to \mathsf{RED} \to \mathsf{WHITE} \to \mathsf{YELLOW}
```

Press [R]: L E D BRIGHTNESS UP

Press [B]: L E D BRIGHTNESS DOWN

Press [D]: Confirm Setting, End Setting



Press [D] to confirm selection.
 Pressing [D] will end SETTING MODE and return to Standard Mode.
 After ending, the startup demonstration will begin.

Settings will remain even when IGNITION is turned OFF or if the unit is disconnected.

### Additional Information

- 1. Product specs, price, looks, and manual are subject to change and improvements without prior notice.
- 2. No portions of this manual may be reproduced in part or in whole for any reason without written consent.
- 3. We are not responsible for any injury or damage to first or third parties resulting from the improper use of this product.
- 4. We are not repsonsible for personal injury, legal suits, corporate damage, or any other damages resulting from the use or inability to use this product.
- 5. All information in this document is updated as of 5/1/2014

Name, address, telephone number and other contact info subject to change without prior notification.

### Revisions

Ver.	Issued	Manual Part #	Notes
1st	5/1/2014	4H0009-801-02	

### EXCLUSIVE IMPORTER

### Stage 10 Productions Inc.

11245 Young River Ave Fountain Valley,CA 92708

E-mail : info@stage-10.net