

Last Modified: 5-3-2010	6.4 A	From: 200904
Model Year: 2010	Model: Prius	Doc ID: RM0000011JG01AX
Title: SUPPLEMENTAL RESTRAINT SYSTEMS: OCCUPANT CLASSIFICATION ECU: REMOVAL (2010 Prius)		

REMOVAL

1. PRECAUTION

CAUTION:

Be sure to read Precaution thoroughly before servicing [INFO](#) .

NOTICE:


- When removing front seat assembly RH, perform zero point calibration and sensitivity check [INFO](#) .
- When replacing the occupant classification ECU, perform zero point calibration and sensitivity check [INFO](#) .

2. REMOVE FRONT SEAT ASSEMBLY RH

HINT:

- Use the same procedure for the RH side and LH side.
- Refer to the procedure up to Remove Front Seat Assembly [INFO](#) .

3. REMOVE OCCUPANT CLASSIFICATION ECU

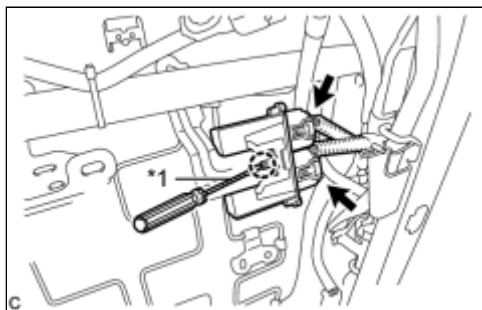

(a) Disconnect the 2 connectors.

(b) Using a screwdriver with the tip wrapped with protective tape, disengage the claw and remove the occupant classification ECU.

Text in Illustration

*1	Protective Tape
----	-----------------

