


SKID CONTROL ECU ASSY


3215L-01

REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY
(SEE PAGE 71-7)
3. REMOVE STEERING COLUMN ASSY (SEE PAGE 50-8)

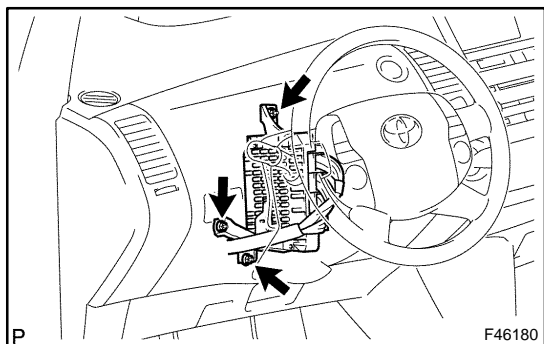

4. REMOVE SKID CONTROL ECU ASSY
 - (a) Disconnect the clamp of wire harness and the skid control buzzer from the skid control computer bracket.
 - (b) Disconnect the connector from the skid control computer.
 - (c) Remove the 3 nuts and the skid control computer assy.

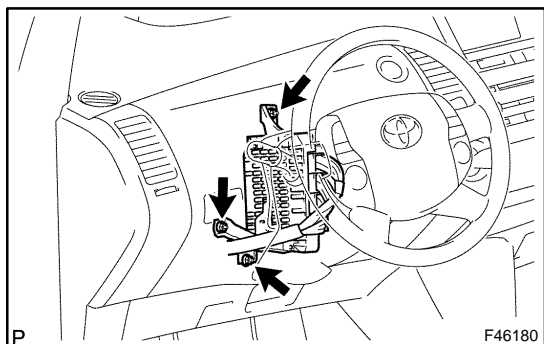

5. INSTALL SKID CONTROL ECU ASSY
 - (a) Install the skid control computer assy with the 3 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)
 - (b) Connect the connector to the skid control computer assy.
 - (c) Install the clamp of wire harness and the skid control buzzer to the skid control computer bracket.

6. INSTALL STEERING COLUMN ASSY (SEE PAGE 50-8)
7. INSTALL INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY
8. CONNECT BATTERY NEGATIVE TERMINAL
9. PERFORM INITIALIZATION (SEE PAGE 01-5)
10. SYSTEM INITIALIZATION (SEE PAGE 05-958)
11. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE 05-960)
12. CHECK AND CLEAR DTC (SEE PAGE 05-975)