

INSPECTION

1. INSPECT AIR FUEL RATIO SENSOR NO.2

(a) Measure the resistance according to the value(s) in the table below.

Text in Illustration

*a	Component without harness connected (Air Fuel Ratio Sensor)
----	--

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
1 (HA1A) - 2 (+B)	20°C (68°F)	1.6 to 3.2 Ω
1 (HA1A) - 4 (A1A-)	-	10 kΩ or higher

If the result is not as specified, replace the air fuel ratio sensor.

