

Last Modified: 01-14-2019	6.8:8.0.48	Doc ID: RM10000000RZTZ
Model Year Start: 2016	Model: Prius	Prod Date Range: [11/2015 - 12/2018]
Title: DOOR / HATCH: HOOD LOCK CONTROL CABLE ASSEMBLY: INSTALLATION; 2016 - 2018 MY Prius [11/2015 - 12/2018]		

INSTALLATION


PROCEDURE

1. INSTALL HOOD LOCK CONTROL CABLE ASSEMBLY

(a) Pass the hood lock control cable assembly into the engine compartment.

HINT:

- When changing the hood lock control cable assembly from type A to type B, the hood lock control lever sub-assembly must also be changed to type B
- When changing the hood lock control cable assembly from type B to type A, the hood lock control lever sub-assembly must also be changed to type A.

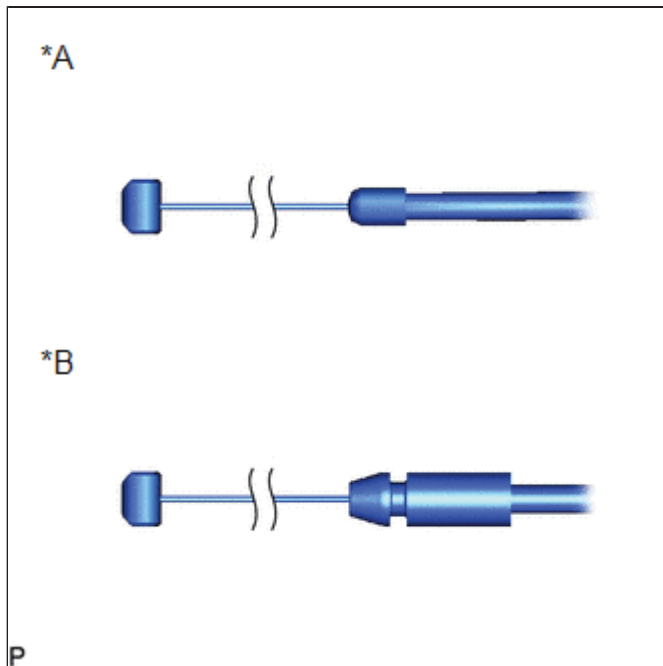

*A	Type A
*B	Type B

(b) Engage the grommet.

(c) Engage the 4 clamps to install the hood lock control cable assembly.

2. INSTALL HOOD LOCK CONTROL LEVER SUB-ASSEMBLY

(a) Connect the hood lock control cable assembly to install the hood lock control lever sub-assembly.

HINT:

- When changing the hood lock control lever sub-assembly from type A to type B, the hood lock control cable assembly must also be changed to type B.
- When changing the hood lock control lever sub-assembly from type B to type A, the hood lock control cable assembly must also be changed to type A.

3. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY

Click here [INFO](#) [INFO](#)

4. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

Click here [INFO](#) [INFO](#)

5. INSTALL HOOD LOCK ASSEMBLY

- (a) Apply MP grease to the sliding areas of the hood lock assembly.
- (b) Connect the hood lock control cable assembly to the hood lock assembly.
- (c) Install the hood lock assembly with the 2 bolts and hood lock bolt.

Torque:

8.0 N·m { 82 kgf·cm, 71 in·lbf }

HINT:

The hood lock nut cap is a non-reusable part. Be sure to install it after performing the Inspect Hood Sub-assembly and Adjust Hood Sub-assembly steps.

6. INSTALL RADIATOR SUPPORT OPENING COVER

Click here [INFO](#)

7. INSTALL FRONT FENDER LINER LH

HINT:

Use the same procedure as for the RH side.

Click here [INFO](#)

8. INSTALL FRONT WHEEL LH

Click here [INFO](#)

9. ADJUST HOOD SUB-ASSEMBLY

Click here [INFO](#)

