

|  | thousands of miles: |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |     |     |     |     |     |
|--|---------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|
|  | 5                   | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85  | 90  | 95  | 100 | 105 | 110 |
|  | months:             |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |     |     |     |     |     |
|  | 6                   | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 | 108 | 114 | 120 | 126 | 132 |
| Replace engine oil and oil filter          | x                   | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x   | x   | x   | x   | x   | x   |
| Rotate tires                               | x                   | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x   | x   | x   | x   | x   | x   |
| Visual inspect brake pads/discs            | x                   | x  | x  | x  | x  |    | x  | x  | x  | x  | x  |    | x  | x  | x  | x  | x   |     | x   | x   | x   | x   |
| Inspect brake pads/shoes [1]               |                     |    |    |    |    | x  |    |    |    |    |    | x  |    |    |    |    |     | x   |     |     |     |     |
| Replace engine & cabin air filters         |                     |    |    |    |    | x  |    |    |    |    |    | x  |    |    |    |    |     | x   |     |     |     |     |
| Inspect engine valve clearance             |                     |    |    |    |    |    |    |    |    |    |    | x  |    |    |    |    |     |     |     |     |     |     |
| Inspect transaxle fluid                    |                     |    |    |    |    | x  |    |    |    |    |    | x  |    |    |    |    |     | x   |     |     |     |     |
| Inspect engine/Inverter coolant            |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Replace engine/Inverter coolant [2]        |                     |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |     |     | x   |     |     |
| Inspect ball joints & dust covers          |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect brake lines & hoses                |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect drive shaft boots                  |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect pipes & mounts                     |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect radiator, condensor & intercooler  |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect steering gear box                  |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect steering linkage & boots           |                     |    | x  |    |    | x  |    |    | x  |    |    | x  |    |    | x  |    |     | x   |     |     | x   |     |
| Inspect fuel lines, tank band & vent hoses |                     |    |    |    |    | x  |    |    |    |    |    | x  |    |    |    |    |     | x   |     |     |     |     |
| Inspect fuel tank cap gasket               |                     |    |    |    |    | x  |    |    |    |    |    | x  |    |    |    |    |     | x   |     |     |     |     |
| Replace spark plugs                        |                     |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |     |     |     |     |     |

[1] Complete brake inspection, including check of disc thickness and runout.

[2] engine/inverter coolant change at 100,000 miles or 120 months, subsequently every 50,000 miles or 60 months

