

Cylinder Head

Removal

CAUTION:

- To avoid damaging the cylinder head, wait until the coolant temperature drops below 38 °C (100 °F) before removing it.
- In handling a metal gasket, care should be taken not to fold it or damage the contact surface of the gasket.

NOTE: Use new O-rings and gaskets when reassembling.

