


SPIRAL CABLE COMPONENTS

RS

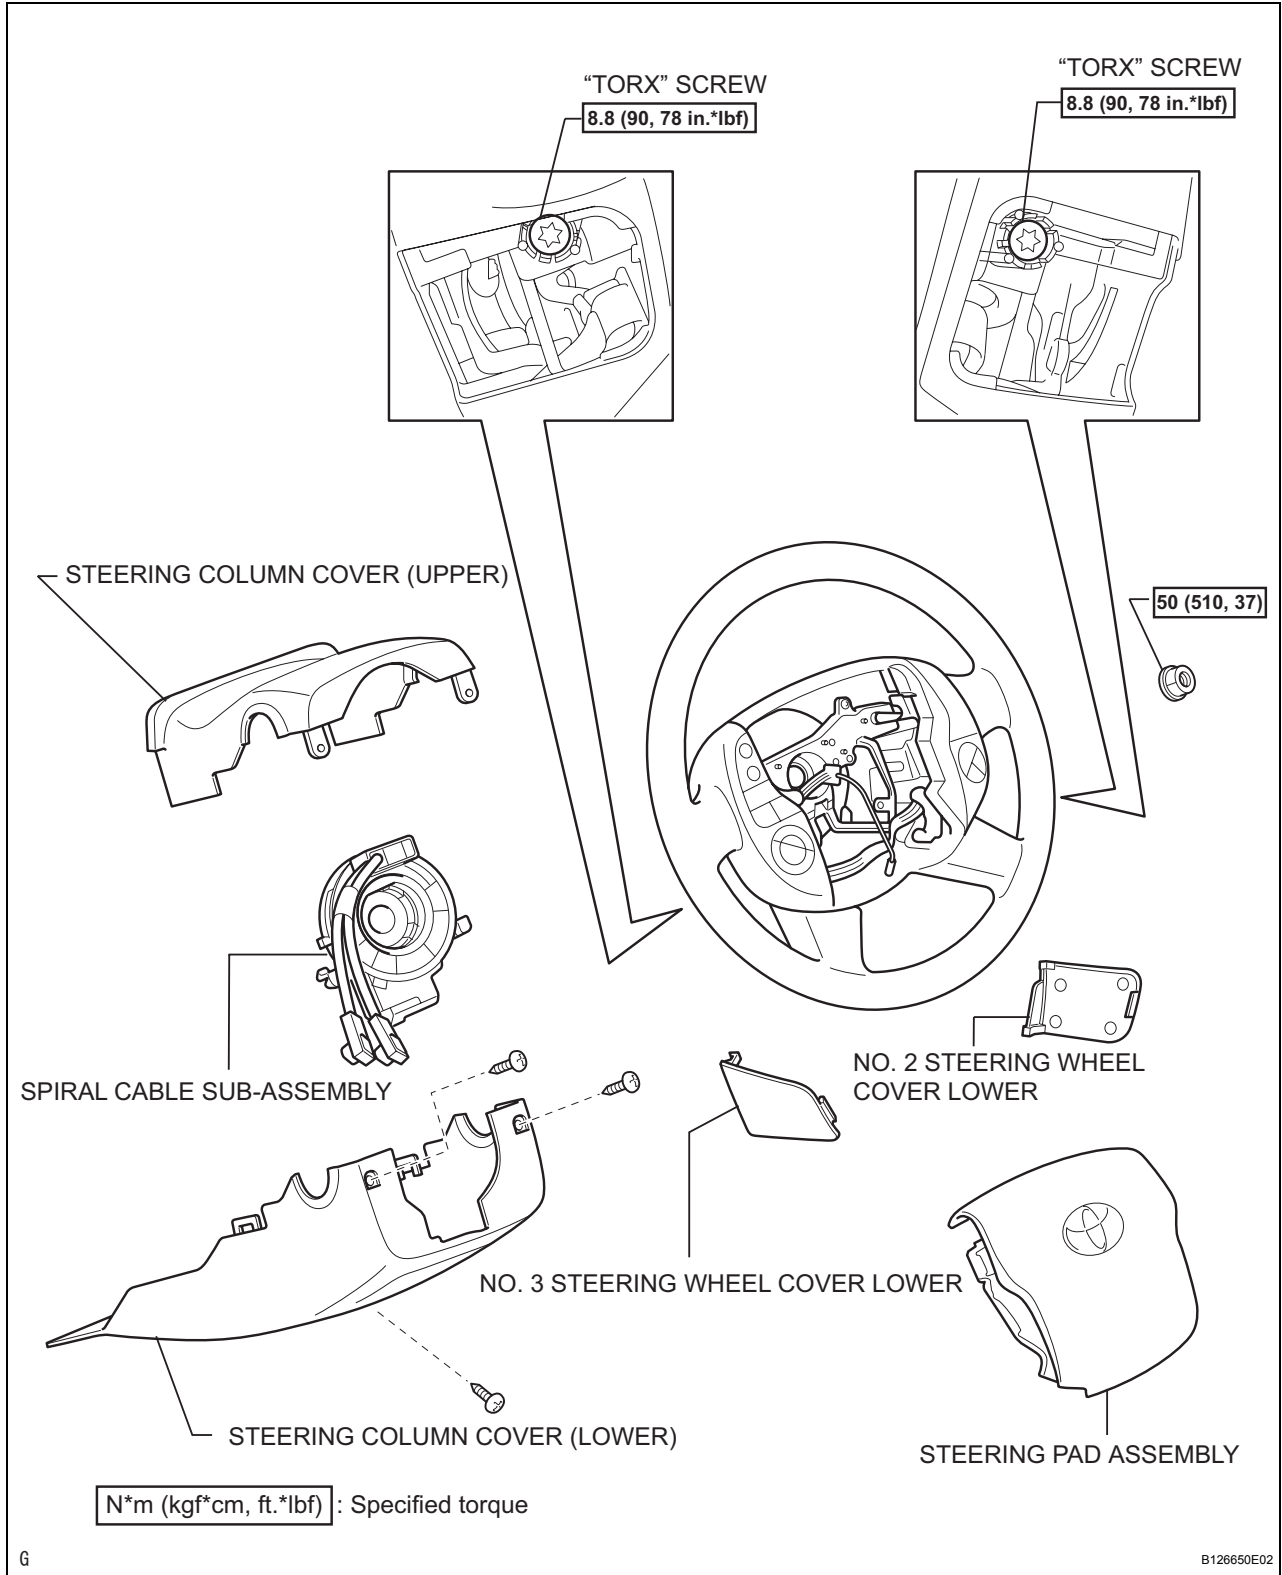

RS

REMOVAL

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
3. REMOVE NO. 2 STEERING WHEEL COVER LOWER
4. REMOVE NO. 3 STEERING WHEEL COVER LOWER
5. REMOVE STEERING PAD ASSEMBLY (See page [RS-268](#))
6. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-8](#))
7. REMOVE STEERING COLUMN COVER (See page [SR-8](#))
8. REMOVE SPIRAL CABLE SUB-ASSEMBLY

- (a) Disconnect the airbag connector.

NOTICE:

When handling the airbag connector, do not damage the airbag wire harness.

- (b) Detach the 3 claws and remove the spiral cable.

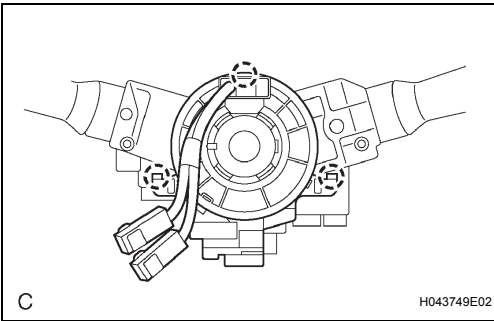

INSPECTION

1. INSPECT SPIRAL CABLE SUB-ASSEMBLY

- (a) Check that there are no scratches or cracks on its connector, and that the cable does not have cracks, dents or chipping.

RS

RS

INSTALLATION

CAUTION:

Be sure to read the precautionary notices concerning the SRS airbag system before servicing it (see page [RS-1](#)).

1. INSTALL SPIRAL CABLE SUB-ASSEMBLY

- (a) Check that the front wheels are facing straight ahead.
- (b) Set the turn signal switch to the neutral position.

NOTICE:

Make sure that the turn signal switch is in the neutral position, as the pin of the turn signal switch may be snapped.

- (c) Install the spiral cable.

NOTICE:

When replacing the spiral cable with a new one, remove the lock pin before installing the steering wheel.

- (d) Connect the connector to the spiral cable.

NOTICE:

When handling the airbag connector, do not damage the airbag wire harness.



2. INSTALL STEERING COLUMN COVER (See page [SR-14](#))

3. POSITION SPIRAL CABLE

- (a) Slowly rotate the spiral cable counterclockwise by hand until it feels firm.

NOTICE:

Do not use the airbag wire harness to turn the spiral cable.

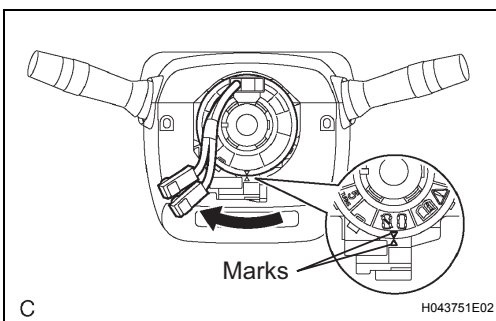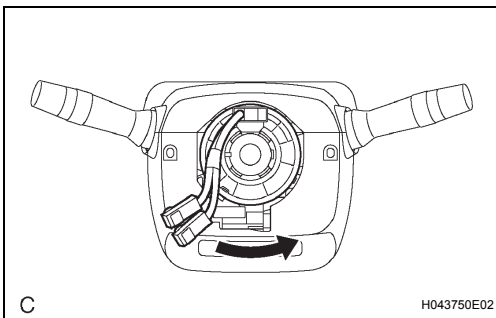

- (b) Rotate the spiral cable clockwise approximately 2.5 turns to align the marks.

NOTICE:

Do not use the airbag wire harness to turn the spiral cable.

HINT:

The spiral cable will rotate approximately 2.5 turns to the left and right from the center.

4. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-15](#))

5. INSTALL STEERING PAD ASSEMBLY (See page [RS-269](#))

6. INSTALL NO. 2 STEERING WHEEL COVER LOWER

7. INSTALL NO. 3 STEERING WHEEL COVER LOWER

8. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

-
9. **INSPECT STEERING PAD ASSEMBLY** (See page [RS-267](#))
 10. **PERFORM INITIALIZATION**
NOTICE:
Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.
 - (a) Perform initialization (see page [IN-32](#)).
 11. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-31](#)).
 12. **INSPECT STEERING WHEEL POSITION**

RS