
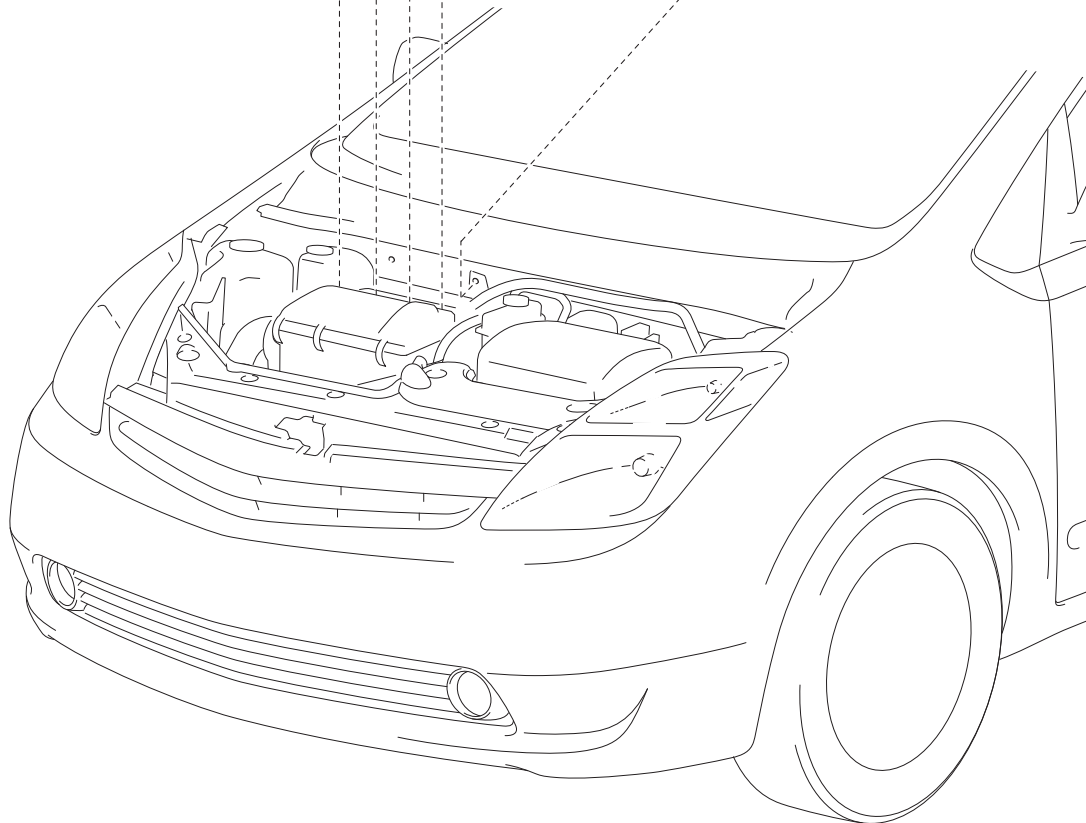





IGNITION COIL COMPONENTS

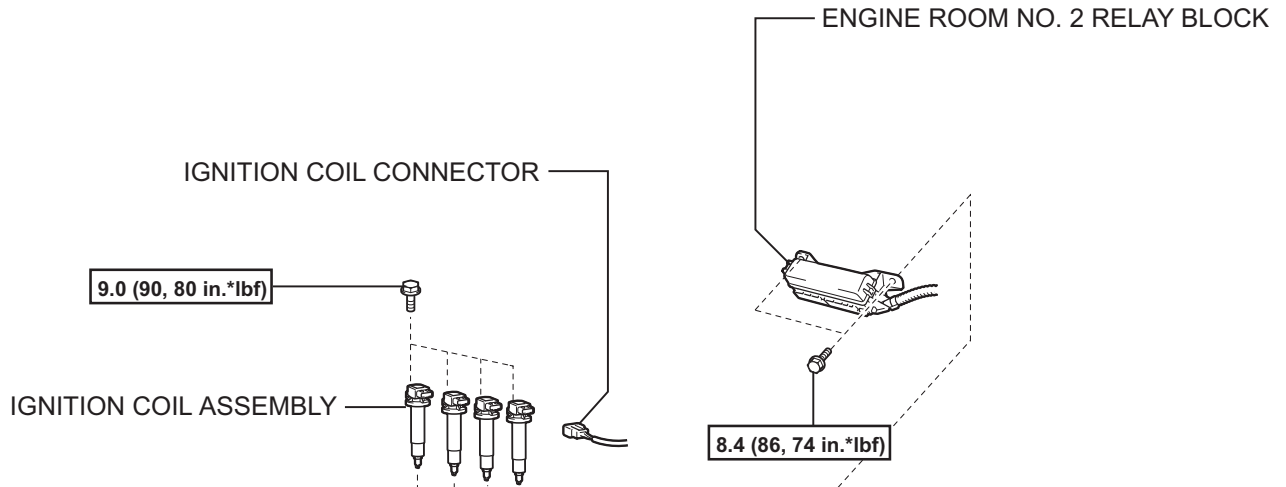

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL


1. REMOVE REAR NO. 2 FLOOR BOARD (See page CH-4)
2. REMOVE REAR DECK FLOOR BOX (See page CH-4)
3. REMOVE REAR NO. 3 FLOOR BOARD (See page CH-4)
4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
5. DISCONNECT ENGINE ROOM NO. 2 RELAY BLOCK
 (a) Remove the 2 bolts and disconnect the relay block.
6. REMOVE IGNITION COIL ASSEMBLY
 (a) Disconnect the 4 ignition coil connectors.

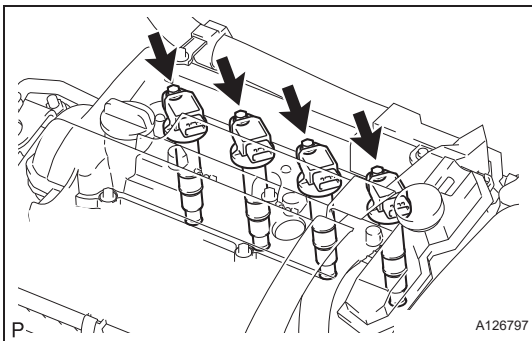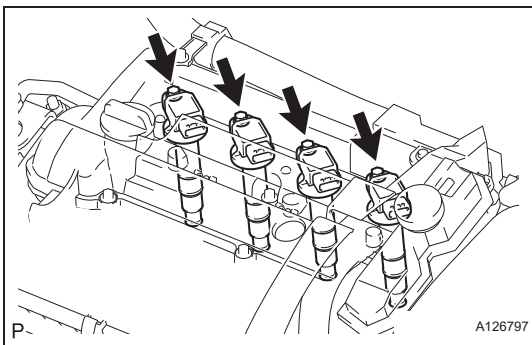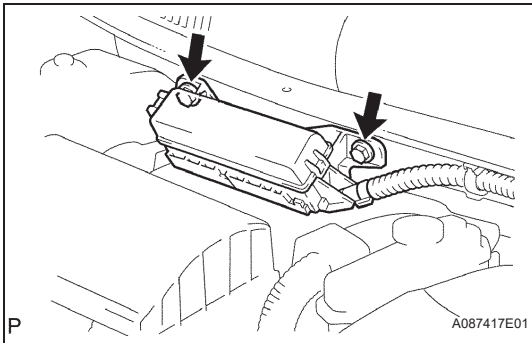

- (b) Remove the 4 bolts and pull out the 4 ignition coils.

INSTALLATION

1. INSTALL IGNITION COIL ASSEMBLY
 (a) Install the 4 ignition coils with the 4 bolts.
Torque: 9.0 N*m (90 kgf*cm, 80 in.*lbf)
 (b) Connect the 4 ignition coil connectors.

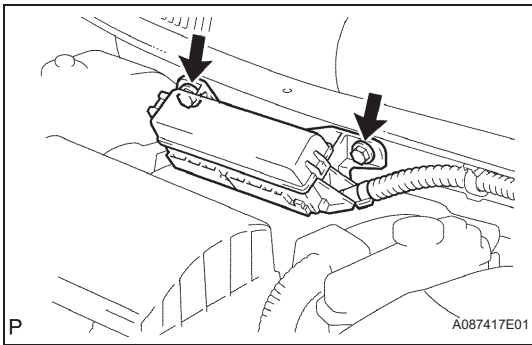

2. **INSTALL ENGINE ROOM NO. 2 RELAY BLOCK**
 - (a) Install the relay block with the 2 bolts.
Torque: 8.4 N*m (86 kgf*cm, 74 ft.*lbf)
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
4. **INSTALL REAR NO. 3 FLOOR BOARD** (See page [CH-8](#))
5. **INSTALL REAR DECK FLOOR BOX** (See page [CH-8](#))
6. **INSTALL REAR NO. 2 FLOOR BOARD** (See page [CH-8](#))
7. **PERFORM INITIALIZATION**
 - (a) Perform initialization (see page [IN-32](#)).
NOTICE:
Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.