miles:	5,000	10,000	15,000	20,000	25,000	30,000	35,000	40,000	45,000	50,000	55,000	60,000	65,000	70,000	75,000	80,000	85,000	90,000	95,000	100,000	105,000	110,000	115,000	120,000
months:	6 mo	12 mo	18 mo	24 mo	30 mo	36 mo	42 mo	48 mo	54 mo	60 mo	66 mo	72 mo	78 mo	84 mo	90 mo	96 mo	102 mo	108 mo	114 mo	120 mo	126 mo	132 mo	138 mo	144 mo
Check installation of driver's floor mat	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check wiper blades, all fluid levels	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Rotate tires	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Replace engine oil and oil filter		X		X		X		X		X		X		X		X		X		X		X		X
Inspect cabin air filter			X						X						X						X			
Replace engine and cabin air filters						X						X						X						X
Visually inspect brakes	X	X	X	X	X		X	X	X	X	X		X	X	X	X	X		X	X	X	X	X	
Inspect brakes (full)						X						X						X						X
Inspect transaxle for leakage						X						X						X						X
Ball joints and dust covers			X			X			X			X			X			X			X			X
Inspect fuel/vapor lines, fuel tank/cap						X						X						X						X
Inspection drive shaft boots			X			X			X			X			X			X			X			X
Inspection Engine/Inverter coolant			X			X			X			X			X			X			X			X
Replace Engine/Inverter Coolant (1)																				X				
Exhaust pipes and mountings			X			X			X			X			X			X			X			X
Inspect radiator and (AC) condensor			X			X			X			X			X			X			X			X
Inspect steering gear, linkage and boots			X			X			X			X			X			X			X			X
Replace spark plugs																								X
(1) Engine coolant only. Subsequently replace																								
Engine and Inverter coolant at 150,000 miles																								
or 180 months (15 years), whichever comes																								
first, and thereafter: both circuits, every 50,000																								
miles or 60 months (5 years).																								