

Pin Number	05 (problem car)	08 (good car)
1	5v	0v
2	0v	0v
3	0v	0v
4	.76v	0v
5	Blank	Blank
6	Jumps from 2.5v-3.5v	.05v
7	0v	0v
8	13.5v	0v
9	0v	0v
10	0v	0v
11	0v	0v
12	0v	0v
13	0v	16.7v
14	0v	0v
15	0v	0v
16	Blank	Blank
17	Blank	Blank
18	0v	0v
19	0v	0v
20	0v	0v
21	0v	13.5v
22	13.5v	13.5v
23	0v	0v
24	0v	Jumps from 1.5v-3.5v
25	0v	Jumps from 2.5v-2.5v
26	13.5v	0v
27	Blank	Blank
28	0v	0v
29	0v	0v
30	0v	0v
31	0v	0v
32	0v	0v