

air intake vents and fil-  
e following procedures to  
ust from accumulating in  
to prevent them from

s are attached to the back  
ne air intake vent grilles.

