

## Vehicle information

Toyota 2008 Prius

VIN: [REDACTED]

Diagnostics time: 2024/06/15 18:01

Path: Automatic selection &gt; USA &gt; 2008 &gt; w/ Smart Key &gt; Diagnosis &gt; Auto scan &gt; Trouble codes &gt;

## Freeze frame data

Init drv cntrl completed	NG	
Main relay for motor drive	On	
Battery voltage status	OFF	
Cmplte of detct lck pos	NG	
U phase crnt-carry status	On	
Ig(+b) phase vol status	OFF	
Cmplte of detct unlck pos	NG	
V phase crnt-carry status	OFF	
U phase voltage status	OFF	
Master caution display	Nondisp	
Cmplte of learn lck pos	NG	
W phase crnt-carry status	On	
V phase voltage status	OFF	
Cmplte of learn unlck pos	NG	
Main relay	Normal	
W phase voltage status	On	
P/not p move shft range	Unset	
Sig of electric key cond	On	
Shift pos display (p)	On	
Vehicle condition	Move	
Shift pos display (not p)	OFF	
P sply off prepare rqst sig	OFF	
Acc condition signal	OFF	
Battery voltage value	0.00	V
Ig(+b) voltage value	0.00	V
U phase voltage value	0.00	V
V phase voltage value	0.00	V
W phase voltage value	0.00	V
Detail information1	0	
Detail information2	0	

Detail information3	20
Psw indicator mode	OFF
#Of trip cuntr after learn	0
Fail rank	0
Type of ecu	0