

## Vehicle information

Toyota 2008 Prius

VIN: XXXXXXXXXX

Diagnostics time: 2024/06/15 17:57

Path: Automatic selection &gt; USA &gt; 2008 &gt; w/ Smart Key &gt; Diagnosis &gt; Auto scan &gt; Live data &gt;

## Live data

NO.	Name	Value	Unit
1	#Of trip cuntr after learn	33	
2	Acc condition signal	On	
3	Battery voltage status	On	
4	Battery voltage value	13.82	V
5	Cmplte of detct lck pos	OK	
6	Cmplte of detct unlck pos	NG	
7	Cmplte of learn lck pos	OK	
8	Cmplte of learn unlck pos	OK	
9	Ig(+b) phase vol status	On	
10	Ig(+b) voltage value	13.98	V
11	Init drv cntrl completed	OK	
12	Main relay	Normal	
13	Main relay for motor drive	OFF	
14	Master caution display	Disp	
15	Number of diagnosis code	2	pcs
16	P sply off prepare rqst sig	OFF	
17	P/not p move shft range	Set	
18	Psw indicator mode	Slow	
19	Shift pos display (not p)	On	
20	Shift pos display (p)	OFF	
21	Sig of electric key cond	On	
22	Type of ecu	2	
23	U phase crnt-carry status	OFF	
24	U phase voltage status	OFF	
25	U phase voltage value	0.00	V
26	V phase crnt-carry status	OFF	
27	V phase voltage status	OFF	
28	V phase voltage value	0.00	V
29	Vehicle condition	Move	

---

30	W phase crnt-carry status	OFF	
31	W phase voltage status	OFF	
32	W phase voltage value	0.00	V

---