

### Customizable features

- ① Vehicles with multi-information display: Settings that can be changed using the multi-information display
- ② Vehicles with Entune Audio or Entune Premium Audio with Navigation: Settings that can be changed using the Entune Audio or Entune Premium Audio with Navigation
- ③ Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, – =Not available

#### ■ Door lock (→P. 120, 539)

Function	Default setting	Customized setting	①	②	③
Automatic door locking	Shift position linked	Speed linked	–	O	O
		Off	–	O	O
Automatic door unlocking	Shift position linked	Driver's door linked	–	O	O
		Off	–	O	O

**■ Smart key system and wireless remote control (→P. 130, 116)**

Function	Default setting	Customized setting	①	②	③
Operation signal (buzzer)	5	Off	-	0	0
		1 to 7			
Operation signal (emergency flashers)	On	Off	-	0	0
Open door reminder buzzer (when locking the vehicle)	On	Off	-	-	0
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked	60 seconds	Off	-	0	0
		30 seconds			
		120 seconds			

**■ Smart key system (→P. 130)**

Function	Default setting	Customized setting	①	②	③
Smart door unlocking	Driver's door	All the doors	-	0	0
Number of consecutive door lock operations	2 times	As many as desired	-	-	0

### ■ Wireless remote control (→P. 116)

Function	Default setting	Customized setting	①	②	③
Wireless remote control	On	Off	-	-	O
Unlocking operation	Driver's door unlocked in first step, all doors unlocked in second step	All doors unlocked in first step	-	O	O
Panic function	On	Off	-	-	O

### ■ Automatic light control system (→P. 191)

Function	Default setting	Customized setting	①	②	③
Time elapsed before the headlights turn off	30 seconds	Off	-	O	O
		60 seconds			
		90 seconds			
Light sensor sensitivity	Level 0	Level -2 to 2	-	O	O
Daytime running lights*1	On	Off	-	O*2	O

\*1: This function cannot be customized for vehicles sold in Canada.

\*2: Entune Premium Audio with Navigation only.

■ **Illumination (→P. 375)**

Function	Default setting	Customized setting	①	②	③
Time elapsed before the interior lights turn off	15 seconds	Off			
		7.5 seconds	-	O	O
		30 seconds			
Operation after the power switch is turned off	On	Off	-	-	O
Operation when the doors are unlocked with the smart key system or the wireless remote control function or the mechanical key	On	Off	-	-	O
Operation when you approach the vehicle with the electronic key on your person	On	Off	-	-	O
Footwell lighting*	On	Off	-	-	O
Footwell lighting control*	On	Off	-	-	O

\*: if equipped

**■ Instrument cluster (→P. 91)**

Function	Default setting	Customized setting	①	②	③
Sensor sensitivity for darkening the brightness of the instrument cluster depending on the outside brightness	Standard	-2 to 2	-	-	0
Sensor sensitivity for returning the brightness of the instrument cluster to the original level depending on the outside brightness	Standard	-2 to 2	-	-	0
Language	English	French	0	-	0
		Spanish			
Units (except for Canada)	miles (MPG USA)	km (km/L)	0	-	0
		km (L/100km)			
		miles (MPG Imperial)			
Pop-up display	On	Off	0	-	0

### ■ Automatic air conditioning system (→P. 366)

Function	Default setting	Customized setting	①	②	③
A/C auto switching operation	Off	On	-	○	○
Heating/cooling operation minimized in Eco drive mode	On	Off	-	-	○
Switching between outside air and recirculated air mode linked to A/C auto switch operation	On	Off	-	-	○

### ■ Panoramic roof shades\* (→P. 391)

Function	Default setting	Customized setting	①	②	③
Door lock linked automatic closing function	On	Off	-	-	○

\*: If equipped

### ■ Seat belt reminder (→P. 496)

Function	Default setting	Customized setting	①	②	③
Vehicle speed linked seat belt reminder buzzer	On	Off	-	-	○

### ■ Reverse buzzer (→P. 185)

Function	Default setting	Customized setting	①	②	③
Signal (buzzer) when the shift position is in R	Intermittent	Single	-	-	○