

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	AA	AB	AC	AD	AE	AF	AG	AH	AI	AJ	AK	AL	AM	AN	AO	AP	AQ	AR	AS	AT	AU	AV	AW										
1	thousands of miles:	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105	110	115	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240										
2	months:	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	150	156	162	168	174	180	186	192	198	204	210	216	222	228	234	240	246	252	258	264	270	276	282	288										
3	Check driver's floor mat	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x							
4	Inspect and adjust all fluid levels	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x						
5	Rotate tires	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x						
6	Visual inspect brake pads/discs	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x							
7	Inspect brake pads/discs [3]					x						x						x						x						x																													
8	Replace engine oil and oil filter		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x		x						
9	Replace engine air filter [4]					x						x							x					x																																			
10	Clean cabin air filter (solar)		x		x		x				x		x		x				x			x		x			x		x		x																												
11	Replace cabin air filter (solar)									x							x								x																																		
12	Clean cabin air filter (non-solar)			x						x																		x																															
13	Replace cabin air filter (non-solar)					x						x																																															
14	Inspect transaxle fluid					x						x																																															
15	Inspect engine coolant			x		x			x		x				x																																												
16	Inspect inverter coolant			x		x			x		x				x																																												
17	Replace engine coolant [5]																																																										
18	Replace inverter coolant [5]																																																										
19	Inspect ball joints & dust covers			x		x			x		x				x																																												
20	Inspect drive shaft boots			x		x			x		x				x																																												
21	Inspect exhaust system			x		x			x		x				x																																												
22	Inspect radiator & condenser			x		x			x		x				x																																												
23	Inspect steering gear box			x		x			x		x				x																																												
24	Inspect steering linkage & boots			x		x			x		x				x																																												
25	Inspect fuel lines, tank & vent					x									x																																												
26	Inspect fuel tank cap gasket					x									x																																												
27	Replace spark plugs																																																										

28
29 [3]Complete brake inspection, including check of disc thickness and runout.

30 [4]Inspect every 5000 miles

31 [5]Replace every 50,000 miles thereafter

32